Example of working with FieldMate How to modify the range setting (Upper range value) of device with FieldMate

CONNECTING TO A DEVICE

Device is connected and communicated with FieldMate.

CONFIRMATION AND BACKUP

The device information is confirmed and backup.

CONFIGURATION

The range setting (Upper range value) of device is modified.

CONFIRMATION

Modified data and device status are confirmed

REPORTING

FieldMate supports to generate the report.



Go to next page






Device is connected and communicated with FieldMate.




SUMMARY


Upper range setting is changed to "25kPa" from "20kPa".

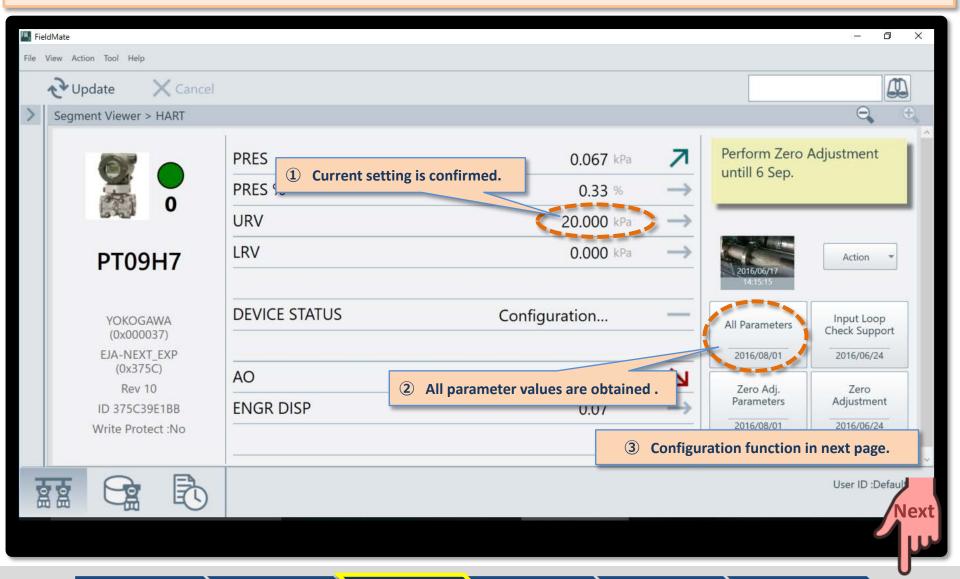

Configuration function is opened. Target parameter is changed and then download to device.

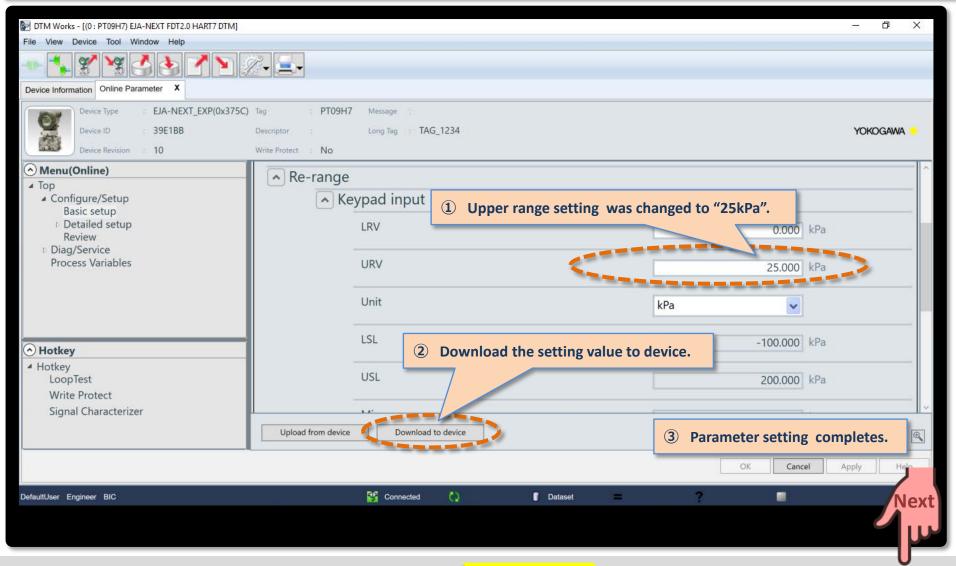

Confirmation the target parameter changed.

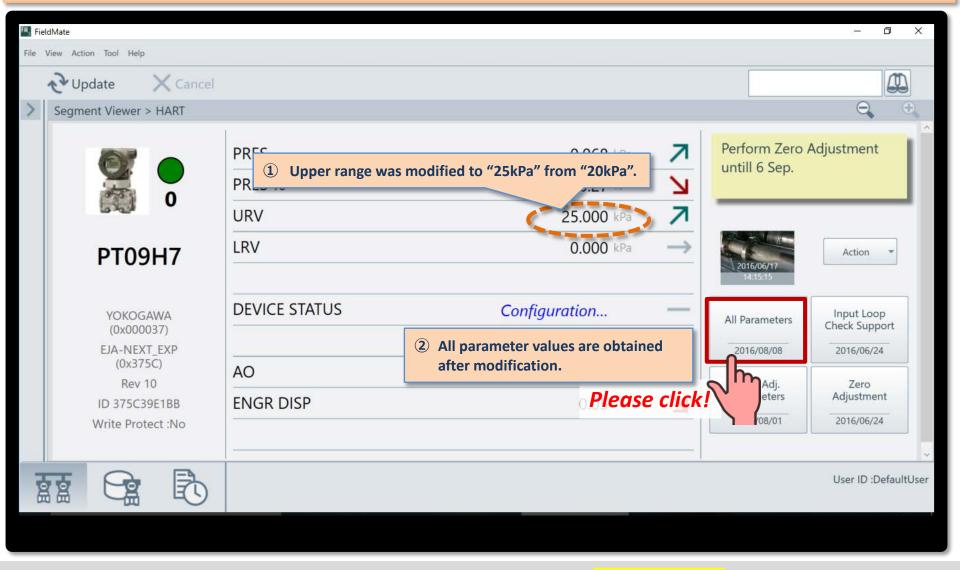




SUMMARY




All parameter values are obtained after modification.

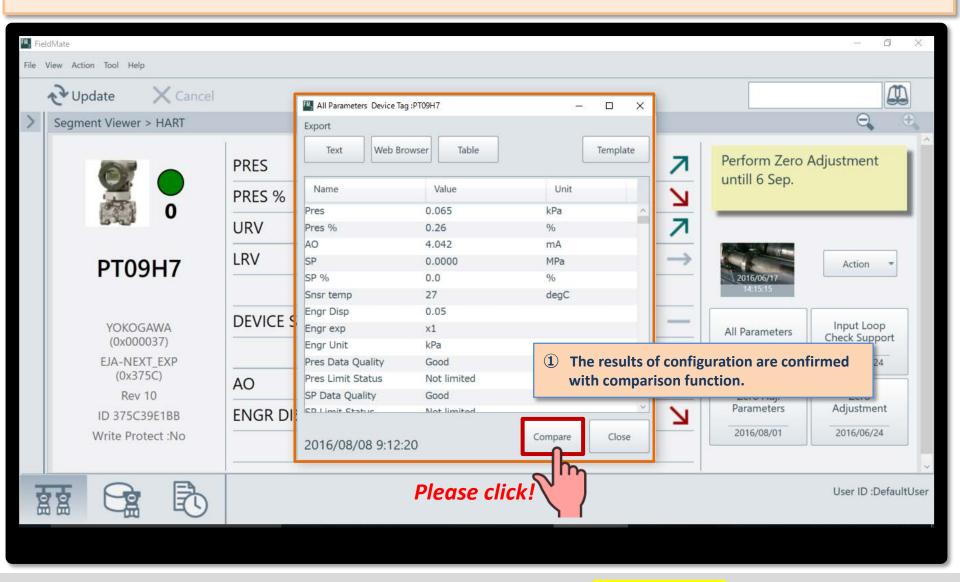

SUMMARY


The results of configuration are confirmed by comparing parameters.

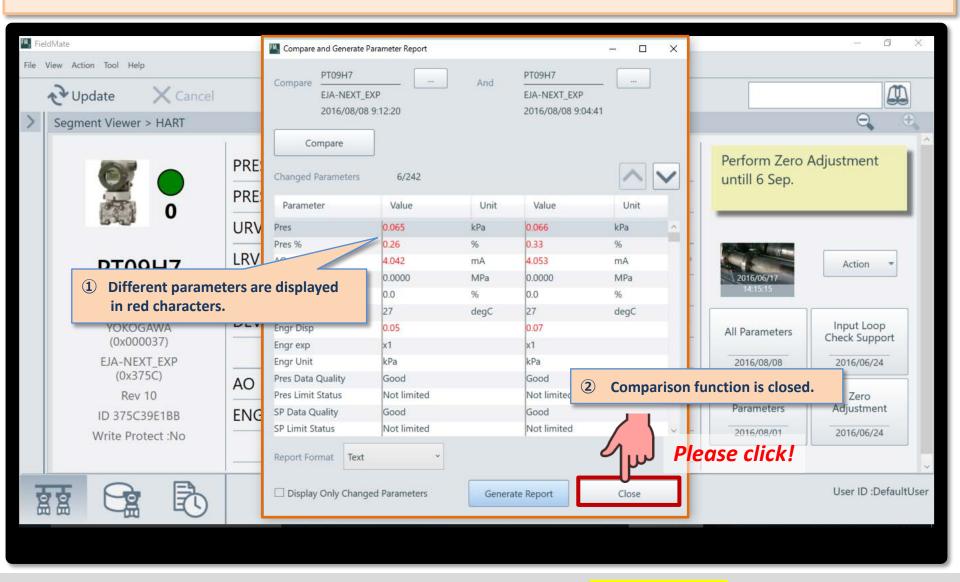






Site work is finished

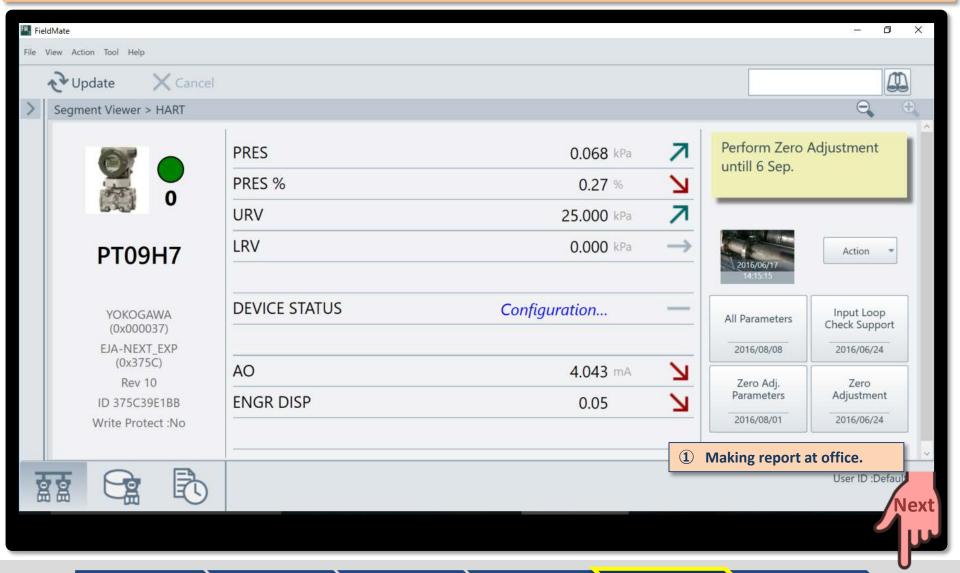

You can make a report easily by obtained device parameters.

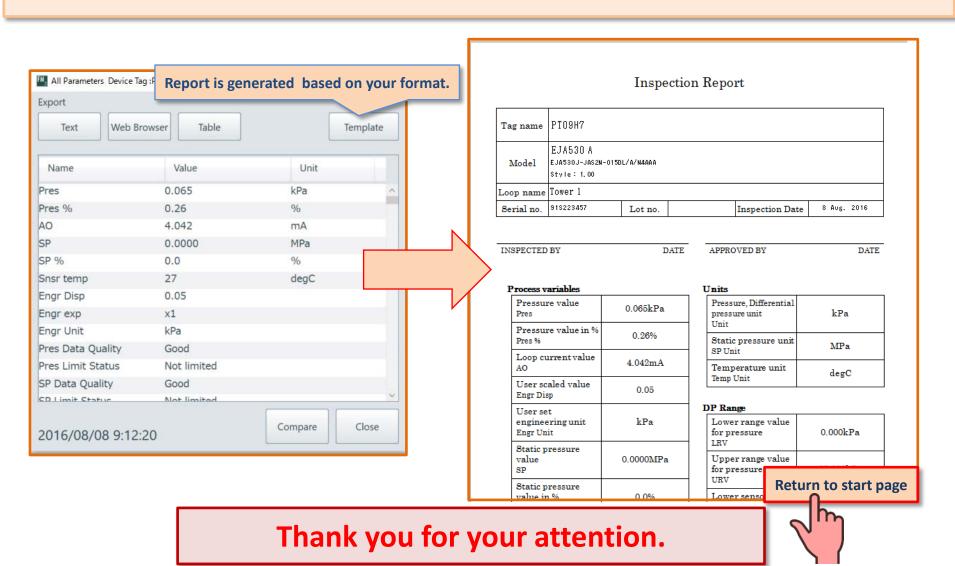

CONFIRMATION