About making report with FieldMate


FieldMate obtains and stores device parameters.

FieldMate can make a report by stored parameters.






FieldMate connects and communicates with target device.

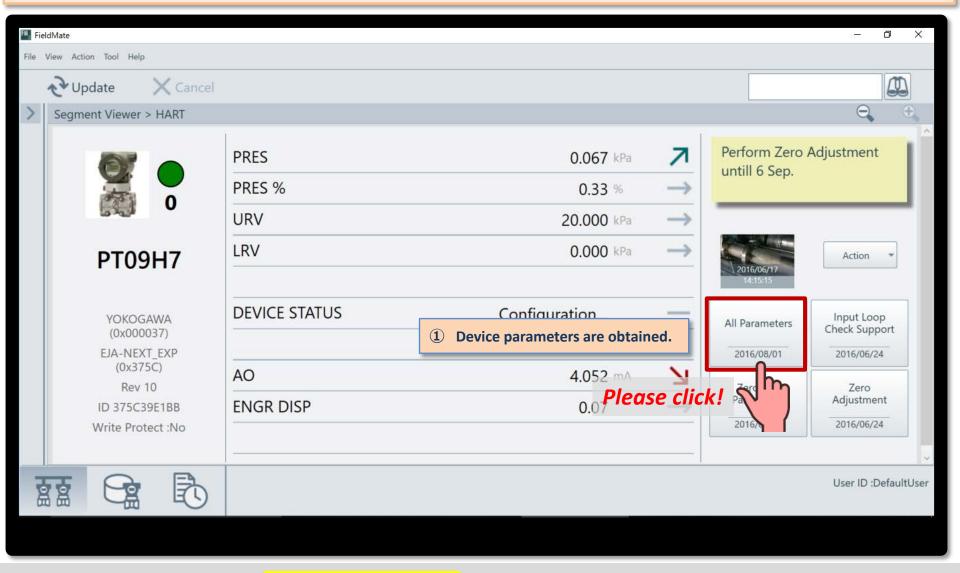






Obtained parameters are displayed. Report is made by using these parameters.

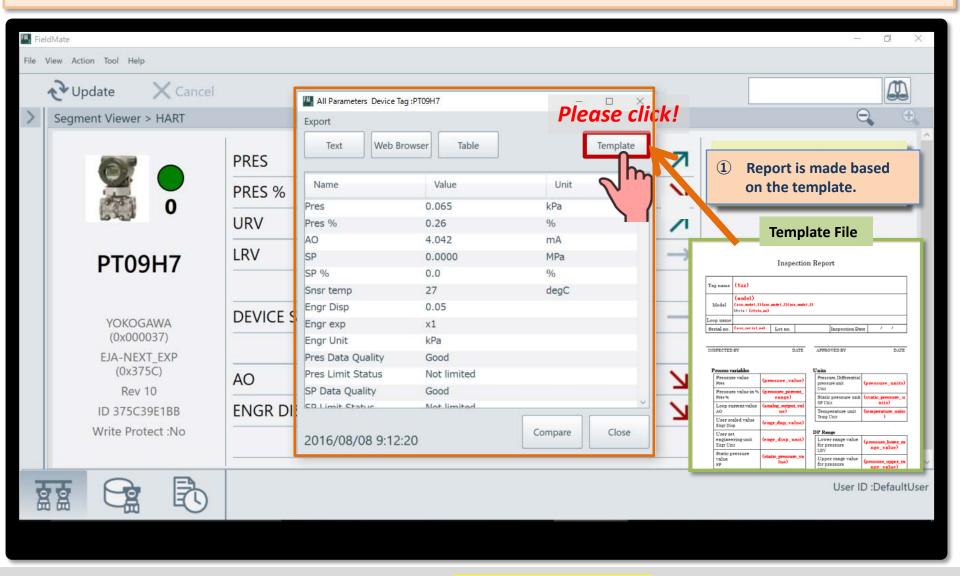


Example of making report with FieldMate

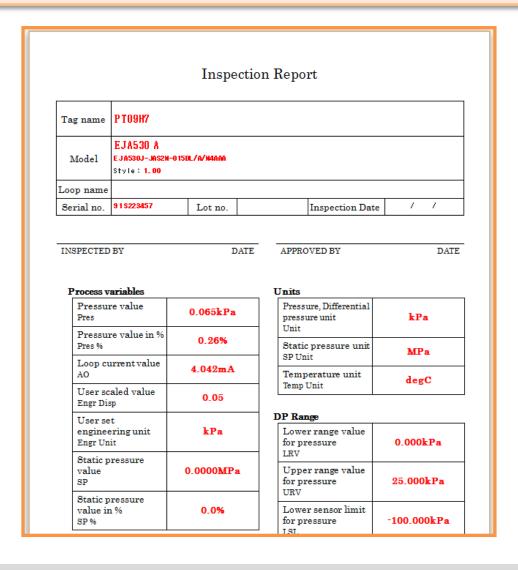




CREATING REPORT

Obtained parameters display in a report.

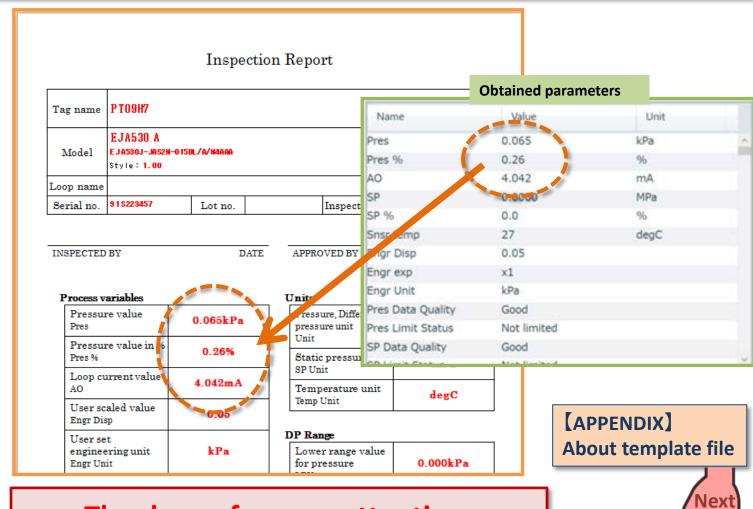

How to make a template file for report. Getting ID for template from obtained parameters.

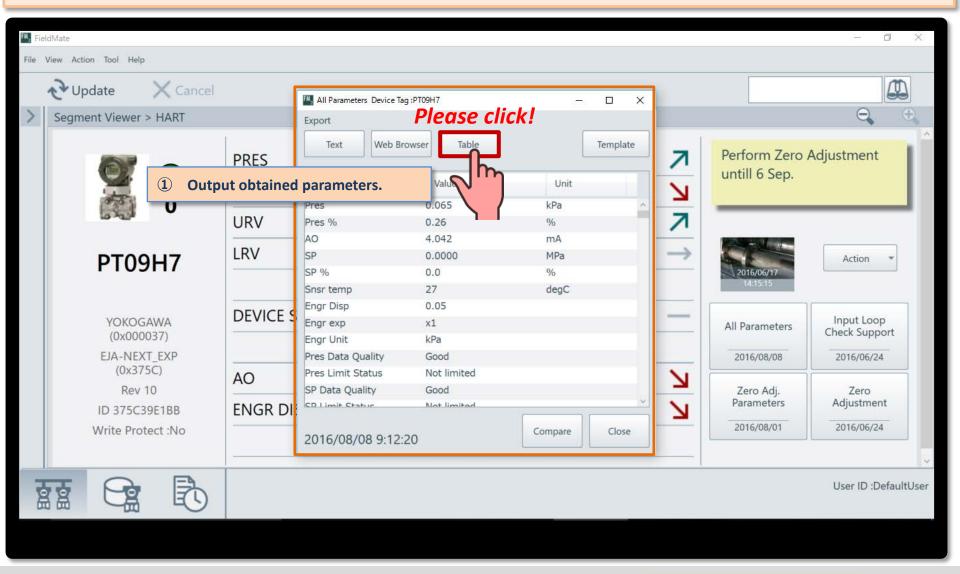


The following table is made from obtained parameters. ID is shown inside dotted frame of data that is displayed in the table.

	A	В	С	D	Е
1	Parameter		2016/8/8 9:12		① ID for template
2					1D for template
3	Name	Symbol	Value	Unit	ID
4	Pres	pressure_value	0.065	kPa	(pressure_value)
5	Pres %	pressure_percent_range	0.26	%	(pressure_percent_range)
6	AO	analog_output_value	4.042	mΑ	(analog_output_value)
7	SP	static_pressure_value	0.0000	MPa	(static_pressure_value)
8	SP%	static_pres_percent	0.0	%	(static_pres_percent)
9	Snsr temp	snsr_temp_value	27	degC	(snsr_temp_value)
10	Engr Disp	engr_disp_value	0.05		(engr_disp_value)
11	Engr exp	engr_exp	x1		(engr_exp)
12	Engr Unit	engr_disp_unit	kPa		(engr_disp_unit)
13	Pres Data Quality	pressure_data_quality	Good		(pressure_data_quality)
14	Pres Limit Status	pressure_limit_status	Not limited		(pressure_limit_status)
	SP Data Quality	static_pressure_data_quality	Good		(static_pressure_data_quality)
16	SP Limit Status	static_pressure_limit_status	Not limited		(static_pressure_limit_status) •
17	Temp Data Quality	temperature_data_quality	Good		(temperature_data_quality)
18	Temp Limit Status	temperature_limit_status	Not limited		(temperature_limit_status)
19	Percent Range Data Quality	percent_range_data_quality	Good		(percent_range_data_quality)
20	Percent Range Limit Status	percent_range_limit_status	Not limited		(percent_range_limit_status)
21	Loop Current Data Quality	loop current data quality	Good		(loop current data quality)



IDs are entered in the template of report. Each IDs are replaced with the parameter values.

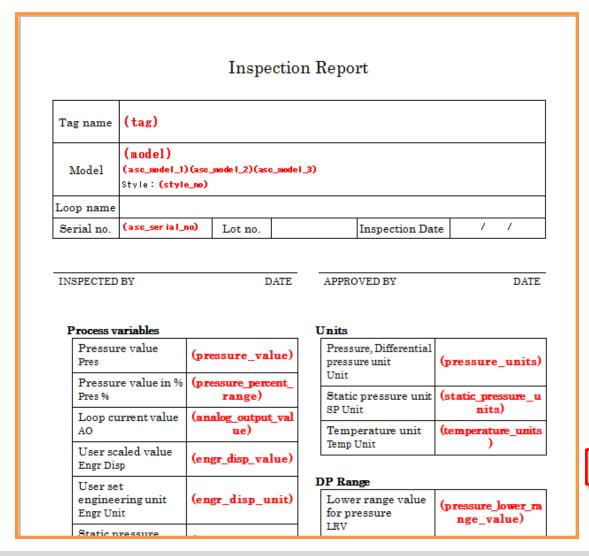

CREATING REPORT

