The Calibration work with FieldMate

The calibration and adjustment of device are the important works for plant operation.

The new function of FieldMate provides the efficient calibration work by combination with FieldMate "for adjustment and management of field devices" and CA700 pressure calibrator "for calibration of pressure transmitter".





For Adjustment and Management







For Calibration of pressure transmitter





of field devices

Connecting with FieldMate, CA700, and target device.




Calibration data

Device information



Measurement leads

Air tube

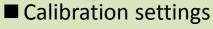

The following items are provided by combination with FieldMate and CA700.

■ Monitoring measured data

■ Auto saving calibration data

■ Management calibration data


■ Generation calibration report

Different / Pressure transmitter







Calibration setting window

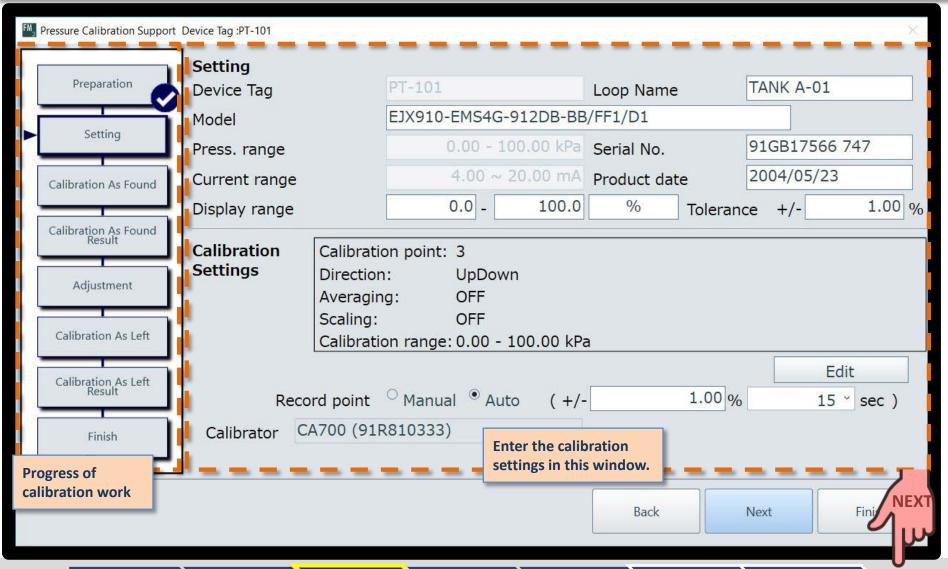

Calibration work window

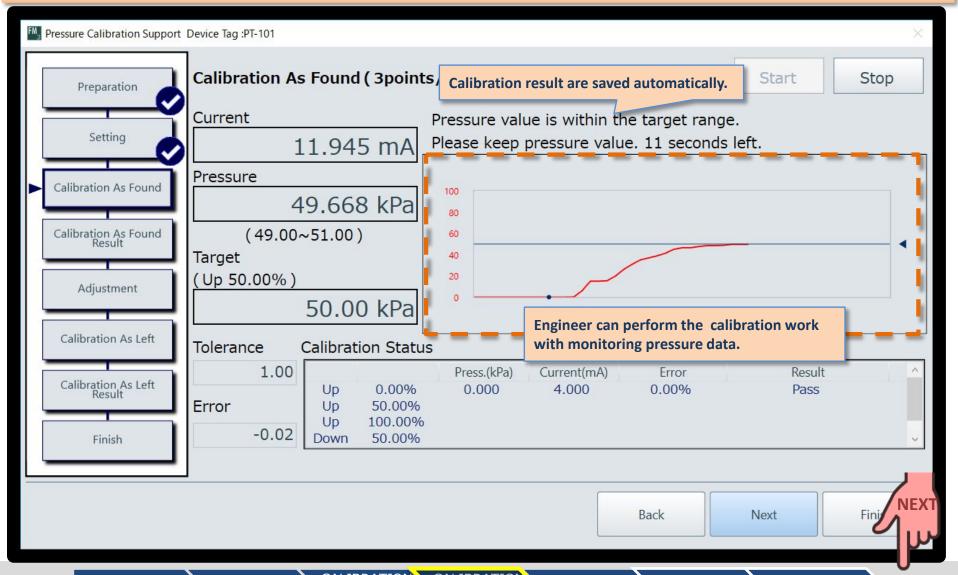


Calibration result window

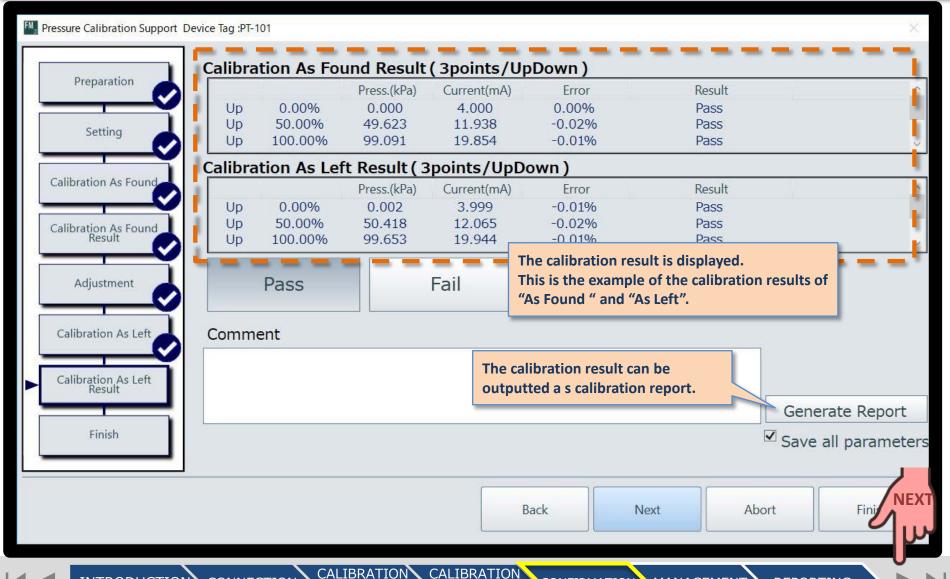


WORK

Management window

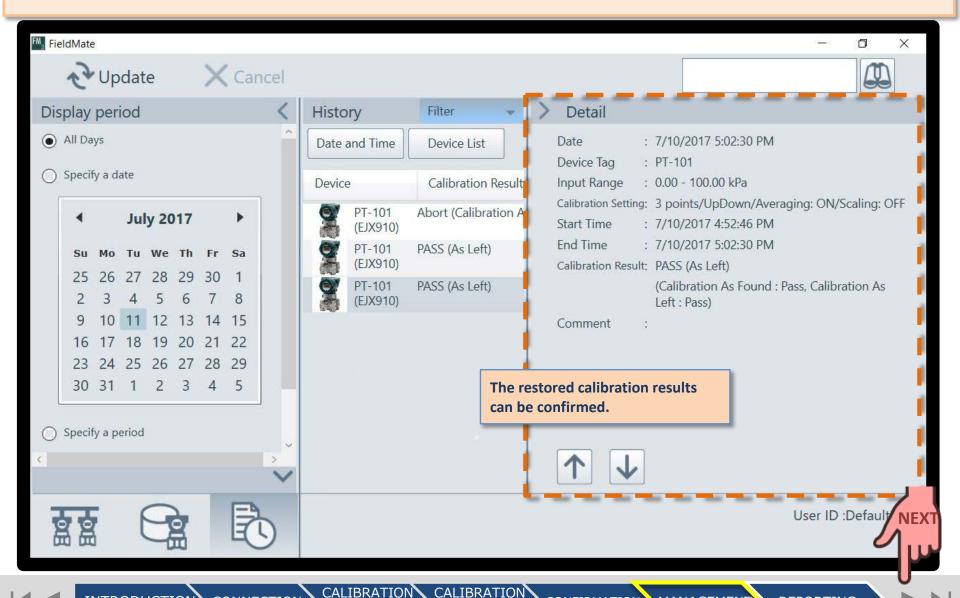


WORK

Reporting Calibration result

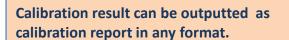

Calibration Report

Loop name

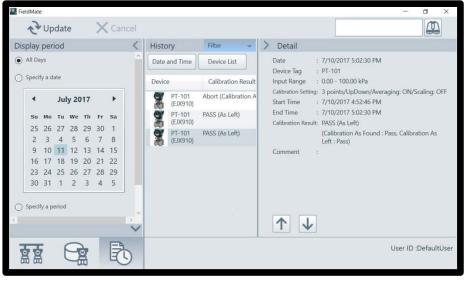

J1:	spray	range	0.0	100.0	78	Seriai number		SIGDIII	00 /4/		
input range		0.00	- 100.00	kPa	Product date		e 2004/05/23		Performed By		
Output range		4.00	- 20.00	mA	mA Tolerance 1		1 %	of Span	Reviewed By:		
Standard			Measured value								
	%	Display	Input	Output	Input	Output	Error	Display	Error	Judge	
			0.00	4.00	0.000	3.999	-0.01%			PASS	
			50.00	12.00	50.082	12.012	-0.01%			PASS	

PT-101

EJX910-EMS4G-912DB-BB/FF1/D1

Model name

Remarks

%	Display	Input	Output	Input	Output	Error	Display	Error	Judge	
		0.00	4.00	0.000	3.999	-0.01%			PASS	
		50.00	12.00	50.082	12.012	-0.01%			PASS	
		100.00	20.00	99.623	19.939	-0.01%			PASS	
		50.00	12.00	50.277	12.043	-0.01%			PASS	
		0.00	4.00	0.000	3.999	-0.01%			PASS	
	Display	Input	Output	Input	Output	Error	Display	Error	Judge	
	Display	Input 0.00	Output 4.00	Input 0.064	Output 4.010	Error -0.01%	Display	Error	Judge PASS	
	Display	_			_	_	Display	Error		
	Display	0.00	4.00	0.064	4.010	-0.01%	Display	Error	PASS	
	Display	0.00 50.00	4.00 12.00	0.064 49.146	4.010 11.861	-0.01% -0.02%	Display	Error	PASS PASS	
	Display	0.00 50.00 100.00	4.00 12.00 20.00	0.064 49.146 99.018	4.010 11.861 19.841	-0.01% -0.02% -0.02%	Display	Error	PASS PASS PASS	
	Display	0.00 50.00 100.00 50.00	4.00 12.00 20.00 12.00	0.064 49.146 99.018 50.127	4.010 11.861 19.841 12.019	-0.01% -0.02% -0.02% -0.01%	Display	Error	PASS PASS PASS PASS	
	Display	0.00 50.00 100.00 50.00	4.00 12.00 20.00 12.00	0.064 49.146 99.018 50.127	4.010 11.861 19.841 12.019	-0.01% -0.02% -0.02% -0.01%	Display	Error	PASS PASS PASS PASS	
	Display	0.00 50.00 100.00 50.00	4.00 12.00 20.00 12.00	0.064 49.146 99.018 50.127	4.010 11.861 19.841 12.019	-0.01% -0.02% -0.02% -0.01%	Display	Error	PASS PASS PASS PASS	
	Display	0.00 50.00 100.00 50.00	4.00 12.00 20.00 12.00	0.064 49.146 99.018 50.127	4.010 11.861 19.841 12.019	-0.01% -0.02% -0.02% -0.01%	Display	Error	PASS PASS PASS PASS	

Calibration results

91R810333

Calibration date:

Standard			Control			
P	%	I		D		
Hi			Lo			

Thank you for your attention.

WORK

(Configuration)