

This manual explains how to install DAQSTANDARD versions 9.xx.

You can download the latest manuals from the following website.

<https://y-link.yokogawa.com/YL009/>

Installing the DAQSTANDARD

The DAQSTANDARD is provided by a CD-ROM. To install the software, an appropriate serial number needs to be entered. The serial number is indicated on the CD.

1. Start Windows. Log onto Windows as an administrator.
2. Insert the CD into the CD-ROM drive of the computer.
3. The installation program starts automatically. Follow the instructions on the screen to proceed with the installation.

If the installation program does not start automatically when you insert the CD-ROM into the CD-ROM drive, use the following procedure to start it.

In [My Computer], double-click the CD-ROM icon. Installation starts. Follow the instructions on the screen to complete the installation.

The table below indicates what languages the user's manuals and software are installed in.

Language Selected at Time of Installation	Viewer		Hardware Configurator		DX-P Hardware Configurator	
	Software	User's manual	Software	User's manual	Software	User's manual
English	English	English	English	English	English	English
German	German	English	German	English	German	English
French	French	English	French	English	French	English
Russian	Russian	English	Russian	English	English	English
Japanese	Japanese	Japanese	Japanese	Japanese	Japanese	Japanese
Chinese	Chinese	Chinese	Chinese	Chinese	English	English
Korean	Korean	English	Korean	English	English	English

Note

- Before installing the software, check that your PC is not infected by a virus.
- Before starting installation, make sure that all the resident programs are exited.
- To re-install the software, first uninstall it, then re-install it.

User's Manual

The DAQSTANDARD user's manual is installed with DAQSTANDARD. To view it, on the Help menu, click User's Manual. Or, from the Start menu, select [Programs] - [DAQSTANDARD]. You can view the user's manual on Adobe Reader versions 7.0 and later.

The PDF file of the user's manual is also in the Manuals folder on the CD.

The CD that comes with the recorder may contain the user's manuals for earlier versions. If you are using version 9.xx, refer to

Trademarks

- Microsoft and Windows are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Adobe and Acrobat are registered trademarks or trademarks of Adobe Systems Incorporated.
- Company and product names that appear in this manual are registered trademarks or trademarks of their respective holders.

WARNING



This CD-ROM contains software, and is for use in a computer only. Do not play this on an audio CD player, as the high volume may damage your hearing or audio speakers.

System Requirements

OS	Windows 7	Home Premium 32-bit and 64-bit editions
		Professional 32-bit and 64-bit editions
	Windows 8.1	32-bit and 64-bit editions (Supports the desktop mode)
		Pro 32-bit and 64-bit editions (Supports the desktop mode)
Windows 10	Home (32-bit, 64-bit editions)	
	Pro (32-bit, 64-bit editions)	
CPU and Main Memory	32-bit edition: Intel Pentium 4, 3 GHz or faster x64 or x86 processor; 2 GB or more of memory 64-bit edition: Intel x64 processor that is equivalent to Intel Pentium 4, 3 GHz or faster; 2 GB or more of memory	
Hard Disk	A free space of 100 MB or more (more space may be required, depending on the amount of data stored).	
Monitor	A video card that is recommended for the OS and a display that is supported by the OS, has a resolution of 1024×768 or higher, and that can show 65,536 colors (16-bit, high color) or more.	
Interface Port	When communicating through RS-232, use a COM port (COM1, COM2, COM3, or COM4) supported by Windows. When communicating through RS-422/RS-485, connect a converter to an RS-232 port. To communicate through an Ethernet connection, you need an Ethernet card supported by Windows. Also, the TCP/IP protocol must be installed.	
Printer	A printer supported by Windows is required. An appropriate printer driver is also required.	