


BT200

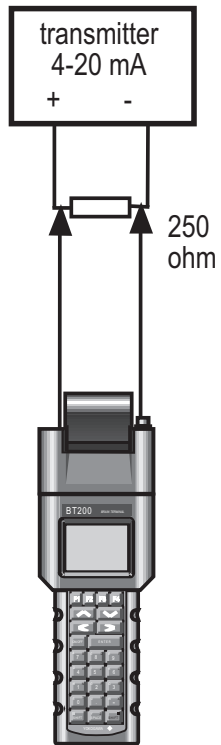

**BRAIN™**  
Communicating Products  
include:

**YEFLO**  
Vortex Shedding Flowmeters

•  
**ADMAG**  
Magnetic Flowmeters

•  
**DPharp**  
Digital Pressure Transmitters

•  
**UNIDELTA**  
Pressure Transmitters

•  
**YT200**  
Temperature Transmitters

## ADMAG

**BRAIN Communicating  
Advanced Magnetic Flowmeters**




**Basic Programming  
Pocket Reference Guide**

**YOKOGAWA**  
2 Dart Road  
Newnan, GA 30265  
770.254.0400

**YOKOGAWA** ◆

# ADMAG Magnetic Flowmeter BRAIN Communications

## Function Block Diagram

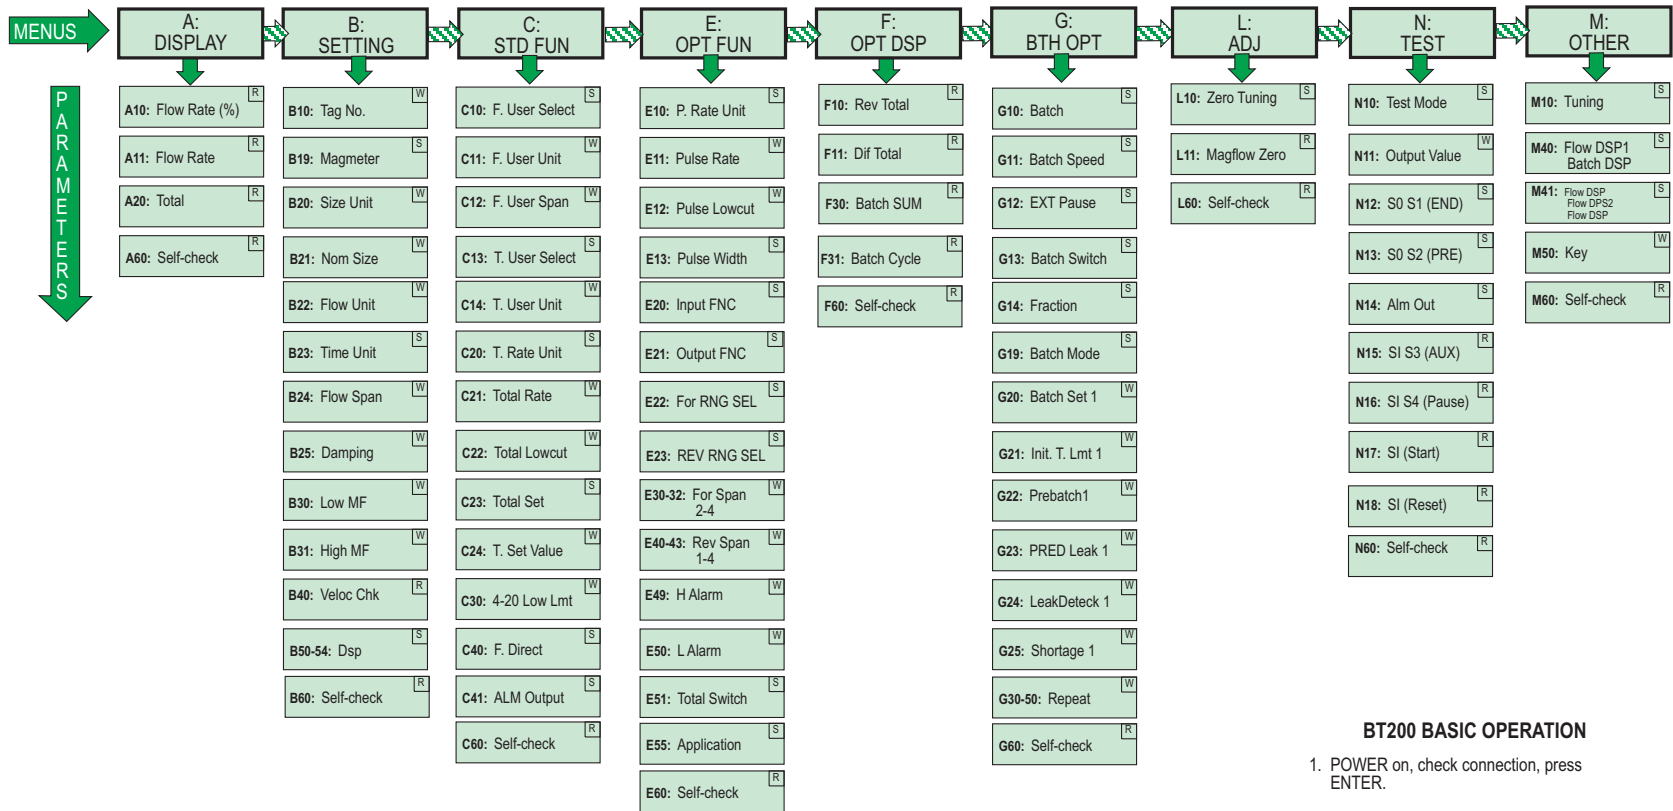

R = Read Only  
S = Select  
W = Read and Write

### BT200 BASIC OPERATION

1. POWER on, check connection, press ENTER.
2. Select HOME to view PV and transmitter limits.
3. Select SET to change engineering units, ranges and output functions.
4. Select ADJUST to adjust the display, linearity mA output.
5. When changing values press ENTER twice.
6. For Execute Commands apply pressure and press ENTER.