

Drawings


EJX120A Differential Pressure Transmitter Universal Flange

DPharp **EJX**™

SD 01C25B03-05E

Unit: mm (approx. inch)

● Universal Flange (Installation code U)

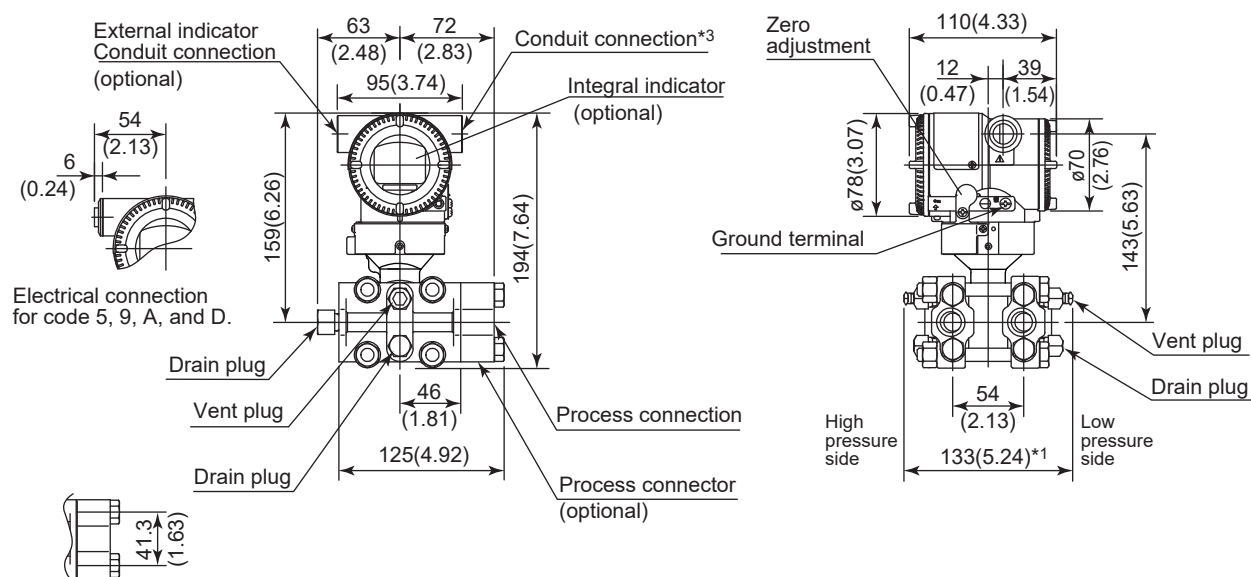


*1: When Option code K1, K2, K5, K6, K41, K42, K45, or K46 is selected, add 30 mm(1.18 inch) to the value.

*2: When electrical connection code 7 or C is selected, a blind plug is protruded up to 8 mm from the conduit connection.

*3: When option code PP is selected, a blind plug is attached to the conduit connection on both sides.

• Terminal Configuration

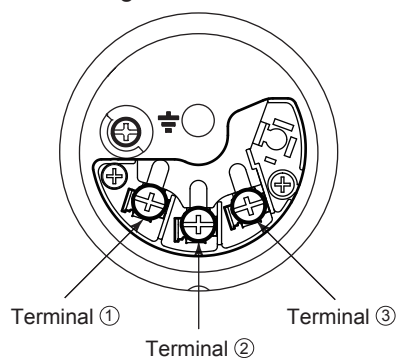

• Terminal Wiring

SUPPLY	+	①	Power supply and output terminals
	-	②	
CHECK	+	③	External indicator (ammeter) terminals*1*2
or	-	②	
ALARM	+	③	Status contact output terminals*2
	-	②	
		⏏	Ground terminal

*1: When using an external indicator or check meter, the internal resistance must be 10 Ω or less. A check meter or indicator cannot be connected when /AL option is specified.

*2: Not available for FOUNDATION Fieldbus and PROFIBUS PA communication types.