


Terminal Configuration and Wiring


Remote Sensor:

<To be wired to Remote Transmitter>

Non Explosion Protection Use

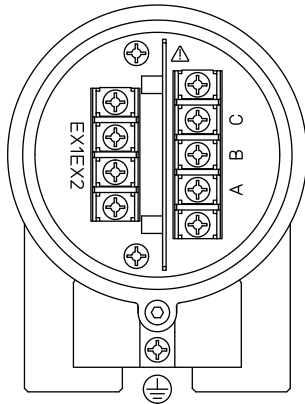

Explosion Protection Use

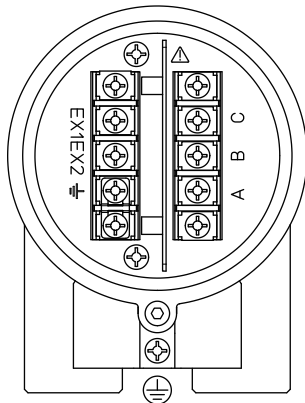

Terminal Symbol	Description
A B C	Flow Signal Output
EX1 EX2	Excitation Current Input
⊕	Protective Grounding (Outside of the terminal box)
⊖	Functional Grounding


F02.ai

Note: When optional code DHC is selected, waterproof glands with union joints and cables are attached.


Integral Flowmeter:

<To be wired to Power Supply and I/Os>

M4 Screw Type

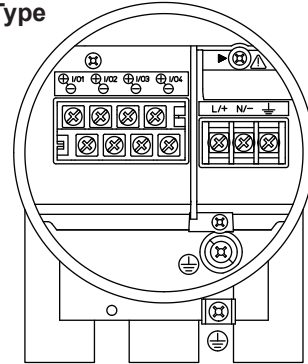

Clamp Type

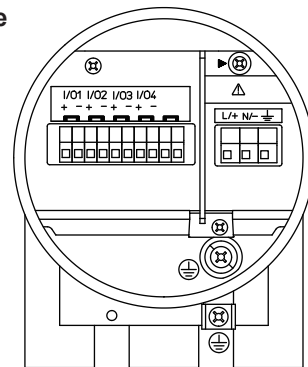

Terminal Symbol	Description
▶	Shorting Screw (Need to be fixed for normal operation)
⊖	Functional Grounding
N/- L/+	Power Supply
I/O4 - I/O4 + I/O3 - I/O3 + I/O2 - I/O2 + I/O1 - I/O1 +	Selected Input/Output
⊕	Protective Grounding (Inside and outside of the terminal box)

F03.ai