


Technical Information

GREEN to UTAdvanced Model Conversion Table

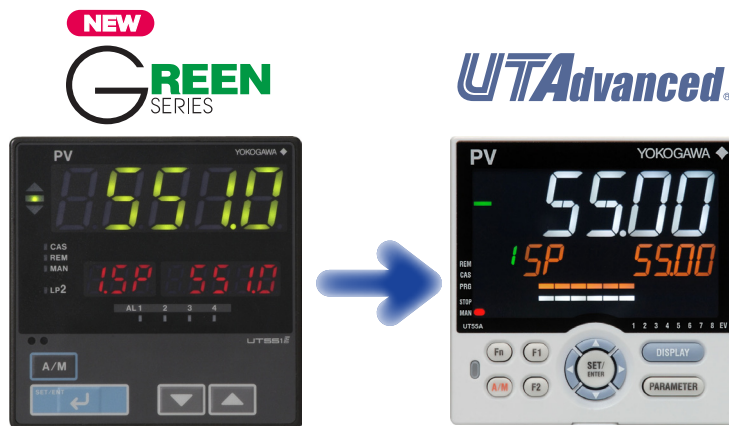

TI 05A03A01-03EN



The contents of this Technical Information are subject to change without notice.

Introduction

This document is a guide for conversion of models from GREEN series to UTAdvanced series. Use the list to confirm the model and the codes to be replaced.

GREEN series:

- Digital Indicating Controllers
UT320, UT321, UT350, UT351, UT420, UT450, UT520, UT550, UT551, UT750
- Program Controllers
UP350, UP351, UP550
- Digital Indicators with Alarms
UM330, UM331, UM350, UM351

GREEN to UTAdvanced Model Conversion Table

GREEN Series		UTAdvanced Series		Note
		White (Light gray) case	Black (Light charcoal gray) case	
UT320	UT320-00	UT32A-000-10-00	UT32A-000-11-00	
	UT320-01	UT32A-010-10-00/HA	UT32A-010-11-00/HA	
	UT320-02	UT32A-000-10-00/HA	UT32A-000-11-00/HA	
	UT320-20	UT32A-200-10-00	UT32A-200-11-00	
	UT320-21	UT32A-210-10-00/HA	UT32A-210-11-00/HA	
	UT320-22	UT32A-200-10-00/HA	UT32A-200-11-00/HA	
	UT320-30	UT32A-000-10-00/LP	UT32A-000-11-00/LP	
	UT320-31	UT32A-010-10-00/LP/HA	UT32A-010-11-00/LP/HA	RS-485 communication is 2-wire system only.
UT320-32	UT32A-000-10-00/LP/HA	UT32A-000-11-00/LP/HA		
UT321	UT321-00	UT32A-000-10-00	UT32A-000-11-00	
	UT321-01	UT32A-010-10-00/HA	UT32A-010-11-00/HA	
	UT321-02	UT32A-000-10-00/HA	UT32A-000-11-00/HA	
	UT321-20	UT32A-200-10-00	UT32A-200-11-00	
	UT321-21	UT32A-210-10-00/HA	UT32A-210-11-00/HA	
	UT321-22	UT32A-200-10-00/HA	UT32A-200-11-00/HA	
	UT321-30	UT32A-000-10-00/LP	UT32A-000-11-00/LP	
	UT321-31	UT32A-010-10-00/LP/HA	UT32A-010-11-00/LP/HA	RS-485 communication is 2-wire system only.
UT321-32	UT32A-000-10-00/LP/HA	UT32A-000-11-00/LP/HA		
UT350	UT350-00	UT35A-000-10-00	UT35A-000-11-00	
	UT350-01	UT35A-001-10-00/HA	UT35A-001-11-00/HA	
	UT350-02	UT35A-000-10-00/HA	UT35A-000-11-00/HA	
	UT350-20	UT35A-200-10-00	UT35A-200-11-00	
	UT350-21	UT35A-201-10-00/HA	UT35A-201-11-00/HA	
	UT350-22	UT35A-200-10-00/HA	UT35A-200-11-00/HA	
	UT350-30	UT35A-000-10-00/LP	UT35A-000-11-00/LP	
	UT350-31	UT35A-001-10-00/LP/HA	UT35A-001-11-00/LP/HA	
UT350-32	UT35A-000-10-00/LP/HA	UT35A-000-11-00/LP/HA		
UT351	UT351-00	UT35A-000-10-00	UT35A-000-11-00	
	UT351-01	UT35A-001-10-00/HA	UT35A-001-11-00/HA	
	UT351-02	UT35A-000-10-00/HA	UT35A-000-11-00/HA	
	UT351-03	UT35A-002-10-00	UT35A-002-11-00	
	UT351-0A	UT35A-002-10-00	UT35A-002-11-00	
	UT351-20	UT35A-200-10-00	UT35A-200-11-00	
	UT351-21	UT35A-201-10-00/HA	UT35A-201-11-00/HA	
	UT351-22	UT35A-200-10-00/HA	UT35A-200-11-00/HA	
	UT351-2A	UT35A-202-10-00	UT35A-202-11-00	
	UT351-30	UT35A-000-10-00/LP	UT35A-000-11-00/LP	
	UT351-31	UT35A-001-10-00/LP/HA	UT35A-001-11-00/LP/HA	
	UT351-32	UT35A-000-10-00/LP/HA	UT35A-000-11-00/LP/HA	
UT420	UT420-00	UT52A-000-10-00	UT52A-000-11-00	
	UT420-07	UT52A-010-10-00	UT52A-010-11-00	RS-485 communication is 2-wire system only.
	UT420-08	UT52A-020-10-00	UT52A-020-11-00	
UT450	UT450-00	UT55A-000-10-00	UT55A-000-11-00	
	UT450-01	UT55A-010-10-00	UT55A-010-11-00	
	UT450-02	UT55A-020-10-00	UT55A-020-11-00	
	UT450-03	UT55A-030-10-00	UT55A-030-11-00	
	UT450-04	UT55A-040-10-00	UT55A-040-11-00	
	UT450-10	UT55A-100-10-00	UT55A-100-11-00	
	UT450-11	UT55A-110-10-00	UT55A-110-11-00	
	UT450-12	UT55A-120-10-00	UT55A-120-11-00	
	UT450-13	UT55A-130-10-00	UT55A-130-11-00	
	UT450-14	UT55A-140-10-00	UT55A-140-11-00	
	UT450-20	UT55A-200-10-00	UT55A-200-11-00	
	UT450-21	UT55A-210-10-00	UT55A-210-11-00	
	UT450-22	UT55A-220-10-00	UT55A-220-11-00	
	UT450-23	UT55A-230-10-00	UT55A-230-11-00	
	UT450-24	UT55A-240-10-00	UT55A-240-11-00	
	UT450-30	UT55A-000-10-00/LP	UT55A-000-11-00/LP	
	UT450-31	UT55A-010-10-00/LP	UT55A-010-11-00/LP	RS-485 communication is 2-wire system only.
	UT450-32	UT55A-020-10-00/LP	UT55A-020-11-00/LP	RS-485 communication is 2-wire system only.
	UT450-33	UT55A-030-10-00/LP	UT55A-030-11-00/LP	
	UT450-34	UT55A-040-10-00/LP	UT55A-040-11-00/LP	
	UT450-40	UT55A-100-10-00/LP	UT55A-100-11-00/LP	
	UT450-41	UT55A-110-10-00/LP	UT55A-110-11-00/LP	RS-485 communication is 2-wire system only.
	UT450-42	UT55A-120-10-00/LP	UT55A-120-11-00/LP	RS-485 communication is 2-wire system only.
	UT450-43	UT55A-130-10-00/LP	UT55A-130-11-00/LP	
UT450-44	UT55A-140-10-00/LP	UT55A-140-11-00/LP		

GREEN to UTAdvanced Model Conversion Table

GREEN Series		UTAdvanced Series		Note
		White (Light gray) case	Black (Light charcoal gray) case	
UT520	UT520-00	UT52A-000-10-00	UT52A-000-11-00	
	UT520-07	UT52A-010-10-00	UT52A-010-11-00	RS-485 communication is 2-wire system only.
	UT520-08	UT52A-020-10-00	UT52A-020-11-00	
UT550	UT550-00	UT55A-000-10-00	UT55A-000-11-00	
	UT550-01	UT55A-010-10-00	UT55A-010-11-00	
	UT550-02	UT55A-020-10-00	UT55A-020-11-00	
	UT550-03	UT55A-030-10-00	UT55A-030-11-00	
	UT550-04	UT55A-040-10-00	UT55A-040-11-00	
	UT550-10	UT55A-100-10-00	UT55A-100-11-00	
	UT550-11	UT55A-110-10-00	UT55A-110-11-00	
	UT550-12	UT55A-120-10-00	UT55A-120-11-00	
	UT550-13	UT55A-130-10-00	UT55A-130-11-00	
	UT550-14	UT55A-140-10-00	UT55A-140-11-00	
	UT550-20	UT55A-200-10-00	UT55A-200-11-00	
	UT550-21	UT55A-210-10-00	UT55A-210-11-00	
	UT550-22	UT55A-220-10-00	UT55A-220-11-00	
	UT550-23	UT55A-230-10-00	UT55A-230-11-00	
	UT550-24	UT55A-240-10-00	UT55A-240-11-00	
	UT550-30	UT55A-000-10-00/LP	UT55A-000-11-00/LP	
	UT550-31	UT55A-010-10-00/LP	UT55A-010-11-00/LP	RS-485 communication is 2-wire system only.
	UT550-32	UT55A-020-10-00/LP	UT55A-020-11-00/LP	RS-485 communication is 2-wire system only.
	UT550-33	UT55A-030-10-00/LP	UT55A-030-11-00/LP	
	UT550-34	UT55A-040-10-00/LP	UT55A-040-11-00/LP	
	UT550-40	UT55A-100-10-00/LP	UT55A-100-11-00/LP	
	UT550-41	UT55A-110-10-00/LP	UT55A-110-11-00/LP	RS-485 communication is 2-wire system only.
	UT550-42	UT55A-120-10-00/LP	UT55A-120-11-00/LP	RS-485 communication is 2-wire system only.
	UT550-43	UT55A-130-10-00/LP	UT55A-130-11-00/LP	
UT550-44	UT55A-140-10-00/LP	UT55A-140-11-00/LP		
UT551	UT551-00	UT55A-000-10-00	UT55A-000-11-00	
	UT551-01	UT55A-010-10-00	UT55A-010-11-00	
	UT551-02	UT55A-020-10-00	UT55A-020-11-00	
	UT551-03	UT55A-030-10-00	UT55A-030-11-00	
	UT551-04	UT55A-040-10-00	UT55A-040-11-00	
	UT551-0A	UT55A-002-10-00	UT55A-002-11-00	
	UT551-0B	UT55A-042-10-00	UT55A-042-11-00	
	UT551-0C	UT55A-032-10-00	UT55A-032-11-00	
	UT551-0D	UT55A-052-10-00	UT55A-052-11-00	
	UT551-10	UT55A-100-10-00	UT55A-100-11-00	
	UT551-11	UT55A-110-10-00	UT55A-110-11-00	
	UT551-12	UT55A-120-10-00	UT55A-120-11-00	
	UT551-13	UT55A-130-10-00	UT55A-130-11-00	
	UT551-14	UT55A-140-10-00	UT55A-140-11-00	
	UT551-1A	UT55A-102-10-00	UT55A-102-11-00	
	UT551-1B	UT55A-142-10-00	UT55A-142-11-00	
	UT551-1C	UT55A-132-10-00	UT55A-132-11-00	
	UT551-1D	UT55A-152-10-00	UT55A-152-11-00	
	UT551-20	UT55A-200-10-00	UT55A-200-11-00	
	UT551-21	UT55A-210-10-00	UT55A-210-11-00	
	UT551-22	UT55A-220-10-00	UT55A-220-11-00	
	UT551-23	UT55A-230-10-00	UT55A-230-11-00	
	UT551-24	UT55A-240-10-00	UT55A-240-11-00	
	UT551-30	UT55A-000-10-00/LP	UT55A-000-11-00/LP	
UT551-31	UT55A-010-10-00/LP	UT55A-010-11-00/LP	RS-485 communication is 2-wire system only.	
UT551-32	UT55A-020-10-00/LP	UT55A-020-11-00/LP	RS-485 communication is 2-wire system only.	
UT551-33	UT55A-030-10-00/LP	UT55A-030-11-00/LP		
UT551-34	UT55A-040-10-00/LP	UT55A-040-11-00/LP		
UT551-40	UT55A-100-10-00/LP	UT55A-100-11-00/LP		
UT551-41	UT55A-110-10-00/LP	UT55A-110-11-00/LP	RS-485 communication is 2-wire system only.	
UT551-42	UT55A-120-10-00/LP	UT55A-120-11-00/LP	RS-485 communication is 2-wire system only.	
UT551-43	UT55A-130-10-00/LP	UT55A-130-11-00/LP		
UT551-44	UT55A-140-10-00/LP	UT55A-140-11-00/LP		
UT750	UT750-00	UT75A-000-10-00	UT75A-000-11-00	
	UT750-01	UT75A-011-10-00	UT75A-011-11-00	
	UT750-10	UT75A-100-10-00	UT75A-100-11-00	
	UT750-11	UT75A-111-10-00	UT75A-111-11-00	
	UT750-50	UT75A-500-10-00	UT75A-500-11-00	
	UT750-51	UT75A-511-10-00	UT75A-511-11-00	
	UT750-70	UT75A-500-10-00	UT75A-500-11-00	
UT750-71	UT75A-511-10-00	UT75A-511-11-00		
UP350	UP350-00	UP35A-000-10-00	UP35A-000-11-00	
	UP350-01	UP35A-001-10-00	UP35A-001-11-00	
UP351	UP351-00	UP35A-000-10-00	UP35A-000-11-00	
	UP351-01	UP35A-001-10-00	UP35A-001-11-00	
UP550	UP550-00	UP55A-000-10-00	UP55A-000-11-00	
	UP550-01	UP55A-011-10-00	UP55A-011-11-00	
	UP550-10	UP55A-100-10-00	UP55A-100-11-00	
	UP550-11	UP55A-111-10-00	UP55A-111-11-00	
	UP550-20	UP55A-200-10-00	UP55A-200-11-00	
UP550-21	UP55A-211-10-00	UP55A-211-11-00		

GREEN to UTAdvanced Model Conversion Table

GREEN Series	UTAdvanced Series		Note	
	White (Light gray) case	Black (Light charcoal gray) case		
UM330	UM330-00	UM33A-000-10	UM33A-000-11	
	UM330-01	UM33A-010-10	UM33A-010-11	
	UM330-02	UM33A-020-10	UM33A-020-11	
	UM330-30	UM33A-000-10/LP	UM33A-000-11/LP	
	UM330-31	UM33A-010-10/LP	UM33A-010-11/LP	RS-485 communication is 2-wire system only.
	UM330-32	UM33A-020-10/LP	UM33A-020-11/LP	
UM331	UM331-00	UM33A-000-10	UM33A-000-11	
	UM331-01	UM33A-010-10	UM33A-010-11	
	UM331-02	UM33A-020-10	UM33A-020-11	
	UM331-30	UM33A-000-10/LP	UM33A-000-11/LP	
	UM331-31	UM33A-010-10/LP	UM33A-010-11/LP	RS-485 communication is 2-wire system only.
	UM331-32	UM33A-020-10/LP	UM33A-020-11/LP	
UM350	UM350-00	UT35A-000-10-00	UT35A-000-11-00	
	UM350-01	UT35A-001-10-00	UT35A-001-11-00	
	UM350-02	UT35A-000-10-00	UT35A-000-11-00	
	UM350-30	UT35A-000-10-00/LP	UT35A-000-11-00/LP	
	UM350-31	UT35A-001-10-00/LP	UT35A-001-11-00/LP	
	UM350-32	UT35A-000-10-00/LP	UT35A-000-11-00/LP	
UM351	UM351-00	UT35A-000-10-00	UT35A-000-11-00	
	UM351-01	UT35A-001-10-00	UT35A-001-11-00	
	UM351-02	UT35A-000-10-00	UT35A-000-11-00	
	UM351-30	UT35A-000-10-00/LP	UT35A-000-11-00/LP	
	UM351-31	UT35A-001-10-00/LP	UT35A-001-11-00/LP	
	UM351-32	UT35A-000-10-00/LP	UT35A-000-11-00/LP	