



UTAdvanced – Initializing Forgotten Password on UT55A/52A/35A/32A

Tech note TN12011

❖ This tech note shows how to delete the password in the UTAdvanced line of controllers.

***** WARNING *****

This procedure resets **ALL** parameters back to factory defaults. (This is the only way to remove a forgotten password.)

❖ Procedure

- ❖ Remove power from the controller.
- ❖ While pressing the ▲/▼ keys, apply power to the controller.
- ❖ Continue pressing the ▲/▼ keys until t.PWD appears on the lower display.
- ❖ Press the ◀ arrow key (3) times until you have (4) zero's on the screen with the left most zero flashing.
- ❖ Using the ▲/▼ & ◀/▶ keys, change the value from 0000 to 5678 and press SET/ENTER.



❖ Procedure cont.

- ❖ You will now have tESt on the upper display.
- ❖ Hold the PARAMETER key for (3) seconds and you will see tSt.MINIT on the lower display.
- ❖ Press the SET/ENTER key once to display d.SET.
- ❖ Press the ▼ key twice to display F.dEF.
- ❖ Press the SET/ENTER key once and the zero will flash.
- ❖ Press the ◀ arrow (4) times to display (5) zeros.



❖ Procedure cont.

- ❖ Using the ▲/▼ & ◀/▶ keys, change the zeros to -12345 (the -1 will look like the right half of an upper case H) and press SET/ENTER.
- ❖ The display will flash as the controller resets and you will be placed back at the Quick Start Mode (QSM) screen with factory default parameters.





Thank you!