

Model WE430 Hydrazine Analyzer

IM 12Y18A03-01EN

◆ Introduction

Thank you for purchasing the WE430 Hydrazine Analyzer.

This Instructor's Manual contains all essential information for the user to make full use of WE430.

Please read the following respective documents before installing and using the WE430.

The related documents are listed as follows.

General Specifications

Contents	Document number	Note
Model WE430 Hydrazine Analyzer	GS 12Y18A03-01EN	Online manual

"EN" in the document number is the language code.

User's Manual

Contents	Document number	Note
WE410, WE420, WE430, WE440 WET CHEMISTRY ANALYZER Safety Precautions and Protection of Environment	IM 12Y18A00-01EN	Attached to the product (printed manual)
Model WE430 Hydrazine Analyzer	IM 12Y18A03-01EN	Online manual (This manual)

"EN" in the document number is the language code.

An exclusive User's Manual might be attached to the products whose suffix codes or option codes contain the code "Z" (made to customers' specifications). Please read it along with this manual.

You can download the latest documents from our website. Scan QR code.

<http://www.yokogawa.com/an/wet-chemistry-analyzers/download/>



■ Notes on Handling User's Manuals

- Please provide the user's manuals to your end users so that they can keep the user's manuals for convenient reference.
- Please read the information thoroughly before using the product.
- The purpose of these user's manuals is not to warrant that the product is well suited to any particular purpose but rather to describe the functional details of the product.
- No part of the user's manuals may be transferred or reproduced without prior written consent from YOKOGAWA.
- YOKOGAWA reserves the right to make improvements in the user's manuals and product at any time, without notice or obligation.
- If you have any questions, or you find mistakes or omissions in the user's manuals, please contact our sales representative or your local distributor.

■ Drawing Conventions

Some drawings may be partially emphasized, simplified, or omitted, for the convenience of description.

Some screen images depicted in the user's manual may have different display positions or character types (e.g., the upper / lower case). Also note that some of the images contained in this user's manual are display examples.

■ Trademark Acknowledgments

- All other company and product names mentioned in this user's manual are trademarks or registered trademarks of their respective companies.
- We do not use TM or ® mark to indicate those trademarks or registered trademarks in this user's manual.

◆ Safety Precautions

■ Safety, Protection, and Modification of the Product

- In order to protect the system controlled by the product and the product itself and ensure safe operation, observe the safety precautions described in this user's manual. We assume no liability for safety if users fail to observe these instructions when operating the product.
- If this instrument is used in a manner not specified in this user's manual, the protection provided by this instrument may be impaired.
- If any protection or safety circuit is required for the system controlled by the product or for the product itself, prepare it separately.
- Be sure to use the spare parts approved by Yokogawa Electric Corporation (hereafter simply referred to as YOKOGAWA) when replacing parts or consumables.
- Modification of the product is strictly prohibited.
- The following safety symbols are used on the product as well as in this manual.



WARNING

This symbol indicates that an operator must follow the instructions laid out in this manual in order to avoid the risks, for the human body, of injury, electric shock, or fatalities. The manual describes what special care the operator must take to avoid such risks.



CAUTION

This symbol indicates that the operator must refer to the instructions in this manual in order to prevent the instrument (hardware) or software from being damaged, or a system failure from occurring.

CAUTION

This symbol gives information essential for understanding the operations and functions.

NOTE

This symbol indicates information that complements the present topic.



This symbol indicates Protective Ground Terminal.

■ Warning and Disclaimer

The product is provided on an "as is" basis. YOKOGAWA shall have neither liability nor responsibility to any person or entity with respect to any direct or indirect loss or damage arising from using the product or any defect of the product that YOKOGAWA can not predict in advance.

◆ CE marking products

■ Authorized Representative in EEA

The Authorized Representative for this product in EEA is Yokogawa Europe B.V. (Euroweg 2, 3825 HD Amersfoort, The Netherlands).

■ Identification Tag

This manual and the identification tag attached on packing box are essential parts of the product. Keep them together in a safe place for future reference.

■ Users

This product is designed to be used by a person with specialized knowledge.

■ How to dispose the batteries:

This is an explanation about the EU Battery Directive. This directive is only valid in the EU.

Batteries are included in this product. Batteries incorporated into this product cannot be removed by yourself. Dispose them together with this product.

When you dispose this product in the EU, contact your local Yokogawa Europe B.V.office.

Do not dispose them as domestic household waste.

Battery type: Manganese dioxide lithium battery



Notice: The symbol (see above) means they shall be sorted out and collected as ordained in the EU Battery Directive.

Model WE430

Hydrazine Analyzer

IM 12Y18A03-01EN 1st Edition

CONTENTS

◆	Introduction.....	i
◆	Safety Precautions	iii
◆	CE marking products	iv
1.	General Information	1-1
1.1	Principles of Operation	1-2
1.2	Principles of Calibration.....	1-4
1.2.1	Dynamic Two Point Calibration (DYN).....	1-4
1.2.2	Offline Calibration	1-4
1.3	Fluidics Diagram	1-5
1.4	Glossary	1-5
2.	Analyzer Preparation	2-1
2.1	Mounting and Plumbing Instructions	2-1
2.2	Electrical Wiring	2-3
2.3	Wiring the Analyzer.....	2-4
2.3.1	Terminal Assignments.....	2-6
2.3.2	Electrode Wiring Assignments	2-6
2.4	Installation of Reagent and Diffusion Tubing	2-6
2.5	Installation of New Electrode Cables.....	2-7
2.6	Installation of a New Iodide Electrode	2-7
2.7	Installation of ATC Probe	2-8
2.8	Installation of a New Reference Electrode	2-9
3.	Analyzer Operation	3-1
3.1	Use of the Setup Mode	3-3
3.2	Setup Mode Overview	3-4
3.3	Shutdown and Start-Up Procedure.....	3-25
4.	Calibration	4-1
4.1	Calibration Setup	4-1
4.2	Dynamic Calibrator Operation.....	4-2
4.3	Dynamic Calibrator and Syringe Setup.....	4-3
4.4	Performing a DYN Calibration	4-3
4.5	Calibration Error Codes	4-5
4.6	Calibration At Custom Concentrations Using DYN	4-6
4.7	Dynamic Calibrator Check	4-7

4.8	Offline Calibration Procedure.....	4-7
5.	Analyzer Maintenance	5-1
5.1	Maintenance Schedule	5-1
5.2	Weekly Maintenance.....	5-1
5.3	Bi-Weekly Maintenance.....	5-1
5.4	Monthly Maintenance	5-2
5.4.1	Calibration.....	5-2
5.4.2	Replacement of Sample Inlet Filter.....	5-2
5.4.3	Polish Iodide Electrode	5-2
5.4.4	Air Pump Check	5-2
5.4.5	Replacement of Reagent and Diffusion Tubing Assembly	5-2
5.5	Yearly Preventive Maintenance	5-4
5.5.1	Electrodes	5-4
5.5.2	O-ring Replacement.....	5-4
5.5.3	Replacement of Restrictor Tubing	5-4
6.	Troubleshooting	6-1
6.1	Diagnostics Mode	6-1
6.1.1	Calibration Log.....	6-1
6.1.2	Error List.....	6-2
6.1.3	Measurement Log.....	6-2
6.1.4	Status Log.....	6-3
6.1.5	Software Revision	6-3
6.1.6	Electronics Serial Number	6-3
6.1.7	mV and Noise Measurements	6-3
6.1.8	mA Output Values	6-3
6.1.9	Display Test.....	6-3
6.1.10	Keypad Test	6-4
6.2	Slope Problems.....	6-5
6.2.1	Low Slope	6-5
6.2.2	High Slope.....	6-5
6.2.3	Troubleshooting Matrix	6-6
6.3	Error/Event Codes	6-7
6.4	Resetting the Analyzer	6-9
6.4.1	Hard Reset.....	6-10
6.4.2	Serial Number and Software Revision.....	6-10
	Revision Record.....	i

1. General Information

This user guide covers the operation, maintenance and troubleshooting for the WE430 Hydrazine analyzer, which offers unmatched reliability in analyzing oxygen scavengers in feedwater, boiler water or at the economizer inlet.

■ Introduction

Analyze the oxygen scavenger content at points in the steam/water circuit where dissolved oxygen control is critical. Residual oxygen scavengers must be carefully monitored to prevent costly overdosing, yet allow enough of the reductant in the system for metal passivation.

Excess levels of certain oxygen scavengers decompose into ammonia, which increases system alkalinity. Efficient control of oxygen scavengers depends on maintaining a predetermined safety zone. The WE430 Hydrazine analyzer optimizes the fluidic design with the sensing technology to provide accurate and precise results with an almost instantaneous indication of oxygen scavenger concentration changes.

The WE430 Hydrazine analyzer meets all of the criteria for accurate and dependable oxygen scavenger monitoring and more. The WE430 analyzer incorporates innovative technologies that include:

- Premium electrodes
- Marquee help screen
- Pump-less reagent addition and dynamic calibration system

● Markets

- Power
- Pulp and paper
- Chemical / petrochemical

● Applications

- Boiler water
- Feedwater
- Hydrazine
- Carbohydrazide
- DEHA and others

■ Features and Benefits

The WE430 Hydrazine analyzer is ideal for measuring and monitoring the critical oxygen scavenger levels in feedwater, boiler water or economizer inlet. With limited maintenance requirements and low reagent usage, the WE430 analyzer provides the highest level of performance with easy of use.

- Measurement of oxygen scavenger concentrations in water using premium ion selective electrode (ISE) technology.
- Accurate and precise measurements in the range of 0 ppb to 200 ppb for hydrazine:
 - Reliable measurements and a wide measurement range with selectable resolution.
 - Measures oxygen scavenger activity in aqueous solutions quickly, accurately and economically.
- Premium reference and sensing electrodes:
 - Superior accuracy and stability over a wide temperature range.
- Advanced flow cell design:
 - Automatic sample handling and contamination control with no moving parts.
- Patented scrolling marquee:
 - Intuitive menu-driven, digital user interface.
- Data log of previous measurements and calibration:
 - View measurement, calibration and error history.

- Self diagnostics:
 - Ease of maintainability.
- Password protection:
 - Security and peace of mind for your operation.
- Auto-ranging electronics with an easy to read backlit LCD display:
 - Analyzer determines the best range.

■ Application Modes

The versatility of the WE430 Hydrazine analyzer allows the operator to set the analyzer to read hydrazine, depending on the oxygen scavenger to be measured. Refer to Section 3.1, Use of the Setup Mode for instructions on how to set the analyzer to read hydrazine.

● Hydrazine Application

Hydrazine Measuring Range: 0 ppb to 200 ppb as hydrazine

In high pressure boiler systems, hydrazine is added to react with dissolved oxygen present in the system and a small amount of residual hydrazine is left behind. The residual hydrazine ensures that small amounts of dissolved oxygen that enters the system through leakage will be removed. Residual hydrazine should be carefully monitored to prevent costly overdosing.

Excess hydrazine may also decompose into ammonia, which increases sample alkalinity and attacks copper alloy components. Efficient control of hydrazine depends on maintaining a predetermined safety zone – typically 10 to 50 ppb.

1.1 Principles of Operation

The sample enters the WE430 Hydrazine analyzer and passes through the inlet valve, bypass/needle valve, inlet filter, pressure regulator, flow meter and into the restrictor tubing. The sample then passes through the fluid connector block into a reagent bottle and through a diffusion tubing assembly where pH adjustment takes place and iodine is added. The pH-adjusted sample then flows back through the connector block into the reagent mixing loop where the oxygen scavenger in the sample mixes with iodine reagent to form iodide. The sample then passes the iodide electrode, reference electrode and temperature probe and flows into an atmospheric drain via the diverter valve.


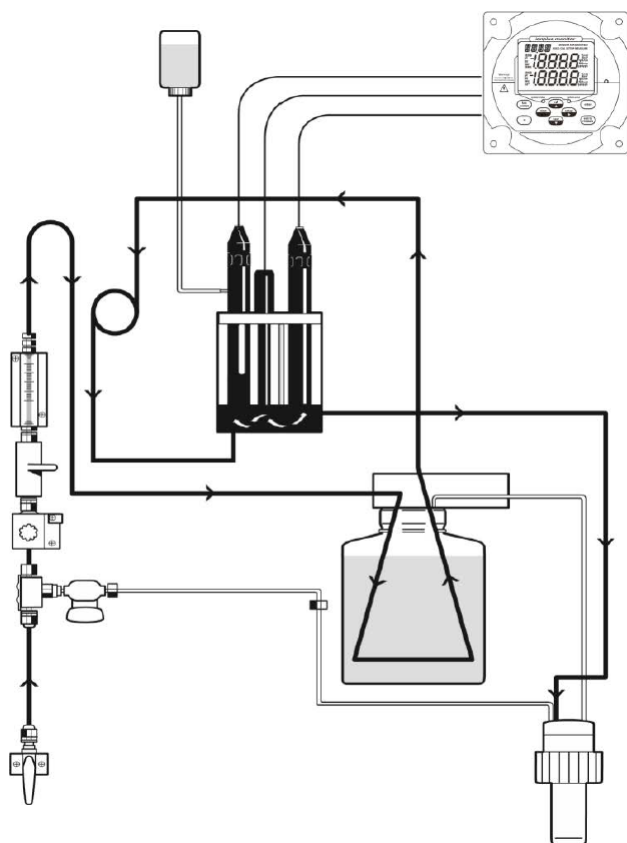


Figure 1.1 WE430 Schematic

The oxygen scavenger present in the sample reacts with the iodine to form iodide ion:

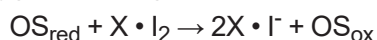

Where:

OS_{red} = oxygen scavenger reduced

OS_{ox} = oxygen scavenger oxidized

The iodide sensing electrode responds logarithmically to changes in the resulting iodide ion concentration. This response is described by the Nernst equation:

$$E = E_0 + 2.3 (RT/nF) \log (C/C_{\text{iso}})$$

Where:

E = measured electrode potential, mV

E_0 = potential, when C equals C_{iso} , mV

R = ideal gas constant

T = temperature of sample, degrees K

n = valence of ionic species (-1 for iodide ion)

F = Faraday's constant

C = effective iodide concentration (activity)

C_{iso} = concentration (activity) of iodide ion where potential E is temperature independent (isopotential point)

E_0 default: 44 mV

Low limit of E_0 : - 50 mV

High limit of E_0 : + 150 mV


Slope default: - 64.0 mV/decade

Slope range: - 75.0 mV/decade to - 40.0 mV/decade

The above equation indicates that the measured potential varies with both temperature and the concentration of the ion of the interest. In order to eliminate error caused by fluctuations in sample temperature, the WE430 microprocessor constantly updates temperature corrections from data supplied by the ATC probe.

From the Nernst equation, the theoretical response of a iodide ion selective electrode to a ten-fold change in concentration at 25 °C is -59.16 mV. This is referred to as the electrode slope (S). Most electrodes, however, do not exhibit a theoretical slope. Therefore, the analyzer is calibrated to determine its actual value. Two standards are used to provide information necessary for the microprocessor to compute the actual slope and E_0 for use during sample analysis.

Acid is added to the sample to prevent a competing reaction from occurring:

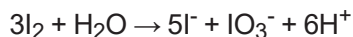

Maintaining acidic conditions prevents the release of iodide which would cause high apparent reductant readings.

The pH adjustment and iodine addition are accomplished by the patented passive-diffusion process wherein the sample passes through a length of tubing in the reagent bottle that contains the acid reagent and iodine. The reagent and iodine diffuse through the tube wall and mix with the sample. This passive method eliminates sample contamination problems due to reagent contamination and makes the fluid handling apparatus simple and reliable.

1.2 Principles of Calibration

Calibration procedures for analytical instruments are important and must be performed carefully. The WE430 Hydrazine analyzer uses a dynamic two point calibration that utilizes advanced electrode technology in combination with a dynamic calibrator.

1.2.1 Dynamic Two Point Calibration (DYN)

The dynamic two point calibration procedure provides maximum calibration accuracy and requires the use of the dynamic calibrator. In addition to calculating the E_0 value of the electrode, as is done in an offline calibration procedure, this procedure determines electrode slope. To perform a dynamic two point calibration, the WE430 analyzer is first connected to a reductant-free sample stream. An appropriate diluted standard is prepared and then a syringe is filled with the diluted standard and mounted on the calibrator. The calibrator is then mounted near the analyzer and the syringe tubing is connected to the standard injection port. By adjusting the calibrator pump settings, two different flow rates produce two known standards that are diluted into the sample background. By pressing the appropriate keys on the analyzer when prompted, the analyzer's microprocessor completes the calibration. After allowing approximately 30 minutes for the calibration solution to be flushed from the system, the WE430 analyzer can begin sample measurement again.

1.2.2 Offline Calibration

In addition to a dynamic two point calibration, an offline calibration can be performed with some oxygen scavengers. Since the oxygen scavenger concentration in feedwater is normally controlled over a rather narrow range, usually an offline calibration procedure is sufficient to provide accurate results. The offline calibration procedure has the advantage of being quick and easy to perform. If sample reductant concentrations are expected to vary widely from day to day or if online verification of analyzer readings is desired, a dynamic two point calibration should be performed.

The offline calibration feature of the WE430 analyzer allows the operator to adjust the analyzer to values determined by alternate methods used in their laboratory such as a standard colorimetric method.

The offline calibration is essentially a one point calibration. To perform an offline calibration, a sample is taken from the bypass of the analyzer; the sample concentration value is stored in memory; the sample is analyzed by an alternate method of choice; the previously stored reading is adjusted to the lab method result; and the analyzer is then returned to the analysis mode. The term “offline calibration” refers only to the fact that a sample from WE430 analyzer bypass is taken “offline” for laboratory analysis; in fact, no downtime is experienced during the procedure and the analyzer remains online throughout.

1.3 Fluidics Diagram

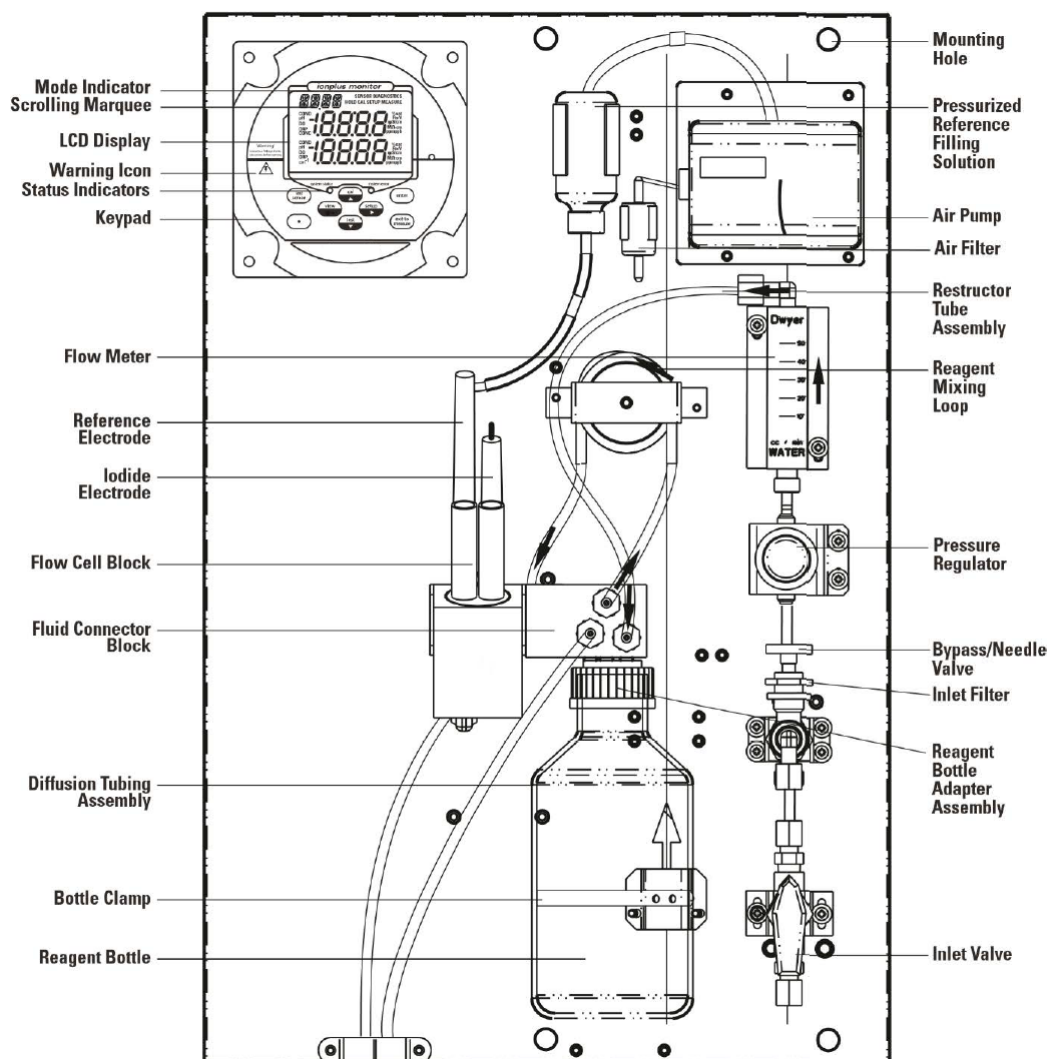


Figure 1.2 Fluidics Diagram

1.4 Glossary

Refer to Figure 1.2.

Inlet Valve

Accepts the sample stream via 1/4 inch NPTF connector. The operator must supply the sample with a pressure between 8 and 100 psig.

Inlet Filter

60 micron stainless steel filter traps particulate matter in the sample stream.

Bypass/Needle Valve

Used to redirect flow in the bypass system.

- Pressure Regulator**
Adjusts flow of the incoming sample stream.
- Flow Valve**
Used to turn off flow to the flow cell.
- Flow Meter**
Measures the sample flow rate.
- Restrictor Tube Assembly**
Used in conjunction with the pressure regulator to maintain a steady sample flow rate.
- Fluid Connector Block**
Connects the reagent bottle to the sample stream and flow cell assembly.
- Diffusion Tubing Assembly**
Semi-permeable tubing through which the reagent and iodine diffuse into the sample.
- Reagent Bottle**
Contains the iodine solution and acid reagent that adjusts the sample pH.
- Thumbscrew**
Supports the reagent bottle.
- Reagent Bottle Clamp**
Holds the reagent bottle securely in place.
- Reagent Mixing Loop**
Mixes the iodine reagent with the oxygen scavenger in the sample to form iodide, which is measured by the iodide sensing electrode.
- Flow Cell**
Contains the iodide sensing electrode, reference electrode and ATC probe.
- Iodide Electrode**
Senses iodide ions in the sample stream and produces an electrical potential dependent on the oxygen scavenger concentration.
- Reference Electrode**
Provides a constant reference potential and completes the measurement circuit.
- Pressurized Reference Electrode Filling Solution Bottle**
Provides a constant flow of electrolyte solution through the reference electrode for maximum stability.
- Check Valve**
Prevents the backflow of electrolyte from the pressurized reservoir.
- ATC Probe**
Measures the sample temperature and inputs the data to the microprocessor for automatic temperature compensation (ATC).
- Standard Injection Port**
Allows the connection of the dynamic calibrator tubing to the fluid connector block during a dynamic two point calibration.
- Air Pump**
Provides air to pressurize the filling solution bottle.
- LCD Display**
Provides digital readouts of concentration, temperature, millivolts and error codes.
- Keypad**
Consists of five mode keys, four prompt indicator lights, two scroll keys and one key for entering data. Mode and error indicators are also incorporated on keypad.
- Status Indicator**
Two LED lights that illuminate according to current status of the analyzer.
Green Light: Indicates that system is in correct working condition.
Yellow Light: Indicates a warning, system in hold or that maintenance is required.
Red Light: Indicates that something is seriously wrong.

NOTE

When either the yellow or red LED is lit, there may be an entry in the diagnostics mode that indicates the error. The logging feature must be initiated in the setup mode. Refer to Section 3.1, Use of the Setup Mode for instructions.

2. Analyzer Preparation



WARNING

The instructions provided in this userguide are recommendations from the manufacturer to ensure safe and correct operation of the analyzer. If the analyzer is not used as recommended by the manufacturer this can lead to incorrect operation or injury.

■ Unpacking the Analyzer

YOKOGAWA analyzers are assembled, tested and packaged with great care.

1. Open the outer box. Remove the top four foam corner support pieces.
2. Open the inner box. This box should contain the analyzer and accessories. (Refer to IM 12Y18A00-01EN)
3. Remove the cardboard retaining shell by sliding it over the entire mounting board and the analyzer.
4. Carefully remove the entire mounting board with analyzer from the inner box.

NOTE

Do not lift or pull the analyzer by the fluidics or the electronic components.

Use the back panel to lift the analyzer system.

5. Unbolt the analyzer from the mounting board by removing the four mounting bolts with a 9/16" wrench. These bolts may be discarded.
6. Carefully place the analyzer at a convenient location until proper installation can be completed.

2.1 Mounting and Plumbing Instructions



WARNING

Do not connect power prior to the mounting and plumbing of the analyzer.

Unit: mm (inch)

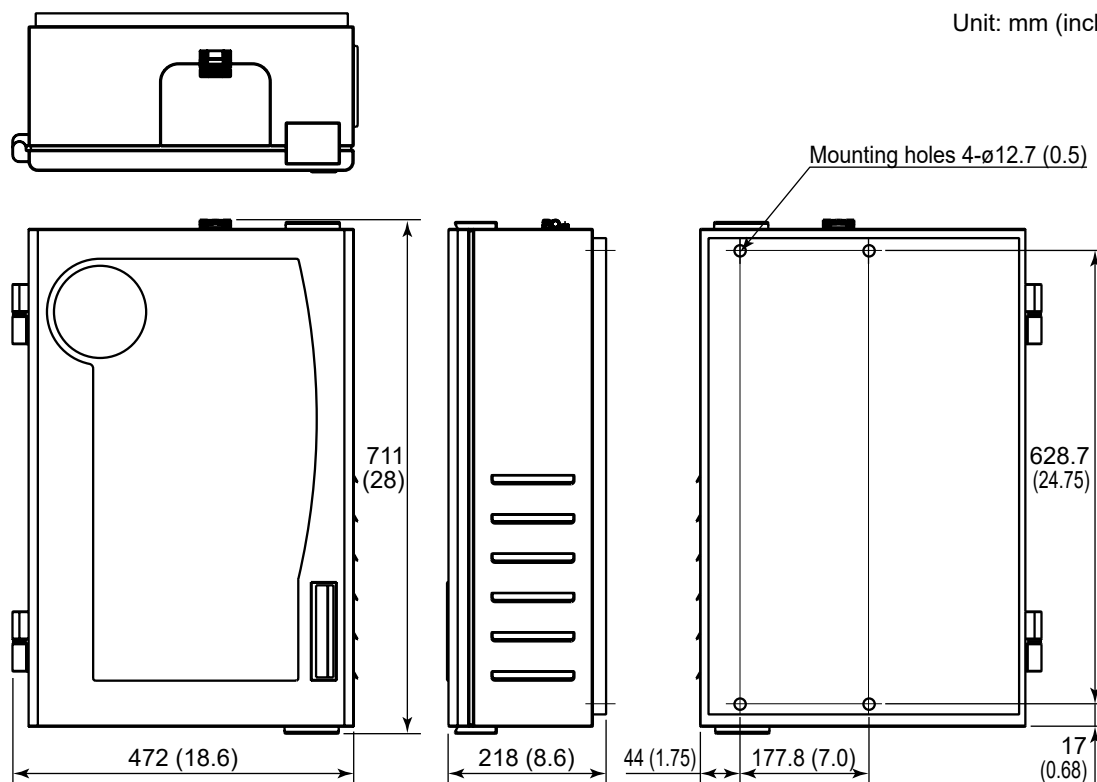


Figure 2.1 Mounting Dimensions

NOTE

- Select a site for the analyzer that allows it to be permanently bolted with ample height for atmospheric drain operation. Be sure that there is ready access to the electronic controls, calibration port and electrodes.
- A clearance of 15 inch (about 40 cm) must be allowed above the flow cell calibration port. Insert the pipet vertically (not angled) during the calibration.
- The analyzer location must permit connections to a sample line, drain and AC power supply and any connections for output devices.
- The analyzer should be mounted as close to the sampling point as possible. This ensures the fastest possible response to a changing sample condition. Refer to the Appendix, Sample Conditions section.
- For proper flow cell operation, the analyzer must be installed straight and level upon its mounting location. Failure to level the analyzer may cause poor siphoning in the flow cell.

■ Instructions

1. Prepare the mounting holes. Carefully lift the analyzer and bolt it into place. Do not lift the analyzer by holding on to any of the plumbing or fluid handling components.
2. Connect a waste line to the outlet of the analyzer, which is 3/4" NPT male. The waste line should be connected to a drain of sufficient capacity, 0.5 inch (1.27 cm) OD is recommended.
3. Connect a sample line to the inlet of the analyzer, which is 1/4" NPT female. It is recommended that a shutoff valve be installed at the sampling point.
4. The analyzer must be mounted and leveled vertically for proper operation.

■ Sample Requirements

Additional information is listed in the Appendix, Specifications section.

Sample inlet connection

1/4" NPTF. If particulate matter is present in the sample, pre-filtration is necessary. The 60 micron stainless steel filter located after inlet valve will remove moderate amounts of particulates.

Flow rate

40 mL/minute (nominal).

Pressure

8 to 100 psig.

Temperature

Temperature must be between 5 and 45°C.

Oxygen scavenger level

Oxygen scavenger levels are read directly in ppb or ppm, when calibrated with standard.

Sample alkalinity

Sample alkalinity should be less than 50 ppm CaCO₃ equivalent.

2.2 Electrical Wiring

The warning icon highlights important information that should be strictly followed when using the analyzer for your own safety. Failure to follow these instructions may result in injuries.



WARNING

Read and observe the following safety recommendations.

■ Safety Requirements

- Prior to wiring, a switch or circuit breaker for disconnecting the analyzer from power supply should be installed.
 - The switch should be in close proximity to the analyzer and with easy reach of the user.
 - The switch should be marked as the disconnecting device for the analyzer.
- To reduce the risk of shock hazard, disconnect the power prior to opening the analyzer.
- Before connecting the analyzer to the main, make sure that the voltage lies within either range: 100-120V 200mA / 200-240V 100mA; 50/60 Hz AC.
- Cutting off the power by disconnecting power source will not reset the analyzer. This analyzer incorporates a non-volatile memory and will maintain calibration and settings after power failure. Battery power is supplied to the display for the date and time functions.
- If a repair is required, or to arrange Return Material Authorization, call Response Center or contact your local authorized dealer.
- Installation and wiring of the analyzer may only be carried out in accordance with applicable local and national codes per this user guide.
- Be sure to observe the technical specifications and input ratings.

■ Warning Labels and Locations



WARNING

The following section provides important information that should be strictly followed when using the analyzer for your own safety. Failure to follow these instructions may result in injuries.

The safety warning icons are used in two locations on the analyzer.

- Faceplate – Refer to Figure 2.2.

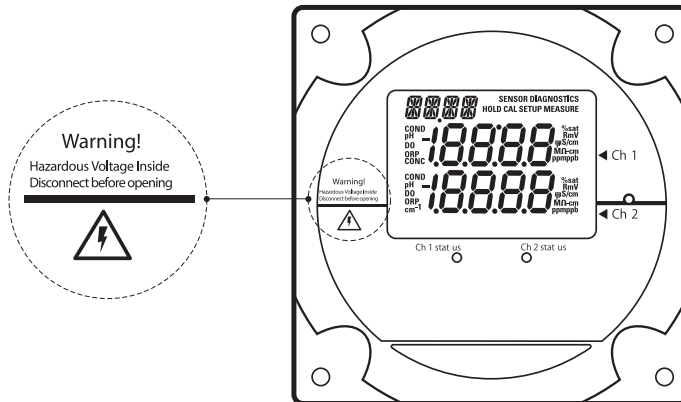


Figure 2.2 Faceplate

- Power supply – Refer to Figure 2.3.

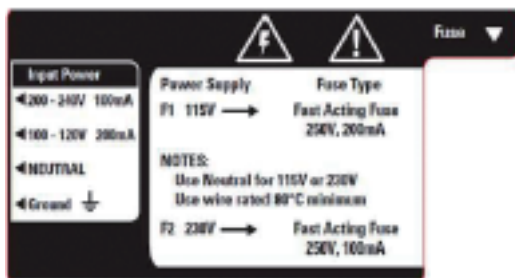


Figure 2.3 Power Supply

NOTE

Replace the fuse only with a fuse of same rating.

2.3 Wiring the Analyzer



WARNING

Read and observe the following requirements. If you install the wrong fuse for your system, you could damage the analyzer. Make sure that you select the correct fuse rating and discard the additional fuses supplied in the fuse kit.

■ Required Tools

- Options kit – includes fuses, cable glands, conduit fitting and green screw terminal.
- Phillips head screwdriver.
- 2 mm blade flat-head screwdriver.

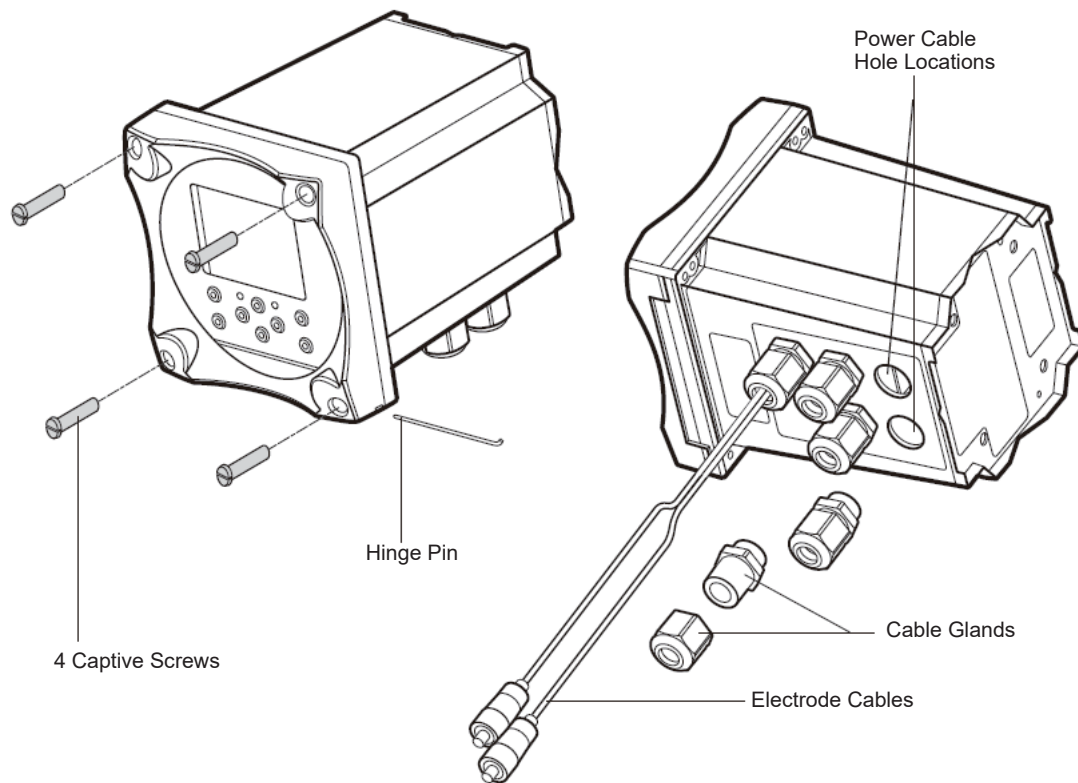


Figure 2.4 Electronics Enclosure with Cable Glands

1. Open the faceplate – loosen the four screws using a Phillips head screwdriver. The electronics faceplate will open via the hinge pin connection.
2. Remove one or two of the two unused cable glands as required for wiring power cable or auxiliary connections. Power cable optional hole locations are shown in Figure 2.4.
3. Select and install the appropriate size cable gland or conduit fitting as required.
4. Feed the power cable through the conduit or cable glands as required.

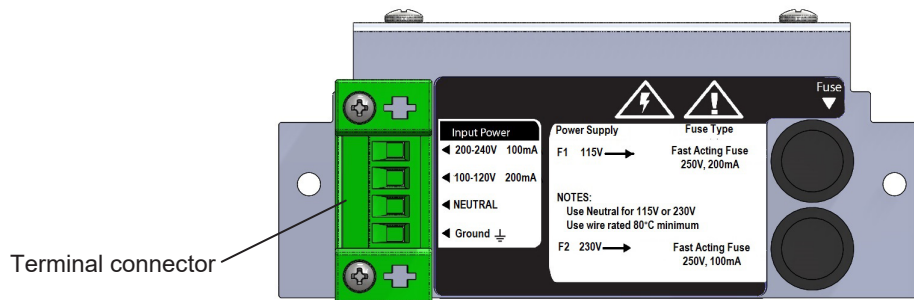


Figure 2.5 Terminal Connector Location

5. Wire the power cable to the green screw terminal connector from the options kit. Select correct terminal for hot conductor depending on line voltage, insert ground wire into the correct terminal and connect the other cable to the neutral terminal. Refer to Figure 2.5 for terminal connector location.
6. Plug the terminal connector into the power supply. Refer to Figure 2.3.
7. The universal power supply uses both fuses in the fuse kit. Install by inserting the fuse in the fuse holder and secure it using the twist and lock method. The fuses are clearly labeled with the appropriate voltages for your system. Refer to Figure 2.3 and Figure 2.5 for the correct fuse holder positions. Refer to the table below for fuses required.

AC Voltage	Fuse Rating
115V	200mA, 250V, Fast Acting
230V	100mA, 250V Fast Acting

2.3.1 Terminal Assignments

Terminal Layout	Terminal Layout	Terminal Layout	Terminal Layout
1 mA1 output	9 Relay 1	26 Sensing electrode	28 Do not connect
2 GND common ground	10 Relay 1	27 Do not connect	29 Do not connect
3 mA2 output	11 Relay 2		30 Preamp power
4 Air pump (ISE only)	12 Relay 2		31 Preamp ground
5 Air pump (ISE only)	13 Relay 3		32 Shield
6 Shield ground for conductivity	14 Relay 3		33 Shield
7 Do not connect	15 Do not connect		34 Jumper to pin 26 when using preamp
8 Do not connect	16 Temperature ground		
	17 Temperature drive		
	18 Temperature sense		
	19 Solution ground		
	20 Conductivity drive +		
	21 Conductivity sense +		
	22 Conductivity sense -		
	23 Conductivity drive -		
	24 Reference electrode		
	25 Jumper to pin 24 when using preamp		

Figure 2.6 Terminal Assignments

2.3.2 Electrode Wiring Assignments

Iodide Electrode		
26	Sensing electrode	Connect clear wire
33	Shield	Connect black wire
Reference Electrode		
24	Reference electrode	Connect clear wire
32	Shield	Connect black wire

2.4 Installation of Reagent and Diffusion Tubing



WARNING

The reagent is hazardous. Use protective glasses and gloves. Refer to the bottle label for precautions and work in a fume hood or well-ventilated area. Avoid contact with skin or clothes. In case of skin contact, flush skin immediately with water to prevent burns.

1. Support the bottom of the reagent bottle and release the holding clamp with one hand. Turn the thumbscrew counterclockwise to release the reagent bottle. Unscrew the white bottle cap and gray tubing connector assembly. The bottle that is supplied with the analyzer can be used as a spare.
2. Take a new bottle of the reagent (Cat. No. 181811) to a well ventilated area, such as a laboratory fume hood. Unscrew and remove the white cap on the bottle.
3. Connect the diffusion tubing (Cat. No. 181860) to the tubing connector assembly. Place the tubing assembly and cap into the bottle.
4. Replace the gray cap and screw the white cap on tightly.
5. Insert the four nipples on the top of the reagent bottle into the fluid connector block.
6. Support the bottom of the reagent bottle with one hand and tighten the thumbscrew clockwise.
7. Clamp the bottle to the fluidics panel to secure it.

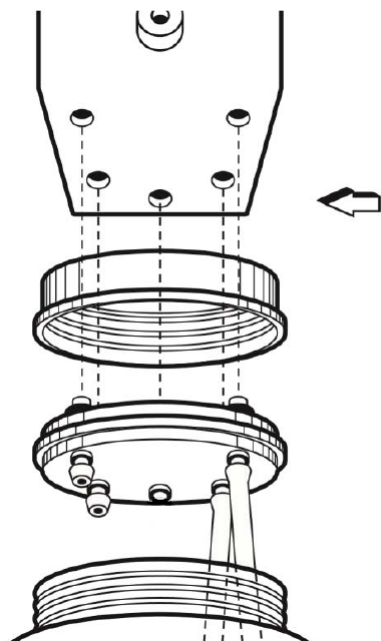


Figure 2.7 Reagent Bottle Assembly

2.5 Installation of New Electrode Cables

1. Unpack the electrode cables.
2. Feed the tinned wires through the cable gland assemblies with the holes (2 or 1).
3. Follow the terminal assignments shown in Figure 2.6 for the proper electrode cable wiring location.

2.6 Installation of a New Iodide Electrode

The Iodide electrode (Part number: K9705CG) must be used in conjunction with the reference electrode (Part number: K9705CH).

1. Unpack the iodide electrode (Part number: K9705CG) and carefully remove the protective cap. Save the cap for future storage of the electrode. Use the electrode polishing strip to gently polish the sensing surface of the iodide electrode for about 30 seconds.
2. Insert the Iodide electrode into its port in the flow cell cap. Refer to Figure 2.8 for the location. Installation in the incorrect hole will cause calibration issues.
3. Plug the electrode cable marked "Sensing" into the top of the electrode. Be sure to push back the black cap to verify a secure connection between the male and female pin connection prior to tightening.
4. Tighten the screw cap connection to the cable.

NOTE

Do not twist the cable while tightening the connection. Twisting may cause damage requiring premature replacement of the cable.

5. Wait at least one hour before calibrating the analyzer.

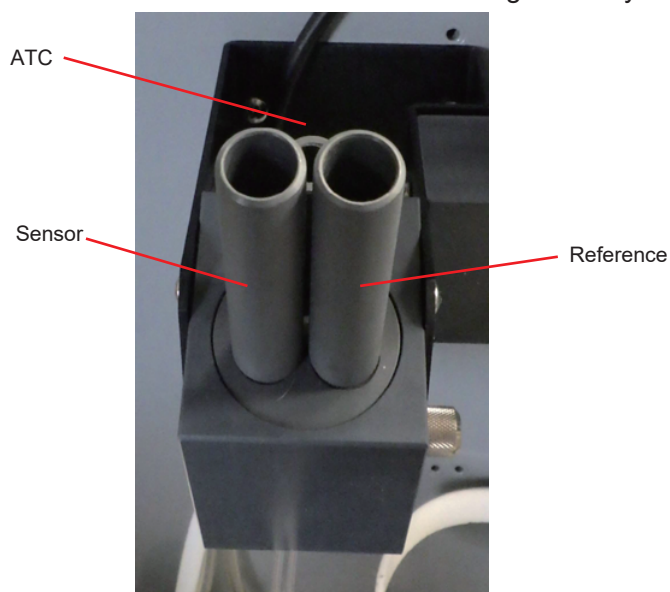


Figure 2.8 Flow Cell Cap

2.7 Installation of ATC Probe

The automatic temperature compensation (ATC) probe is already connected to the correct terminal for temperature upon delivery.

1. Insert the ATC probe into its port in the flow cell cap. Refer to Figure 2.8 for the location.

2.8 Installation of a New Reference Electrode



WARNING

Turn off the air pump prior to removing the reference electrode filling solution bottle. If the air pump is left on, it will spatter filling solution as the bottle is removed.

1. Unpack the reference electrode (Part number: K9705CH) from the shipping box.
2. Carefully remove the protective caps from the bottom and sidearm of the reference electrode. Save the caps for future storage of the electrode.

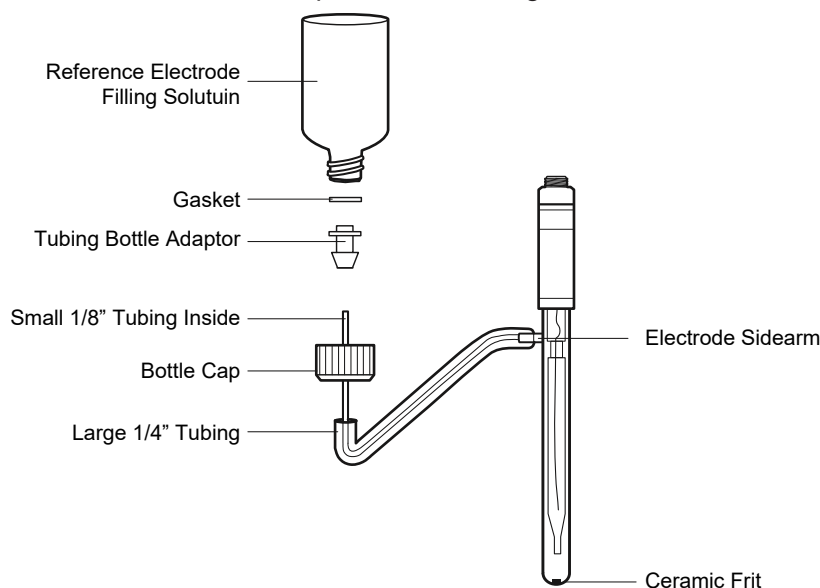


Figure 2.9 Reference Electrode with Filling Solution

3. Shake out as much of the fill solution as possible through the sidearm. Drain the fill solution through the sidearm or use a pipet or syringe.
4. While passing the 1/8 inch tubing into electrode sidearm, slide the 1/4 inch tubing over the sidearm. The outside tubing should extend 3/8 to 1/2 inches over sidearm. Refer to Figure 2.9.
5. Remove the cap and fluid seal from reference electrode fill solution bottle (Cat. No. 181073). Hold the bottle in an upright position. Check that the rubber gasket is properly aligned, and then connect the cap end of the tubing assembly to the bottle. The 1/8 inch tubing should extend into the bottle.
6. Hold the reservoir bottle above the electrode with the bottle cap end down. The electrode should be horizontal with the sidearm pointing up. Gently shake the electrode to allow any trapped air bubbles to rise into the bottle as the electrode fills with solution.
7. Dry off the ceramic frit on the base of the electrode with a lint-free wipe. Squeeze the bottle for a few seconds. A small amount of filling solution should bead up on the frit surface, indicating good filling solution flow. If no moisture is visible, the electrode is clogged and should be cleaned or replaced.
8. Invert the electrolyte bottle and snap it into the clip. Refer to Figure 2.10. Locate the discharge tube of the air pump on the fluidics panel. The end of the tubing has a hollow push pin for pressurizing the reference reservoir. Puncture the base of the bottle with the pin and push the pin down until its PVC base abuts the bottle. Mark and date the level of filling solution in the reservoir. The electrolyte solution will begin to flow into the reference electrode.

CAUTION

Failure to pressurize the filling solution bottle will lead to noisy and drifting output signals.

9. Plug the electrode cable marked "Reference" into the top of the electrode, and tighten the screw cap. Be sure to push back the black cap to verify a secure connection between the male and female pin connection prior to tightening.
10. Tighten the screw cap connection to the cable.

NOTE

Do not twist the cable while tightening the connection. Twisting may cause damage requiring premature replacement of the cable.

11. Insert the reference electrode into its port in the flow cell cap. Refer Figure 2.8 for the location.

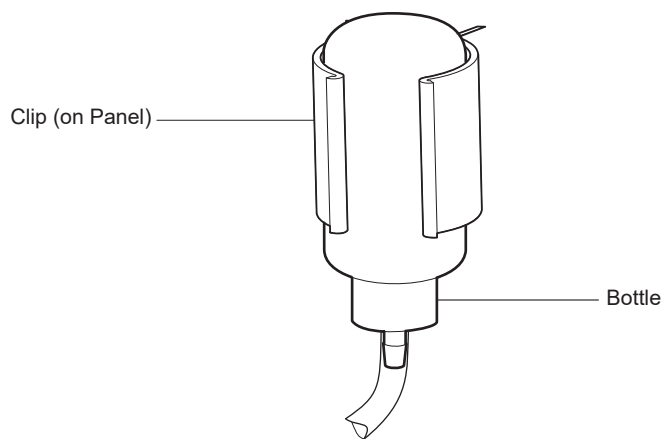


Figure 2.10 Reference Mounting Clip

3. Analyzer Operation

■ Description of Basic Controls

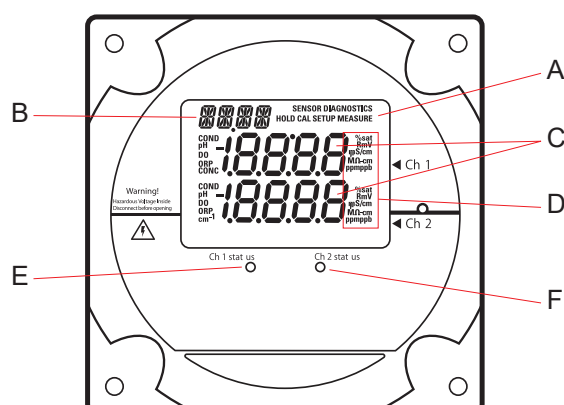




Figure 3.1 Faceplate

Parameter	Location on Display	Options	Default
A Mode Indicator	Top right corner of display	HOLD, CAL, SETUP, MEASURE, DIAGNOSTIC	MEASURE
B Marquee Display	Top left corner of display	Analyzer provides prompts for operator using the scrolling message	
Temperature Display		Celsius	In the measure mode, if an ATC probe is connected the default is the actual measured temperature and if no ATC probe is connected the default is 25 °C
C Main Data Display	Middle line and bottom line of display	ISE board: concentration pH/mV board: pH or mV Conductivity board: conductivity, resistivity, salinity, concentration or TDS	Depends on type of board installed and selected measurement parameter
D Measurement Units	Left and right side of middle and bottom display lines	ISE board: ppm or ppb, auto-ranging pH/mV board: pH or mV Conductivity board: $\mu\text{S}/\text{cm}$ or mS/cm (conductivity), $\text{M}\Omega\text{-cm}$ (resistivity), SAL1 or SAL2 in the marquee (salinity), PCT1 or PCT2 in the marquee (concentration) and TDS1 or TDS2 in the marquee (TDS)	Depends on type of board installed and selected measurement parameter
E Channel 1 Status Indicator	Below display screen, to the left of 	Green LED indicates that channel is OK Orange LED indicates a channel warning Red LED indicates a channel failure	At initial installation, the red LED indicates that the electrode or probe needs to be installed and calibrated.
F Channel 2 Status Indicator	Below display screen, to the right of 	Green LED indicates that channel is OK Orange LED indicates a channel warning Red LED indicates a channel failure	At initial installation, the red LED indicates that the electrode or probe needs to be installed and calibrated.

■ Description of Keypad Icons










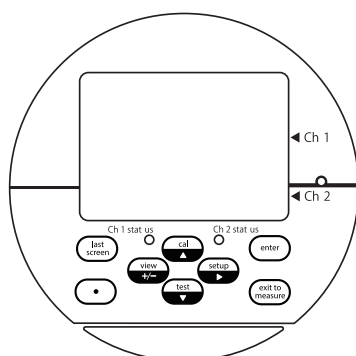






Figure 3.2 Keypad Icons

Key	Parameter/Mode	Action	Operational Selections
	Enters calibration mode	Calibration mode with operator prompts	Depends on type of board installed
	Scrolls up digit numbers Scrolls up through a list of options in setup and cal modes	Use to edit numeric values Use to select available options	0 through 9 selectable by digit, first digit sometimes selectable 0 through 19
	Enters setup mode	System setup mode at the last parameter used by the operator	PASS, DATE, TIME, LOG, RSET, DISP, CH1, CH2, MDL, MEAS, HOLD, TCMP, TADJ, ALRM, mA1, mA2, mADJ, TEST, CAL, PH, COND, DYN
	Moves to the next digit	Use to edit values	When moved to final digit, the system will wrap around to first digit
	Enters test mode	Use to advance through sequence of displays DIAGNOSTICS will appear in top right of screen	
	Scroll down digit numbers Scroll down through a list of options in setup and cal modes	Use to edit numeric values Use to select available options	0 through 9 selectable by digit, first digit sometimes selectable 0 through 19
	Enters log view mode	Use to view data in calibration, measure and status logs	
	+/- function	Enters negative/positive sign when editing numbers	
	Enter function	Use to accept value or selection displayed on screen and store value or selection in memory	
	Enter function (in test mode only)	Use in test mode to display additional information for selected menus	
	Exit to measure function	Use to exit setup or cal modes and enter the measure mode	Analyzer automatically enters measure mode when first turned on and after calibration
	Last screen function	Use in setup and test modes to return to the previous screen or menu	
	Decimal point function	Use to set the decimal point position in certain menus with numbers that require a decimal point	

3.1 Use of the Setup Mode

Before the first sample measurements can be taken, the setup mode should be programmed and a successful calibration must be performed by the operator and stored in the memory of the analyzer.

■ Navigating Tips for the Setup Mode

- Press  to enter the setup mode.
- SETUP appears in the mode indicator screen.
- HOLD is displayed while in the setup mode.
- The analyzer will enter the setup mode at the last menu that was used by the operator.
- Press  and  to loop through the menu options.
- Press  to select the desired menu option and set the menu option parameters.
- Press  and  to:
 - Scroll between On and OFF for the selected menu option.
 - Scroll and set the first digit value to 0 through 19.
 - Scroll and set the remaining digit values to 0 through 9.
- Press to  move to the next digit (scroll right) to set each digit value (4 digits maximum).
- Press  to save the entered parameter for the selected menu option.
- Press  to exit the current screen and return to the previous screen.
- Press  to exit the setup mode and return to the measure mode. If  is pressed,  will not return the operator to the setup mode. The operator must reenter the setup mode by pressing .

■ Using Password Protection

The default password is 0000 – indicates password protection has not been activated.

System password:

Management secured password protection of setup mode and calibration process.

Calibration password:

Operator secured password for protection of calibration process only.




If password(s) are activated:

- System prompts operator to enter system password:
 - Marquee: ENTER PASSWORD
 - Main display top: PASS
 - Main display bottom: 0000 (flashing)
- Correct password – Allows operator to enter setup mode for custom programming options.
- Incorrect password – Password incorrect or not entered correctly.
- System password:
 - Marquee: SYSTEM PASS INCORRECT
 - Main display: E035
- Calibration password:
 - Marquee: CAL PASS INCORRECT
 - Main display: E034
- Verify password and re-enter it.

If password(s) are de-activated:

- System enters the setup mode at the last setup menu option used by the operator.
- Marquee: Flashes current menu option
- Main display: SEL SCrn

3.2 Setup Mode Overview

The setup mode features programmable menu options. The order of the menu options is dependent on the direction the operator scrolls by pressing  or . The menu options are listed below by pressing .

■ General Setup Mode Menu Options

The following menu options are displayed in the main setup mode of one and two channel analyzers.

● PASS

Set either of two password options:

- System password – Setup settings protected, accessed by authorized operators only
- Calibration password – Calibration menu data is protected, accessed by authorized operators only
- Default password is 0000 – Disables both passwords
- Forgot your password? Contact Response Center

● DATE

Set the date in US or Europe format:

- Enter month, day and year
- Default date – System will continue to keep date and time due to battery back up, operator must set in accordance to local time zone
- If the battery is removed, the system will show 01/01/2000

● TIME

Set the time:

- Enter hour and minutes in 24 hour format
- Default time – System will continue to keep date and time due to battery back up, operator must set in accordance to local time zone
- If the battery is removed the system will show 00:01

● LOG

Set the data logging interval for measure log (calibration and error logs are accessed in the test mode):

- Set the log interval as hour:minute (HH:MM)
- Default log interval is 00:00 – logging disabled
- Minimum log interval is 1 minute, maximum log interval is 99 hours and 59 minutes

● RSET

Reset the analyzer to factory defaults for setup parameters:

- Used to troubleshoot the system (a hard reset can be performed if the keypad and software are not responding, refer to Section 6.4, Resetting the Analyzer)



WARNING

Resetting the analyzer will lose all stored information including relay, logs and calibration settings.

● DISP

Set the automatic lighting options for the backlit display:

- AUtO – Brightness will change in response to ambient light source
- On – Backlit display is always on
- OFF – Backlit display is always off
- Default display – AUtO

● MDL

Sets the analyzer to the hydrazine application mode.

NOTE

Changing the application mode will reset the analyzer, restore the default parameters and clear any saved calibration information.

● MEAS

Set the number of significant digits, mV display option and concentration units displayed when in the measure mode:

- Set the number of significant digits displayed measure mode
 - Scroll through 2, 3 or 4 significant digits
 - Default significant digits – 3
- Enable mV values to be displayed on the second line
 - Scroll between On or OFF
 - Default mV setting – OFF
- Set the displayed concentration units
 - Scroll through AUtO (automatically ranges from ppb to ppm), PPb (parts per billion, ppb), or PP (parts per million, ppm)
 - Default displayed concentration units – AUtO

● HOLD

Set the time that the system will remain on hold before the actual measurements are displayed after a calibration:

- Once the hold time expires, the system implements any programmed changes to settings in the setup mode
- After a calibration, the hold function allows the operator to rinse the electrodes prior to recording actual measurement values
- Default hold time – 30 minutes

● TADJ

Adjust the temperature reading from the ATC probe by ± 5.0 °C:


- Default adjustment – 0.0 °C

● ALRM

Set up to three alarms – high, low and an error signaling contact:

- Relays 1 and 2 (rLY1, rLY2) are normally open dry contacts used to set high and low alarms for measurement values
 - rLY1 and rLY2 options – OFF, HI, LO
- Relay 3 (rLY3) is normally a closed contact that can be dedicated to errors (will close if power to analyzer is lost), this alarm is influenced by calibration, errors and offline or hold status
 - rLY3 options – OFF, CAL, HOLD, Err
- Default setting for all alarms – OFF

Setup Menu
Version 5.14

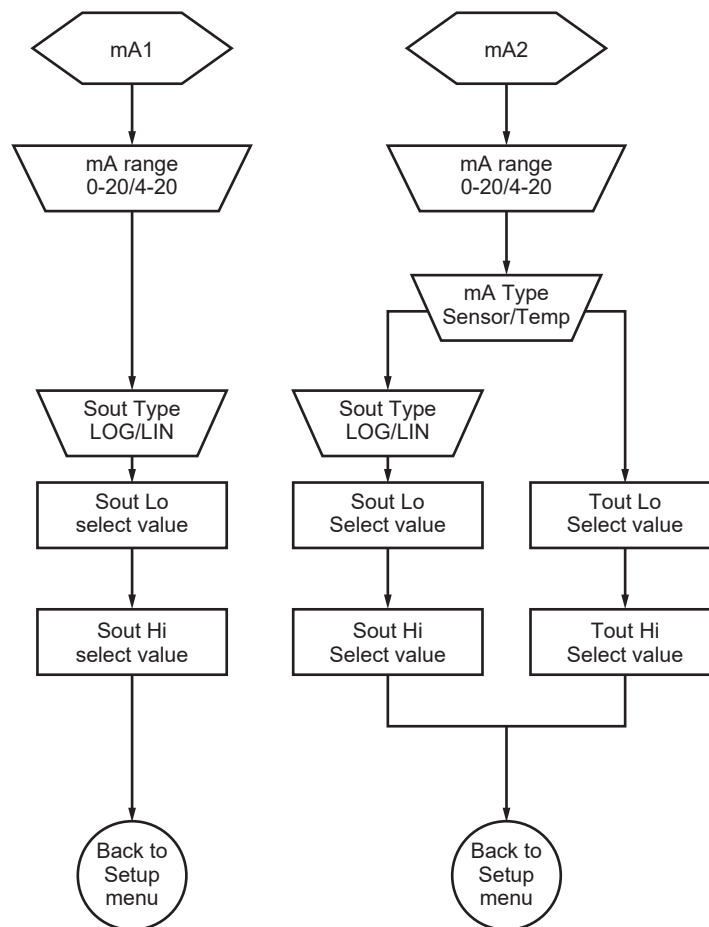

● mA1

Set the mA1 analog current output:

- Scroll between 4-20 mA or 0-20 mA current signals
 - The outputs share a common return, but are isolated from the main circuitry of the analyzer
 - Default output current: 4-20 mA
- Scroll between logarithmic (LOg) and linear (LIn) scale.
- Set the low and high limits for the sensor output (SOUT)
 - Default – 1.0 ppb (low) and 100 ppb (high)

● mA2

Set the mA2 analog current output:

- Scroll between 4-20 mA or 0-20 mA current signals
 - The outputs share a common return, but are isolated from the main circuitry of the analyzer
 - Default output current: 4-20 mA

Select Sensor or Temperature for this output (SEnS and tEnP)

If Sense -

- Scroll between logarithmic (LOg) and linear (LIn) scale for SOUT
- Set the low and high limits for the sensor output (SOUT)
 - Default – 1.0 ppb (low) and 100 ppb (high)

If Temp -

- Set the low and high limits for the temperature output (tOUT)
 - Default – 5.0 °C (low) and 45.0 °C (high)

● mADJ

Set the mA offset adjustment value for the mA1 and mA2 outputs:

- Select the OUT1 or OUT2 output
- Scroll the numeric offset value and positive or negative offset value
- Default mA offset – 00.0 mA

● TEST

Test relays and analog output lines (DIAGNOSTICS will appear in the mode indicator):

- Method to activate/deactivate relays and outputs to be tested
- Verify the accuracy of the analog outputs when used with an external loop calibrator
- Provides the values and settings for the mA output and relays
- mA output
 - 4-20
 - The low and high values represented by mA1 and mA2
- Relay status
 - Set RLY1, RLY2 and RLY3 status to OFF or On

● CAL




Set calibration frequency in hours:




- High limit is 19999 hours
- Low limit is 00000 hours
- Default setting – 720 hours

















● DYN













Set values for customized Dynamic Two Point Calibration (DYN):










- Programmable for the analyzer flow rate; concentration (ppm), percent flow and range of standard 1 and concentration (ppm), percent flow and range of standard 2
 - Default analyzer flow rate: 40 mL/minute
 - Default standard concentration: 2 ppm
 - Default standard 1 (Std1) percent flow (Hydrazine): 99.9%
 - Default standard 1 (Std1) range: x/100
 - Default standard 2 (Std2) percent flow (Hydrazine): 52.5%
 - Default standard 2 (Std2) range: x/10










Default	Operator Action	Scrolling Marquee	Main Display	Notes
	SETUP (One Channel Analyzer)			
	Press  to enter setup mode <ul style="list-style-type: none"> • SETUP appears as the mode indicator in the mode window • HOLD is displayed while in the setup mode • The system will enter the setup mode at the last saved menu option 	PASS DATE TIME LOG RSET DISP MEAS HOLD TADJ ALRM mA1 mA2 mADJ TEST CAL DKA	SEL SCrn	The displayed menu options depend on the measurement capability of the analyzer.
	Press  to loop through the menu options			
	Press  to select the desired menu option and enter the submenu to customize setup parameters			

Default	Operator Action	Scrolling Marquee	Main Display	Notes
	SETUP (Two Channel Analyzer)			
	Press  to enter setup mode <ul style="list-style-type: none"> • SETUP appears as the mode indicator in the mode window • HOLD is displayed while in the setup mode • The system will enter the setup mode at the last saved menu option 	PASS DATE TIME LOG RSET DISP CH1 MEAS HOLD TADJ ALRM mA1 mA2 mADJ TEST CAL DKA CH2 MDL HOLD TCMP TADJ ALRM mA1 mA2 mADJ TEST CAL PH	SEL SCrn SEL SCrn SEL SCrn SEL SCrn SEL SCrn SEL SCrn SEL SCrn SEL CH1 SEL CH1 SEL CH1 SEL CH1 SEL CH1 SEL CH1 SEL CH1 SEL CH1 SEL CH1 SEL CH1 SEL SCrn SEL CH2 SEL CH2 SEL CH2 SEL CH2 SEL CH2 SEL CH2 SEL CH2 SEL CH2 SEL CH2 SEL CH2	The list of menu options shown for CH2 are examples only. The displayed menu options for CH2 depend on the measurement capability of the channel. If only one board is installed in the analyzer, CH1 and CH2 will not be shown in the scrolling marquee and all of the menu options will be listed in the main setup mode.
	Press  to loop through the menu options			
	Press  to select the desired menu option and enter the submenu to customize setup parameters			

Default	Operator Action	Scrolling Marquee	Main Display	Notes
	PASS	PASS (flashing)	SEL SCrn	
	Press  to set new passwords			
0 0 0 0		SET-UP NEW SYSTEM PASSWORD	PASS # # # # (first digit flashing)	
	Press  /  to set the first digit Press  to move to the next digit Press  /  to set the values of the remaining digits and press  to move through the remaining digits	SET-UP NEW SYSTEM PASSWORD	PASS # # # # (change flashing digit)	Do not scroll first digit above 9
	Press  to accept the system password and advance to the next screen to set the calibration password			
0 0 0 0		SET-UP NEW CALIBRATION PASSWORD	PASS # # # # (first digit flashing)	
	Press  /  to set the first digit Press  to move to the next digit Press  /  to set the values of the remaining digits and press  to move through the remaining digits	SET-UP NEW CALIBRATION PASSWORD	PASS # # # # (change flashing digit)	Do not scroll first digit above 9
	Press  to accept the calibration password and return to the main setup mode			
		PASS (flashing)	SEL SCrn	
	Press  to scroll to the next menu			

Default	Operator Action	Scrolling Marquee	Main Display	Notes
	DATE	DATE (flashing)	SEL SCrn	
	Press  to set the date			
US		SET USA OR EUROPEAN	US (flashing)	
	Press  /  to scroll between US and EUR0	SET USA OR EUROPEAN	US or EUR0 (flashing)	
	Press  to accept the setting and advance to the next screen			
01/01/ 2000		ENTER DATE MM/ DD/YYYY (US) or ENTER DATE DD/ MM/YYYY (EUR0)	##.## (Month. Day) 20## (Year) or ##.## (Day. Month) 20## (Year) (first digit flashing)	
	Press  /  to set the first digit Press  to move to the next digit Press  /  to set the values of the remaining digits and press  to move through the remaining digits	ENTER DATE MM/ DD/YYYY (US) or ENTER DATE DD/ MM/YYYY (EUR0)	##.## (Month. Day) 20## (Year) or ##.## (Day. Month) 20## (Year) (change flashing digit)	
	Press  to accept the date setting and return to the main setup mode			
		DATE (flashing)	SEL SCrn	
	Press  to scroll to the next menu			








Default	Operator Action	Scrolling Marquee	Main Display	Notes
	TIME	TIME (flashing)	SEL SCrn	
	Press  to set the time			
00:01		ENTER 24HR TIME HOUR/MINUTE	##:## (hour : minute) (first digit flashing)	
	Press  /  to set the first digit Press  to move to the next digit Press  /  to set the values of the remaining digits and press  to move through the remaining digits	ENTER 24HR TIME HOUR/ MINUTE	##:## (hour : minute) (change flashing digit)	Set in 24hour time format
	Press  to accept the time setting and return to the main setup mode			
		TIME (flashing)	SEL SCrn	
	Press  to scroll to the next menu			

Default	Operator Action	Scrolling Marquee	Main Display	Notes
	LOG	LOG (flashing)		SEL SCrn
	Press  to set the log interval			
00:00		SET LOG TIME IN HOUR/ MINUTE	##:## (hour : minute) LOg (first digit flashing)	
	Press  /  to set the first digit Press  to move to the next digit Press  /  to set the values of the remaining digits and press  to move through the remaining digits	SET LOG TIME IN HOUR/ MINUTE	##:## (hour : minute) LOg (change flashing digit)	To disable the log enter 0000 for the log interval The minimum log interval is 1 minute and the maximum log interval is 99 hours and 59 minutes
	Press  to accept the log setting and return to the main setup mode			
		LOG (flashing)	SEL SCrn	
	Press  to scroll to the next menu			



WARNING






The reset command will erase all operator settings, logs and calibration data. The analyzer will need to be set up and calibrated again before it can resume operation.

Default	Operator Action	Scrolling Marquee	Main Display	Notes
	RSET	RSET (flashing)	SEL SCrn	
	Press  to reset the analyzer			
		PUSH TEST VIEWENTER TO RESET	rSet ?	
	To Reset the Analyzer:			
	Press  Press  Press  When the reset is complete, the system will return to the measure mode. The operator will need to re-enter the setup mode to continue programming the setup parameters. Press  to return to the setup mode.	PUSH TEST VIEWENTER TO RESET	rSet ?	This command resets all previously set parameters to factory default values. Use this command only to set the analyzer to original factory setup values.
	To Abort the Reset:			
	Press  to return to the main setup mode	PRESS TEST VIEW ENTER TO RESET	rSet ?	
		RSET (flashing)	SEL SCrn	
	Press  to scroll to the next menu			







WARNING





Resetting the analyzer will erase all stored information including relay, logs and calibration settings.







Default	Operator Action	Scrolling Marquee	Main Display	Notes
	DISP	DISP (flashing)	SEL SCrn	
	Press  to set the lighting option for the backlit display			
AUTO		BACK LITE	LiTE AUtO (flashing)	
	Press  /  to scroll through AUTO, OFF and On settings	BACK LITE	LiTE AUtO, OFF or On (flashing)	
	Press  to accept the display setting and return to the main setup mode			
		DISP (flashing)	SEL SCrn	
	Press  to scroll to the next menu			

NOTE

The following menu options are for analyzers with two modules installed only. If two channels are used, select the channel number in the main setup mode (CH1 or CH2) and additional menu options will be displayed.













Default	Operator Action	Scrolling Marquee	Main Display	Notes
	CH1	CH1 (flashing)	SEL SCrn	CH1 will not be shown in scrolling marquee if only one board is installed
	Press  to set the channel 1 specific menus in the setup mode			
	Press  to loop through the channel specific menu options	MEAS (flashing)	SEL CH1	
	Press  to select a menu option and customize the parameter (refer to the menu option displays that are shown on the following pages for detailed instructions)			
		CH1 (flashing)	SEL SCrn	
	Press  to scroll to the next menu			






























Default	Operator Action	Scrolling Marquee	Main Display	Notes
	CH2	CH2 (flashing)	SEL SCrn	CH2 will not be shown in scrolling marquee if only one board is installed
	Press  to set the channel 2 specific menus in the setup mode			
	Press  to loop through the channel specific menu options	MDL (flashing)	SEL CH2	
	Press  to select a menu option and customize the parameter (when a pH/ORP or conductivity board is installed on channel 2, refer to the Thermo Scientific Orion 2100 Series pH/ORP Analyzer and Conductivity Analyzer User Guide for detailed instructions on the menu option displays)			
		CH2 (flashing)	SEL SCrn	
	Press  to scroll to the next menu			











Default	Operator Action	Scrolling Marquee	Main Display	Notes
	MDL	MDL (flashing)	SEL SCrn	SEL CH1 or SEL CH2 on main display of two channel analyzer
	Press  to set the measurement parameter for the analyzer			
PH		SELECT HYDRAZINE	HYdr (flashing)	
	Press  /  to scroll between HYdr and ELI and select the desired measurement parameter	SELECT HYDRAZINE	HYdr (flashing)	
	Press  to accept the measurement setting and return to the main setup mode			
		CH1 or CH2 (flashing)	SEL SCrn	Displayed for two channel analyzer
	Press  to return to the channel specific menu options in the setup mode			Action required for two channel analyzer
		MDL (flashing)	SEL SCrn	
	Press  to scroll to the next menu			





























NOTE

Changing the application mode will reset the analyzer, restore the default parameters and clear any saved calibration information.


























Default	Operator Action	Scrolling Marquee	Main Display	Notes
	MEAS	MEAS (flashing)	SEL SCrn	SEL CH1 or SEL CH2 on main display of two channel analyzer
	Press  to set measure parameters			
3		SET NUMBER OF SIGNIFICANT DIGITS	Slg 3 (flashing)	
	Press  /  to scroll through 2, 3 and 4	SET NUMBER OF SIGNIFICANT DIGITS	Slg 2, 3 or 4 (flashing)	
	Press  to accept the setting and advance to the next screen			
OFF		SHOW MV ON SINGLE CHANNEL DISPLAY	OFF (flashing)	
	Press  /  to scroll between OFF and On	SHOW MV ON SINGLE CHANNEL DISPLAY	OFF or On (flashing)	
	Press  to accept the setting and advance to the next screen			
AUto		SELECT ISE UNIT	UnIt AUto (flashing)	
	Press  /  to scroll through AUto, PPb and PP	SELECT ISE UNIT	UnIt AUto, PPb or PP (flashing)	PP is used as an abbreviation for ppm
	Press  to accept the setting and return to the main setup mode			
		CH1 or CH2 (flashing)	SEL SCrn	Displayed for two channel analyzer
	Press  to return to the channel specific menu options in the setup mode			Action required for two channel analyzer
		MEAS (flashing)	SEL SCrn	SEL CH1 or SEL CH2 on main display of two channel analyzer
	Press  to scroll to the next menu			

Default	Operator Action	Scrolling Marquee	Main Display	Notes
	HOLD	HOLD (flashing)	SEL SCrn	SEL CH1 or SEL CH2 on main display of two channel analyzer
	Press  to set the hold time			
00:30		ENTER HOLD TIME HOUR/MINUTE	##:## (first digit flashing)	
	Press  /  to set the first digit Press  to move to the next digit Press  /  to set the values of the remaining digits and press  to move through the remaining digits	ENTER HOLD TIME HOUR/MINUTE	##:## (change flashing digit)	
	Press  to accept the setting and advance to the next screen			
LAST		ENTER HOLD STATELAST OR USER VALUE	LAST (flashing)	
	Press  /  to scroll between LAST and USER	ENTER HOLD STATELAST OR USER VALUE	LAST or USER (flashing)	
	Press  to accept the setting and advance to the next screen			
21.0		ENTER FIXED USER VALUE IN mA	##.# (first digit flashing)	Displayed if USER was selected in previous screen
	Press  /  to set the first digit Press  to move to the next digit Press  /  to set the values of the remaining digits and press  to move through the remaining digits	ENTER FIXED USER VALUE IN mA	##.# (change flashing digit)	Action required if USER was selected in previous screen
	Press  /  to set the first digit Press  to move to the next digit Press  /  to set the values of the remaining digits and press  to move through the remaining digits	ENTER FIXED USER VALUE IN mA	##.# (change flashing digit)	Action required if USER was selected in previous screen
	Press  to accept the setting and advance to the next screen			Action required if USER was selected in previous screen
OFF		HOLD TO 22mA WHEN ERROR	OFF (flashing)	
	Press  /  to scroll between OFF and On	HOLD TO 22mA WHEN ERROR	OFF or On (flashing)	
	Press  to accept the setting and return to the main setup mode			
		CH1 or CH2 (flashing)	SEL SCrn	Displayed for two channel analyzer
	Press  to return to the channel specific menu options in the setup mode			Action required for two channel analyzer
		HOLD (flashing)	SEL SCrn	SEL CH1 or SEL CH2 on main display of two channel analyzer
	Press  to scroll to the next menu			
































Default	Operator Action	Scrolling Marquee	Main Display	Notes
	TADJ	TADJ (flashing)	SEL SCrn	SEL CH1 or SEL CH2 on main display of two channel analyzer
	Press  to set the temperature adjustment value			
0.0 C		TEMPERATURE ADJUSTMENT	AdJ #. # c (first digit flashing)	
	Press  /  to set the first digit Press  to move to the next digit Press  /  to set the value of the next digit	TEMPERATURE ADJUSTMENT	AdJ #. # c (change flashing digit)	The maximum temperature adjustment is $\pm 5.0^{\circ}\text{C}$
	Press  to set a positive or negative temperature value	TEMPERATURE ADJUSTMENT	AdJ - #. # c	
	Press  to accept the setting and return to the main setup mode			
		CH1 or CH2 (flashing)	SEL SCrn	Displayed for two channel analyzer
	Press  to return to the channel specific menu options in the setup mode			Action required for two channel analyzer
		TADJ (flashing)	SEL SCrn	SEL CH1 or SEL CH2 on main display of two channel analyzer
	Press  to scroll to the next menu			
















Default	Operator Action	Scrolling Marquee	Main Display	Notes
	ALRM	ALRM (flashing)	SEL SCrn	SEL CH1 or SEL CH2 on main display of two channel analyzer
	Press  to set the alarms			
OFF		SELECT ALARM 1 HIGH LOW OR OFF	rLY1 OFF (flashing)	
	Press  /  to scroll through OFF, HI and LO	SELECT ALARM 1 HIGH LOW OR OFF	rLY1 OFF, HI or LO (flashing)	
	Press  to accept the setting and advance to the next screen			
100 ppb	Set the HI or LO value for rLY1: Press  to move the decimal point Press  /  to set the first digit Press  to move to the next digit Press  /  to set the values of the remaining digits and press  to move through the remaining digits	ENTER VALUE	rLY1 ###.## (change flashing digit)	Displayed if HI or LO was selected for rLY1 in previous screen
	Press  to accept the setting and advance to the next screen			Action required if HI or LO was selected for rLY1 in previous screen
OFF		SELECT ALARM 2 HIGH LOW OR OFF	rLY2 OFF (flashing)	
	Press  /  to scroll through OFF, HI and LO	SELECT ALARM 2 HIGH LOW OR OFF	rLY2 OFF, HI or LO (flashing)	
	Press  to accept the setting and advance to the next screen			
1 ppm	Set the HI or LO value for rLY2: Press  to move the decimal point Press  /  to set the first digit Press  to move to the next digit Press  /  to set the values of the remaining digits and press  to move through the remaining digits	ENTER VALUE	rLY2 ###.## (change flashing digit)	Displayed if HI or LO was selected for rLY2 in previous screen
	Press  to accept the setting and advance to the next screen			Action required if HI or LO was selected for rLY2 in previous screen
OFF		SELECT CALIBRATION HOLD ERROR OR OFF	rLY3 OFF (flashing)	
	Press  /  to scroll through OFF, CAL, HOLD and Err	SELECT CALIBRATION HOLD ERROR OR OFF	rLY3 OFF, CAL, HOLD or Err (flashing)	
	Press  to accept the setting and return to the main setup mode			
		CH1 or CH2 (flashing)	SEL SCrn	Displayed for two channel analyzer
	Press  to return to the channel specific menu options in the setup mode			Action required for two channel analyzer
		ALRM (flashing)	SEL SCrn	SEL CH1 or SEL CH2 on main display of two channel analyzer
	Press  to scroll to the next menu			




















Configuring the analog output mA1





















Default	Operator Action	Scrolling Marquee	Main Display	Notes
	mA1	mA1 (flashing)	SEL SCrn	SEL CH1 or SEL CH2 on main display of two channel analyzer
	Press  to set the analog output 1			
4-20	Press  /  to scroll between 4-20 and 0-20	SELECT 0-20 OR 4-20	4-20 or 0-20 (flashing)	
	Press  to accept the setting and advance to the next screen			
	Press  /  to scroll between LOG and LIn	SELECT LOG OR LINEAR OUTPUT	SOUt LOg or LIn (flashing)	
	Press  to accept the setting and advance to the next screen			
1 ppb		mA SENSOR OUTPUT LOW VALUE	LO ###.# (first digit flashing)	
	Press  to move the decimal point Press  /  to set the first digit Press  to move to the next digit Press  /  to set the values of the remaining digits and press  to move through the remaining digits	mA SENSOR OUTPUT LOW VALUE	LO ###.# (change flashing digit)	
	Press  to accept the setting and advance to the next screen			
100 ppb		mA SENSOR OUTPUT HIGH VALUE	HI ###.# (first digit flashing)	
	Press  to move the decimal point Press  /  to set the first digit Press  to move to the next digit Press  /  to set the values of the remaining digits and press  to move through the remaining digits	mA SENSOR OUTPUT HIGH VALUE	HI ###.# (change flashing digit)	
	Press  to accept the setting and return to the main setup mode			
		CH1 or CH2 (flashing)	SEL SCrn	Displayed for two channel analyzer
	Press  to return to the channel specific menu options in the setup mode			Action required for two channel analyzer
		mA1 (flashing)	SEL SCrn	SEL CH1 or SEL CH2 on main display of two channel analyzer
	Press  to scroll to the next menu			
















Configuring the analog output mA2











Default	Operator Action	Scrolling Marquee	Main Display	Notes
	mA2	mA2 (flashing)	SEL SCrn	SEL CH1 or SEL CH2 on main display of two channel analyzer
	Press  to set the analog output 2			
4-20	Press  /  to scroll between 4-20 and 0-20	SELECT 0-20 OR 4-20	4-20 or 0-20 (flashing)	
	Press  to accept the setting and advance to the next screen			
		AOUT 2 SENSOR OR TEMPERATURE	SEnS (flashing)	
	If choosing Sensor:			
	Press  /  to scroll between SEnS or tEnP and select SEnS	AOUT 2 SENSOR OR TEMPERATURE	SEnS (flashing)	
	Press  to accept the setting and advance to the next screen			
LOg	Press  /  to scroll between LOg and LIn	SELECT LOG OR LINEAR OUTPUT	LOg or LIn (flashing)	
	Press  to accept the setting and advance to the next screen			
1 ppb		mA SENSOR OUTPUT LOW VALUE	LO ###.# (first digit flashing)	
	Press  to move the decimal point Press  /  to set the first digit Press  to move to the next digit Press  /  to set the values of the remaining digits and press  to move through the remaining digits	mA SENSOR OUTPUT LOW VALUE	LO ###.# (change flashing digit)	
	Press  to accept the setting and advance to the next screen			
100 ppb		mA SENSOR OUTPUT HIGH VALUE	HI ###.# (first digit flashing)	
	Press  to move the decimal point Press  /  to set the first digit Press  to move to the next digit Press  /  to set the values of the remaining digits and press  to move through the remaining digits	mA SENSOR OUTPUT HIGH VALUE	HI ###.# (change flashing digit)	
	Press  to accept the setting and advance to the next screen			
		CH1 or CH2 (flashing)	SEL SCrn	Displayed for two channel analyzer
	Press  to return to the channel specific menu options in the setup mode			Action required for two channel analyzer
		mA2 (flashing)	SEL SCrn	SEL CH1 or SEL CH2 on main display of two channel analyzer
	Press  to scroll to the next menu			
	If choosing temperature:			
	Press  /  to scroll between SEnS or tEnP and select tEnP	AOUT 2 SENSOR OR TEMPERATURE	tEnP (flashing)	
	Press  to accept the setting and advance to the next screen			
05.0 C		mA TEMP OUTPUT LOW VALUE	LO ##.# c (first digit flashing)	



































Default	Operator Action	Scrolling Marquee	Main Display	Notes
	Press  /  to set the first digit Press  to move to the next digit Press  /  to set the values of the remaining digits and press  to set a positive or negative temperature value	mA TEMP OUTPUT LOW VALUE	LO ##.# C (change flashing digit)	
	Press  to accept the setting and advance to the next screen			
45.0 C		mA TEMP OUTPUT HIGH VALUE	HI ##.# c (first digit flashing)	
	Press  /  to set the first digit Press  to move to the next digit Press  /  to set the values of the remaining digits and press to move through the remaining digits	mA TEMP OUTPUT HIGH VALUE	HI ##.# c (change flashing digit)	
	Press  to accept the setting and return to the main setup mode			
		CH1 or CH2 (flashing)	SEL SCrn	Displayed for two channel analyzer
	Press  to return to the channel specific menu options in the setup mode			Action required for two channel analyzer
		mA2 (flashing)	SEL SCrn	SEL CH1 or SEL CH2 on main display of two channel analyzer
	Press  to scroll to the next menu			




Default	Operator Action	Scrolling Marquee	Main Display	Notes
	mADJ	mADJ (flashing)	SEL SCrn	SEL CH1 or SEL CH2 on main display of two channel analyzer
	Press  to set the sensor and temperature mA offset values			
		SELECT mA1 OR mA2 OUTPUT	OUT1 or OUT2 (flashing)	
	Press  /  to scroll between OUT1 or OUT2 and select OUT1	SELECT mA1 OR mA2 OUTPUT	OUT1 (flashing)	
	Press  to accept the setting and advance to the next screen			
0.00		mA1 OUTPUT ADJUSTMENT	AdJ 0.0# (last flashing digit)	
	Press  /  to set the sensor mA offset value Press  to set a positive or negative sensor mA offset	mA1 OUTPUT ADJUSTMENT	AdJ 0.0# (change flashing digit)	
	Press  to accept the setting and return to the main setup mode			
		CH1 or CH2 (flashing)	SEL SCrn	Displayed for two channel analyzer
	Press  to return to the channel specific menu options in the setup mode			Action required for two channel analyzer
		mADJ (flashing)	SEL SCrn	SEL CH1 or SEL CH2 on main display of two channel analyzer
	Press  to set the sensor and temperature mA offset values			
		SELECT mA1 OR mA2 OUTPUT	OUT1 or OUT2 (flashing)	
	Press  /  to scroll between OUT1 or OUT2 and select OUT2	SELECT mA1 OR mA2 OUTPUT	OUT2 (flashing)	
	Press  to accept the setting and advance to the next screen			
0.00		mA2 OUTPUT ADJUSTMENT	AdJ 0.0# (last flashing digit)	
	Press  /  to set the temperature mA offset value Press  to set a positive or negative temperature mA offset	mA2 OUTPUT ADJUSTMENT	AdJ 0.0# (change flashing digit)	
	Press  to accept the setting and return to the main setup mode			
		CH1 or CH2 (flashing)	SEL SCrn	Displayed for two channel analyzer
	Press  to return to the channel specific menu options in the setup mode			Action required for two channel analyzer
		mADJ (flashing)	SEL SCrn	SEL CH1 or SEL CH2 on main display of two channel analyzer
	Press  to scroll to the next menu			

Default	Operator Action	Scrolling Marquee	Main Display	Notes
	TEST	TEST (flashing)	SEL SCrn	SEL CH1 or SEL CH2 on main display of two channel analyzer
	Press  to test the mA outputs (4-20) and relays (rLY)			
	To Test OUT2			
4-20	Press  /  to scroll between 4-20 and rLY settings and select 4-20	SELECT mA OR RELAY	tESt 4 - 20 (flashing)	
	Press  to test 4-20 outputs			
		SELECT mA1 OR mA2 OUTPUT	4 - 20 OUT1 or OUT2 (flashing)	
	Press  /  to scroll between OUT1 and OUT2 settings and select OUT2	SELECT mA1 OR mA2 OUTPUT	4 - 20 OUT1 or OUT2 (flashing)	
	Press  to display the OUT2 low			
Actual low value displayed		mA TEMP OUTPUT LOW VALUE	LO #. # c	4.0 mA are sourced at output terminal 11
	Press  to display the OUT2 high			
Actual high value displayed		mA TEMP OUTPUT HIGH VALUE	HI #. # c	20 mA are sourced at output terminal 11
	Press  to accept the test and return to the main setup mod			
		CH1 or CH2 (flashing)	SEL SCrn	Display for two channel analyzer only
	Press  to return to the channel specific menu options in the setup mode			Action required for two channel analyzer only
		TEST (flashing)	SEL SCrn	SEL CH1 or SEL CH2 on main display of two channel analyzer
	Press  to test the mA outputs (4-20) and relays (rLY)			
	To Test mA1:			
4-20	Press  /  to scroll between 4-20 and rLY settings and select 4-20	SELECT mA OR RELAY	tESt 4 - 20 (flashing)	
	Press  to test 4-20 outputs			
		SELECT mA1 OR mA2 OUTPUT	4 - 20 OUT1 or OUT2 (flashing)	
	Press  /  to scroll between OUT1 and OUT2 settings and select OUT1	SELECT mA1 OR mA2 OUTPUT	4 - 20 OUT1 (flashing)	
	Press  to display the mA1 low value			
Actual low value displayed		mA SENSOR OUTPUT LOW VALUE	LO #. #	4.0 mA are sourced at output terminal 9
	Press  to display the mA1 high			
Actual high value displayed		mA SENSOR OUTPUT HIGH VALUE	HI #. #	20.0 mA are sourced at output terminal 9
	Press  to accept the test and return to the main setup mode			
		CH1 or CH2 (flashing)	SEL SCrn	Display for two channel analyzer only
	Press  to return to the channel specific menu options in the setup mode			Action required for two channel analyzer only

Default	Operator Action	Scrolling Marquee	Main Display	Notes
		TEST (flashing)	SEL SCrn	SEL CH1 or SEL CH2 on main display of two channel analyzer
	Press  to test the mA outputs (4-20) and relays (rLY)			
	To Test rLY			
4-20	Press  /  to scroll between 4-20 and rLY settings and select rLY	SELECT mA OR RELAY	tEst rLY (flashing)	
Actual rLY1 status	Press  to test relay outputs Press  /  to set the rLY1 setting OFF or On	USE ARROWS TO TOGGLE RELAY 1	rLY1 OFF or On	Relay contact according to screen indication
	Press  to accept the rLY1 test and move to the rLY2 test			
Actual rLY2 status	Press  /  to set the rLY2 setting OFF or On	USE ARROWS TO TOGGLE RELAY 2	rLY2 OFF or On	Relay contact according to screen indication
	Press  to accept the rLY2 test and move to the rLY3 test			
Actual rLY3 status	Press  /  to set the rLY3 setting OFF or On	USE ARROWS TO TOGGLE RELAY 3	rLY3 OFF or On	Relay contact according to screen indication
	Press  to accept the rLY3 test and return to the main setup mode			
		CH1 or CH2 (flashing)	SEL SCrn	Display for two channel analyzer only
	Press  to return to the channel specific menu options in the setup mode			Action required for two channel analyzer only
		TEST (flashing)	SEL SCrn	SEL CH1 or SEL CH2 on main display of two channel analyzer
	Press  to scroll to the next menu			

Default	Operator Action	Scrolling Marquee	Main Display	Notes
	CAL	CAL (flashing)	SEL SCrn	SEL CH1 or SEL CH2 on main display of two channel analyzer
	Press  to set the required calibration frequency			
0720		ENTER CALIBRATION FREQUENCY IN HOURS	CAL #### (first digit flashing)	To disable the calibration alarm, set the value to 0000
	Press  /  to set the first digit Press  to move to the next digit Press  /  to set the values of the remaining digits and press  to move through the remaining digits	ENTER CALIBRATION FREQUENCY IN HOURS	CAL #### (change flashing digit)	
	Press  to accept the setting and return to the main setup mode			
		CH1 or CH2 (flashing)	SEL SCrn	Display for two channel analyzer only
	Press  to return to the channel specific menu options in the setup mode			Action required for two channel analyzer
		CAL (flashing)	SEL SCrn	SEL CH1 or SEL CH2 on main display of two channel analyzer
	Press  to scroll to the next menu			

Default	Operator Action	Scrolling Marquee	Main Display	Notes
	DYN	DYN (flashing)	SEL SCrn	SEL CH1 or SEL CH2 on main display of two channel analyzer
	Press  to set custom DYN settings for the electrode calibration			
40mL/ minute		SET SAMP FLOW RATE IN mL/M	FLO ###.# (first digit flashing)	
	Press  /  to set the first digit Press  to move to the next digit Press  /  to set the values of the remaining digits and press  to move through the remaining digits	SET SAMP FLOW RATE IN mL/M	FLO ###.# (change flashing digit)	
	Press  to accept the setting and advance to the next screen			
2.0 ppm		SET STD CONCENTRATION	COnc ###.# (first digit flashing)	
	Press  /  to set the first digit Press  to move to the next digit Press  /  to set the values of the remaining digits and press  to move through the remaining digits	SET STD CONCENTRATION	COnc ###.# (change flashing digit)	
	Press  to accept the setting and advance to the next screen			
99.9 %		SET PUMP PERCENT FLOW FOR STD1	FLO ###.# (first digit flashing)	
	Press  /  to set the first digit Press  to move to the next digit Press  /  to set the values of the remaining digits and press  to move through the remaining digits	SET PUMP PERCENT FLOW FOR STD1	FLO ###.# (change flashing digit)	
	Press  to accept the setting and advance to the next screen			
100		SET PUMP RANGE FOR STD1	rAn 100 (flashing)	
	Press  /  to scroll through 1, 10, 100 and 1000	SET PUMP RANGE FOR STD1	rAn 1, 10, 100 or 1000 (flashing)	
	Press  to accept the setting and advance to the next screen			
52.5 %		SET PUMP PERCENT FLOW FOR STD2	FLO ###.# (first digit flashing)	
	Press  /  to set the first digit Press  to move to the next digit Press  /  to set the values of the remaining digits and press  to move through the remaining digits	SET PUMP PERCENT FLOW FOR STD2	FLO ###.# (change flashing digit)	
	Press  to accept the setting and advance to the next screen			
10		SET PUMP RANGE FOR STD2	rAn 10 (flashing)	
	Press  /  to scroll through 1, 10, 100 and 1000	SET PUMP RANGE FOR STD2	rAn 1, 10, 100 or 1000 (flashing)	

Default	Operator Action	Scrolling Marquee	Main Display	Notes
	Press  to accept the setting and return to the main setup mode			
		CH1 or CH2 (flashing)	SEL SCrn	Display for two channel analyzer
	Press  to return to the channel specific menu options in the setup mode			Action required for two channel analyzer
		DYN (flashing)	SEL SCrn	SEL CH1 or SEL CH2 on main display of two channel analyzer
	Press  to scroll to the next menu			

3.3 Shutdown and Start-Up Procedure

The following steps should be taken if a loss of sample flow is expected for more than one day. These procedures will prevent possible build-up of caustic reagent vapors in the analyzer.

■ Shutdown



WARNING












Be sure to read and observe the following requirements.

● Air Pump Shutdown



WARNING

Turn off the air pump prior to removing the reference electrode filling solution bottle. If the air pump is left on, it will spatter filling solution as the bottle is removed.

1. To access air pump, press .
2. Press / to scroll through parameters until TEST appears in marquee window.
3. Press  to access the TEST menu.
4. Press / to scroll through the TEST menu until Air appears in the main display.
5. Press .
6. Press / to toggle between On and OFF settings for the air pump power. Select the OFF setting. Changing the air pump setting to On or OFF will be indicated by a click sound.
7. Press  to accept the setting and return to the TEST menu.
8. Press  to return to the measure mode.

● Analyzer Shutdown

1. Shut off sample flow prior to the analyzer inlet. Refer to Chapter 4, Flow Cell Operation.
2. Disconnect the power. Refer to Section 2.3, Wiring the Analyzer.
3. Drain the flow cell.
4. Remove the reagent bottle and store it in a well-ventilated area such as a laboratory fume hood.
5. Carefully pull the iodide and reference electrodes out of the top of the flow cell and let them hang by their connectors.

6. Locate the protective cap from reference electrode kit and place it on the base of the reference electrode to prevent it from drying out.

■ Start-Up

1. Replace the diffusion tubing if the sample flow was off for more than a few days. Tubing becomes brittle with long-term exposure to the reagent. If the age of the reagent is not known, replace it and note the date in the maintenance records. Re-install the reagent bottle on the analyzer.
2. Restore sample flow to the analyzer. If necessary, adjust the pressure and flow rate through the analyzer to 40 mL/min.
3. Remove the protective cap from the reference electrode. Re-install the electrodes on the analyzer. Be careful not to disconnect the reservoir tubing from the reference electrode sidearm.
4. Allow the analyzer to stabilize for approximately 1 hour and then recalibrate. Refer to Section 4.4, Performing a DYN Calibration.

4. Calibration

4.1 Calibration Setup

The WE430 Hydrazine analyzer provides simple and fast calibration cycles using a dynamic two point calibration procedure, which requires the use of the dynamic calibrator.

To perform a dynamic two point calibration, the WE430 analyzer is first connected to a reductant-free sample stream. An appropriate diluted standard is prepared and then a syringe is filled with the diluted standard and mounted on the calibrator. The calibrator is then mounted near the analyzer and the syringe tubing is connected to the standard injection port. By adjusting the calibrator pump settings, two different flow rates produce two known standards that are diluted into the sample background.

Prior to performing a calibration, refer to Section 3.1, Use of the Setup Mode for instructions on how to properly configure the WE430 analyzer and set the analyzer to the hydrazine application mode.

■ DYN Calibration Recommendations

When the WE430 Hydrazine analyzer is first commissioned, it is advisable to flush out fluidics system overnight prior to the initial calibration and use. The electronics need not be turned on at this time. Refer to Chapter 4, Rinsing the Flow Cell.

- Install the sensing electrode, reference electrode and ATC probe in their respective flow cell holders. Refer to Section 2.6, Installation of a New Iodide Electrode, Section 2.7, Installation of ATC Probe and Section 2.8, Installation of a New Reference Electrode.
- To ensure the analyzer achieves stability and to minimize interference during calibration, the operator should minimize activity on the system during calibration.
- Maximum system accuracy is ensured through a fast, easy and accurate calibration performed in the expected sample range. This calibration procedure uses equipment supplied in the calibration kit including the dynamic calibrator.
- Wait at least one hour to calibrate the analyzer after changing the reagent.
- Use an oxygen scavenger-free sample during calibration.
- Fill and empty the syringe with standard at least three times before connecting the syringe to the dynamic calibrator.
- Always use a new syringe for each calibration.

■ Rinsing the Flow Cell



WARNING

Be sure to follow the procedure for rinsing the flow cell.

1. Open the sample inlet valve, see A.
 - Position the valve with the pointed end facing up for open position.
2. Open the bypass/needle valve by turning it counterclockwise, see B.
 - Check for the appropriate sample flow.
 - Adjust the pressure regulator if required. See step 3.
3. Adjust the knob on the pressure regulator, see C, so the ball in the flow meter indicates the correct flow rate reading, see D. The flow rate should be adjusted to 40 mL/minute.
 - Pull out the knob to unlock the setting and allow adjustment of the flow rate.
 - Turn the knob clockwise to increase the flow rate.
 - Turn the knob counterclockwise to decrease the flow rate.
 - Push in the knob to lock the setting.

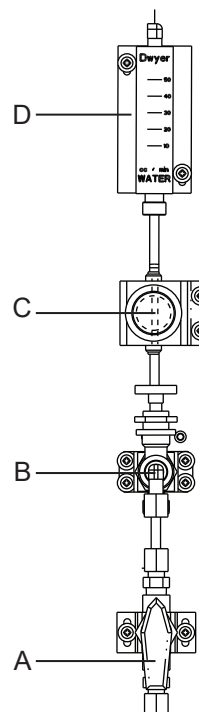


Figure 4.1
Fluidics Components

4.2 Dynamic Calibrator Operation

The dynamic calibrator is used to deliver a standard solution to the WE430 analyzer during calibration. Place the dynamic calibrator on a support near the analyzer. The calibrator location should be close enough to allow easy connection of the syringe tubing to the injection port on analyzer.

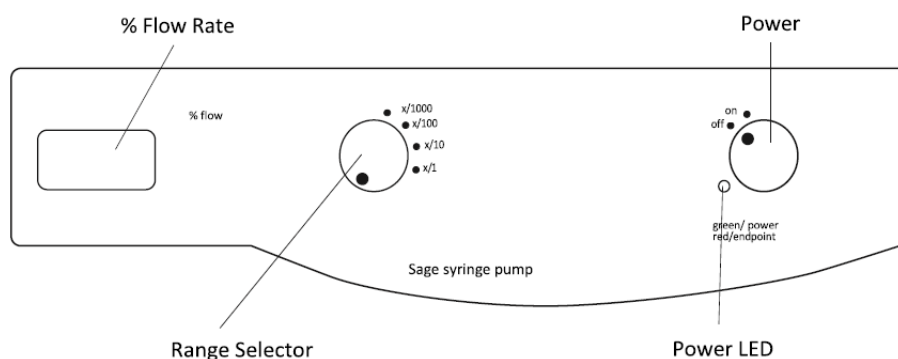


Figure 4.2

Dynamic Calibrator must be purchased directly from Thermo Fisher Scientific, Inc.

4.3 Dynamic Calibrator and Syringe Setup

1. Connect the calibration tubing to the syringe using the luer adapter and the 1/4" female connector. Only hand tighten the components, do not overtighten them.
2. Loosen the blue knob on the dynamic calibrator by turning it approximately 1/4 of a turn clockwise and pressing up on the bottom, inside part of the blue knob. Lift the blue syringe holder and turn it away from the syringe cradle. Set the filled syringe in the center syringe cradle. Rotate the syringe holder back in place across the syringe. Gently tighten the blue knob by turning it 1/4 of a turn counterclockwise.
3. Lift the black drive carriage straight up. Move the carriage back and re-engage it with the gears, leaving room for the syringe. Check the alignment of the drive carriage to ensure it is perfectly straight.
4. Replace the drive carriage on the gears. Advance the carriage to meet the syringe by momentarily turning the pump on high speed.

NOTE

Do not attempt to push the carriage manually. This may result in damage to the pump mechanism.















5. Set the blue endpoint limiter midway between the white indicator marks.








4.4 Performing a DYN Calibration





- To begin a DYN calibration, the system starts from the measure mode.
- The analyzer must be set to the hydrazine application in the setup mode prior to performing a calibration. Refer to Section 3.1, Use of the Setup Mode.

NOTE

A three-way valve can be installed upstream of the analyzer inlet to allow easy switching to a oxygen scavenger-free sample such as demineralizer output or condensate pump discharge.

Step	Operator Action	Scrolling Marquee	Main Display	Notes
1	Make sure that the analyzer is in the measure mode.	Actual temperature reading	Actual concentration reading	
2	Press  to initiate the calibration.			CAL appears as mode
3	If the calibration password is active, enter the calibration password by pressing  /  to set the first digit,  to move to the next digit,  /  to set the values of the remaining digits and  to move through the remaining digits. Press  to accept the password.	ENTER PASSWORD	PASS ####	
4		CH1 or CH2 (flashing)	CAL CHnL	Displayed for two channel analyzer
5	Press  /  to select the channel that will be calibrated and press  to begin the calibration.	CH1 or CH2 (flashing)	CAL CHnL	Action required for two channel analyzer
6		DYN or OFFL (flashing)	CAL tYPE	
7	Press  /  to select DYN and press  to accept the setting.	DYN (flashing)	CAL tYPE	







Step	Operator Action	Scrolling Marquee	Main Display	Notes
8	Polish the iodide sensing electrode. Connect the WE430 analyzer to an oxygen scavenger-free sample. Run the analyzer at 40 mL/minute for 30 minutes.	POLISH IODIDE ELECTRODE CONNECT TO OX--SCAV FREE SAMPLE WAIT 30 MINUTES	Actual readings flashing	Minutes will be counted down on the marquee.
9	Press  .	PRESS ENTER	Actual readings flashing	When 30 minutes have elapsed, the marquee will display PRESS ENTER.
10	Verify that the sample flow rate is actually 40 mL/minute. Adjust the sample flow rate if required. Make sure that the sample bypass valve is off during this step. Press  .	ADJUST SAMPLE FLOW TO 40 mL/MINUTE PRESS ENTER	FLO	For the best accuracy, measure the flow at the drain, weigh the timed discharge repeatedly and average the results.
11	Prepare a 2 ppm hydrazine standard using the 100 ppm hydrazine standard, Cat. No. 151810. To prepare a 2 ppm hydrazine standard, add 20 mL of the 100 ppm hydrazine standard to a one liter volumetric flask and dilute to the mark with distilled water. Mix the solution well.	SETUP PUMP PURGE AIR AND CONNECT SYRINGE TO INJECTION PORT OPEN VALVE DOT TO LEFT PRESS ENTER	SEt dYn	The 2 ppm standard will produce a 20 ppb and 100 ppb N ₂ H ₄ readings on the analyzer during calibration.
12	Fill a 20 cc syringe with the 2 ppm standard solution. Expel any air bubbles in the syringe. Connect the syringe tubing to the standard injection port. Open the port by turning the thumbscrew 1/4 of a turn to the right, so the dot is aligned with the direction of the flow. Press  .	SETUP PUMP PURGE AIR AND CONNECT SYRINGE TO INJECTION PORT OPEN VALVE DOT TO LEFT PRESS ENTER	SEt dYn	Refer to Section 4.2, Dynamic Calibrator Operation for instructions on how to install the syringe and set up the dynamic calibrator.
13	Turn on the dynamic calibrator. Turn the flow rate dial until the flow rate reads 999 (99.9% flow). Turn the range switch to x/100. Press  .	SET PUMP TO 999 PERCENT-FLOW AND X1/100 RANGE TURN PUMP ON PRESS ENTER	Std 1	The 2 ppm standard will produce a 20 ppb N ₂ H ₄ by the sample stream.
14	Wait 4 minutes.	MEASURING STD1 WAIT 4 MINUTES	Actual readings flashing	System circulates sample. Minutes will be counted down on the marquee.
15	Press  .	PRESS ENTER	Actual readings flashing	When 4 minutes have elapsed, the marquee will display PRESS ENTER.
16	Turn the flow rate dial until the flow rate reads 525 (52.5% flow). Turn the range switch to x/10. Press  .	SET PUMP TO 525 PERCENT-FLOW AND X1/10 RANGE PRESS ENTER	Std 2	The 2 ppm standard is diluted to 100 ppb N ₂ H ₄ by the sample stream.
17	Wait 3 minutes.	MEASURING STD2 WAIT 3 MINUTES	Actual readings flashing	System circulates sample. Minutes will be counted down on the marquee.
18	Press  .	PRESS ENTER	Actual readings flashing	When 3 minutes have elapsed, the marquee will display PRESS ENTER.
19	No action necessary.			System calculates new E ₀ and slope and checks for errors. If there is a calibration error, the appropriate error message will be displayed.





Step	Operator Action	Scrolling Marquee	Main Display	Notes
20	Press  to accept the new slope and E ₀ values or Press  to abort the calibration. The new slope and E ₀ values will not be saved. The last saved calibration prior to the aborted calibration will be used in the measure mode.	NEW CALIBRATION SLOPE AND E ₀ PRESS ENTER TO ACCEPT OR PRESS EXIT TO ABORT WITHOUT SAVING	Calculated Slope and E ₀	If  is pressed, refer to the Calibration Abort Steps section.
21	Turn off the dynamic calibrator. Close the standard injection port by turning the thumbscrew 1/4 of a turn to the left, so the dot is perpendicular with the direction of the flow. Press  .	TURN PUMP OFF CLOSE INJECTION VALVE DOT DOWN PRESS ENTER		
22	System will proceed to measure mode.	Actual temperature reading	Actual concentration reading	System enters measure mode, but will remain on hold until the hold timer expires. Default hold time is 30 minutes.

4.5 Calibration Error Codes

At any point during a calibration, the appropriate error message will be displayed if there is a calibration related error.

The following table lists common calibration error codes with their marquee display and required operator actions.

Step	Operator Action	Scrolling Marquee	Main Display	Notes
Stability Time Out Error				
Error 41	Press  to continue the calibration despite the reading instability. or Press  to abort the calibration and refer to Exit 3. Repeat the calibration or refer to the troubleshooting section.	READINGS WERE UNSTABLE PRESS ENTER TO CONTINUE CALIBRATION OR PRESS EXIT TO ABORT	E041	The required system stability was not reached and a time out error occurred. Perform electrode cleaning, conditioning and troubleshooting.
Calibration Errors				
Error 42	Press  to abort the calibration and refer to Exit 3. Verify that the correct standards were used during the calibration, the standard values were entered correctly and in the right order and the electrodes are working properly and then repeat the calibration.	INVALID SLOPE PRESS ENTER	E042	The calculated slope was invalid. Standard values were likely entered in the wrong sequence or wrong standard values were entered.
Error 107	Press  to abort the calibration and refer to Exit 3.	CALIBRATION DATA TOO CLOSE TOGETHER PRESS ENTER	E107	Use new standards. Perform electrode cleaning, conditioning and troubleshooting.
Error 109	Press  to continue the calibration despite the bad slope. or Press  to abort the calibration and refer to Exit 3.	CH1 BAD SLOPE PRESS ENTER	E109	The calculated slope was outside of the recommended range. Perform electrode cleaning and conditioning, refer to the troubleshooting section and repeat the calibration.

Step	Operator Action	Scrolling Marquee	Main Display	Notes
Error 110	Press  to continue the calibration despite the bad slope. or Press  to abort the calibration and refer to Exit 3.	CH2 BAD SLOPE PRESS ENTER	E110	The calculated slope was outside of the recommended range. Perform electrode cleaning and conditioning, refer to the troubleshooting section and repeat the calibration.
Error 125	Press  to abort the calibration and refer to Exit 3. Verify that the correct standards were used during the calibration, the standard values were entered correctly and in the right order and the electrodes are working properly and then repeat the calibration.	CH1 BAD OFFSETPRESS ENTER	E125	Use new standards. Perform electrode cleaning, conditioning and troubleshooting.
Error 126	Press  to abort the calibration and refer to Exit 3. Verify that the correct standards were used during the calibration, the standard values were entered correctly and in the right order and the electrodes are working properly and then repeat the calibration.	CH2 BAD OFFSETPRESS ENTER	E126	Use new buffers or standards. Perform electrode cleaning, conditioning and troubleshooting.

4.6 Calibration At Custom Concentrations Using DYN

The WE430 Hydrazine analyzer software has default values to accommodate standards added using the dynamic calibrator. The operator has the option to use alternate standards by changing, in the setup mode, the default values.

Hydrazine Default Values

Analyzer Flow Rate	= 40 mL/minute
Standard Concentration	= 2 ppm
Standard 1 Percent Flow	= 99.9%
Standard 1 Range	= x/100
Standard 2 Percent Flow	= 52.5%
Standard 2 Range	= x/10

Dynamic Calibrator Settings

Settings on the dynamic calibrator are based on a 20 cc syringe at 100% (39.7 mL/minute). The flow rate of the standard (F_{std}) is the 39.7 mL/minute multiplied by the percent setting, divided by the range. Refer to the dynamic calibrator user guide for additional information.

$$C = [(C_b \cdot F_b) + (C_{std} \cdot F_{std})] / (F_b + F_{std})$$

Where:

C = Measured concentration during calibration

C_b = Background concentration (assumed to be zero)

C_{std} = Concentration of standard in the syringe

F_b = Background flow rate of analyzer (approximately 40 mL/min).

F_{std} = Flow rate of standard

4.7 Dynamic Calibrator Check

1. The normal flow rate from the 20 cc syringe when the dynamic calibrator percent flow dial is set to 500 (equals 50% flow) and when the range switch is set at x/1 is 20 mL/minute. Therefore, the flow rate at x/10 is 2 mL/minute and at x/100 is 0.2 mL/minute.
2. Place a 10 mL graduated cylinder so that the calibration tubing will reach the top of the cylinder.
3. Turn the pump range switch to x/100 and allow the flow to begin and to fill the tubing completely, purging all air bubbles.
4. Simultaneously, insert the calibration tubing into the mouth of the graduated cylinder and start a stopwatch.
5. Allow the flow to continue into cylinder for exactly ten minutes. Remove the tubing from the cylinder and the pump off.
The total volume of the graduated cylinder should be 2.0 ± 0.1 mL.
If the total volume is not 2.0 ± 0.1 mL, the flow rate dial may be adjusted using the following formula:

$$\text{adjusted flow rate setting} = \text{present setting} \cdot \frac{\text{expected total volume}}{\text{actual total value}}$$

For example, if the actual total flow was 1.8 mL, the new flow rate setting will equal $= (500) \cdot (2.0/1.8) = 555$









6. Perform the same flow rate check with the range switch on x/10 using a 50 mL graduated cylinder. Set the percent flow dial to read 500 (50.0%).
7. Allow the flow to continue into cylinder for exactly five minutes. Remove the tubing from the cylinder and turn the pump off.
The total volume of the graduated cylinder should be 10.0 ± 1.0 mL.
Fine adjustment of the flow rate dial may be made if the total flow is different from the specified amount.
For example, if the actual total volume was 11.0 mL, the new flow rate setting will equal $= (500) (10.0/11.0) = 455$

























NOTE

For the best possible accuracy for the dynamic calibrator check, weigh volumes delivered for use in calculations.

4.8 Offline Calibration Procedure

The offline calibration feature is simply a one point calibration without slope change. The term "offline calibration" refers only to the fact that a sample from WE430 bypass is taken "offline" for laboratory analysis; in fact, no downtime is experienced and the analyzer remains online throughout the procedure.

Step	Operator Action	Scrolling Marquee	Main Display	Notes
1	Open the bypass/needle valve to redirect the sample flow.	Actual temperature reading	Actual concentration reading	
2	Press  to initiate the calibration.			HOLD and CAL appear as mode.
3	If the calibration password is active, enter the calibration password by pressing  /  to set the first digit,  to move to the next digit,  /  to set the values of the remaining digits  and to move through the remaining digits. Press  to accept the password.	ENTER PASSWORD	PASS # # # #	
4		CH1 or CH2 (flashing)	CAL CHnL	Displayed for two channel analyzer

Step	Operator Action	Scrolling Marquee	Main Display	Notes
5	Press  /  to select the channel that will be calibrated and press  to begin the calibration.	CH1 or CH2 (flashing)	CAL CHnL	Action required for two channel analyzer
6		DKA or OFFL (flashing)	CAL tYPE	
7	Press  /  to select OFFL and press  to accept the setting	OFFL (flashing)	CAL tYPE	
8	Wait 1 to 10 minutes.	MEASURING SAMPLE WAIT 1 MINUTE AWAITING DATA STABILITY	Actual readings flashing	System continuously evaluates the data until a stable condition is met.
9	Take a QC sample from the 2118XP analyzer bypass for laboratory analysis. Press  .	TAKE SAMPLE FROM BYPASS DRAIN PRESS ENTER TO USE METER THEN PRESS CAL TO ENTER LAB RESULTS	LAB	
10	Perform laboratory analysis on QC sample and return with results.	Actual temperature reading	Actual concentration reading	System will return to measure mode and operate as normal. CAL and MEASURE appear as mode.
11	Press  to resume the calibration.			HOLD and CAL appear as mode.
12	If the calibration password is active, enter the calibration password as described in step 3. Press  to accept the password.	ENTER PASSWORD	PASS # # # #	
13		CH1 or CH2 (flashing)	CAL CHnL	Displayed for two channel analyzer.
14	Press  /  to select the channel that will be calibrated and press  to begin the calibration.	CH1 or CH2 (flashing)	CAL CHnL	Action required for two channel analyzer.
15	Press  /  to select OFFL and press  to accept the setting.	OFFL (flashing)	CAL tYPE	
16	Enter the concentration value of the QC sample obtained from laboratory analysis: Press  to move the decimal point and set the value as ppm or ppb. Press  /  to set the first digit. Press  to move to the next digit. Press  /  to set the values of the remaining digits and press  to move through the remaining digits. Press  to save the value.	LAB ANALYSIS READY INPUT CONC VALUE FROM LAB PRESS ENTER TO CONTINUE OR PRESS EXIT TO ABORT	COnc # # # . # (change flashing digit)	
17		NEW CALIBRATION E ₀ PRESS ENTER TO ACCEPT OR PRESS EXIT TO ABORT	Actual E ₀ value	The system will display the recalculated the E ₀ .
18	Press  .			The system will return to the measure mode. Only MEASURE should appear as mode.

5. Analyzer Maintenance

5.1 Maintenance Schedule

The WE430 Hydrazine analyzer is designed for simple maintenance. Follow the instructions in this section to ensure proper operation of your analyzer.

■ Recommendations

To ensure proper maintenance and good analyzer performance, a service logbook should be kept.

- Record maintenance date and the type of service work completed.
- Mark the date and the fluid levels of the reagent and the date when it was replaced.
- Tag each electrode cable with the installation date of the electrode.

5.2 Weekly Maintenance

1. Check that the sample flow rate is 35 to 45 mL/minute. To alter the flow rate, pull out the locking knob of the pressure regulator, then rotate the black knob to increase (clockwise) or decrease (counterclockwise) sample flow. Push in the locking knob of the pressure regulator to lock the flow rate.
2. Inspect the analyzer for leakage. Diffusion tubing leakage is indicated by a rise in the level of reagent.
3. Check that there are no error indications and that the current concentration level is reasonable.
4. Check that the reference filling solution is adequate.
5. If required, wipe the analyzer with a damp cloth to remove dirt and dust particles.

5.3 Bi-Weekly Maintenance

Refer to Section 2.8, Installation of a New Reference Electrode.

■ Reference Electrode Filling Solution Replacement



WARNING

Turn off the air pump prior to removing the reference electrode filling solution bottle. If the air pump is left on, it will spatter filling solution as the bottle is removed.

The reference electrode filling solution needs to be replaced approximately every two weeks. If the reservoir is less than one quarter full, replace the solution. This should be checked every two weeks to ensure that the electrode does not run dry.

1. Remove the spent electrolyte bottle from the clip. Unscrew the cap and discard the bottle.
2. Remove the cap and seal from the new reference electrode filling solution. Check that the rubber gasket is properly aligned and then connect the cap and tubing assembly to bottle. The 1/8" tubing should extend into the bottle.
3. Invert the electrolyte bottle and snap it into the clip.
4. Use the special pushpin attached to the pressurized reference assembly on the analyzer to pierce a hole in the bottom of the bottle and re-pressure the reservoir by the air pump.
5. Dry the frit at the base of the reference electrode. Check the frit to see if a bead of fill solution forms, which indicates good electrolyte flow.

5.4 Monthly Maintenance

Calibration frequency is operator dependent for the most accurate and precise measurements.

5.4.1 Calibration

- Replacement of the reagent requires calibration. Refer to Section 4.4, Performing a DYN Calibration.
- Calibration intervals can be programmed using the setup mode. This will prompt the operator to recalibrate after a specific amount of time has passed. Refer to Section 3.1, Use of the Setup Mode.

5.4.2 Replacement of Sample Inlet Filter

1. If the sample flow can be adjusted with the pressure regulator to 50 mL/minute or more, skip this procedure.
2. Turn off sample flow by turning the inlet valve to the right.
3. Remove the filter hex cap using a 1 inch open-ended wrench.
4. Separate the filter cap with bypass/needle valve assembly from the filter body, retaining the ring.
5. Remove the filter element and soft gasket (if necessary).
6. Replace the gasket and press a new sintered element into the filter body.
7. Replace the hex cap and bypass/needle valve assembly and reposition the bypass drain line into the drain assembly.
8. Retighten the hex cap to approximately 75 pound-inch in torque.
9. Turn on the sample flow by turning the inlet valve left.
10. Check for leaks.

5.4.3 Polish Iodide Electrode

Refer to Section 2.6, Installation of a New Iodide Electrode.

Polish the iodide electrode according to the instructions that are included with the polishing strips.

Rinse the electrode thoroughly with distilled water, insert the iodide electrode into its holder in the flow cell and then plug the electrode cable marked "Sensing" into the top of the electrode.

5.4.4 Air Pump Check

The reference electrode fill solution level should drop at least 1/8" per month, which indicates good flow through the electrode frit. If the flow rate is low, the air pump should be tested for proper operation.

To test the air pump, remove the pushpin and tubing from the reference reservoir. Place the tip of the pushpin in a beaker of water. Vigorous bubbling should be observed. Normally, the air pump delivers at least 500 cc/minute of air. Replace the air pump if weak bubbling or no bubbling is observed. To ensure a tight seal on the reservoir, replace it with a fresh bottle of fill solution (Cat. No. 181073).

5.4.5 Replacement of Reagent and Diffusion Tubing Assembly



WARNING

The reagent is hazardous. Use protective glasses and gloves and work in a well-ventilated area or a fume hood. Avoid contact with skin or clothes. In case of skin contact, flush skin immediately with water to prevent burns. Refer to the bottle label for precautions.

1. Support the bottom of the reagent bottle and release the holding clamp with one hand. Turn the thumbscrew counterclockwise to release the reagent bottle. Unscrew the white bottle cap and gray tubing connector assembly. Since the reagent contains concentrated acid, which is very corrosive to skin and eyes, take the reagent to a well ventilated area such as a laboratory fume hood. Wear rubber gloves and eye goggles. Unscrew the cap and pour the old reagent into a suitable waste container.

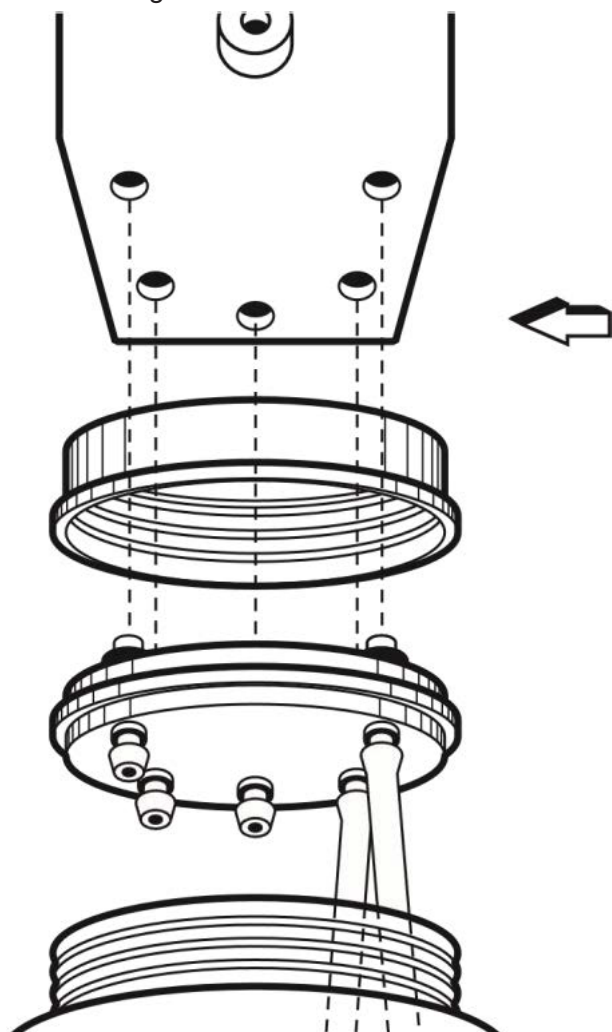


Figure 5.1 Reagent Bottle Assembly

2. Take a new bottle of the reagent to a well ventilated area, such as a laboratory fume hood. Unscrew and remove the white cap on the bottle.
3. Connect the diffusion tubing (Part number: K9705CJ) to the tubing connector assembly. Place the tubing assembly and cap into the bottle.
4. Replace the gray cap and screw the white cap on tightly.
5. Insert the five nipples on the top of the reagent bottle into the fluid connector block.
6. Support the bottom of the reagent bottle with one hand and tighten the thumbscrew clockwise.
7. Clamp the bottle to the fluidics panel to secure it.

5.5 Yearly Preventive Maintenance

5.5.1 Electrodes

1. Replace the reference electrode (Part number: K9705CH). Refer to Section 2.8, Installation of a New Reference Electrode for step-by-step instructions.
 2. Replace the iodide sensing electrode (Part number: K9705CG). Refer to Section 2.6, Installation of a New Iodide Electrode for step-by-step instructions.
 3. Replace the hydrazine standard solution (Cat. No. 151810).
- Dispose of all old solutions according to the SDS instruction. SDS files can be downloaded at www.thermofisher.com/water.

5.5.2 O-ring Replacement

Replace the electrode holder and micro-valve O-rings every year in addition to changing the reagent and tubing connector assembly barb O-rings every month. Both O-rings are included in the O-ring kit.

5.5.3 Replacement of Restrictor Tubing

Use the restrictor tube assembly. Refer to Figure 5.2 for the restrictor tubing connections.

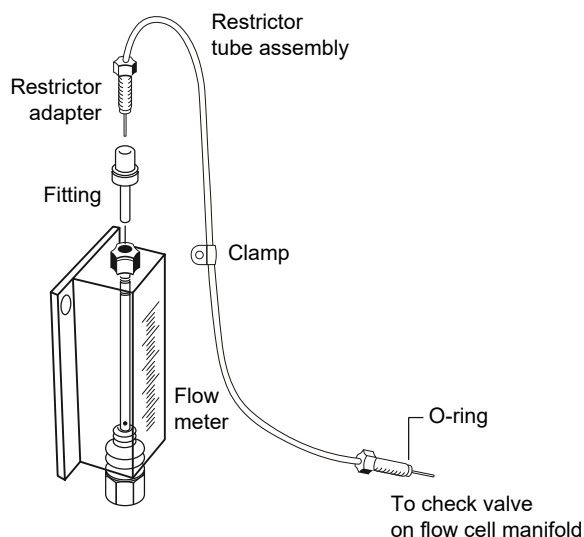








Figure 5.2 Restrictor Tubing

1. Close the inlet valve to stop sample flow through the analyzer.
2. Loosen the restrictor tube fitting connection from the top of the flow meter.
3. Loosen the restrictor tube fitting from the left side of the flow cell block.
4. Pull out the restrictor tube assembly at each end.
5. Unscrew the clip behind flow cell that holds the restrictor tube to the panel.
6. Replace with a new restrictor tubing assembly.
7. Be sure all of the fittings are secure, to prevent leaks.
8. Open the inlet valve to start sample flow through the analyzer.




6. Troubleshooting





6.1 Diagnostics Mode





- From the measure mode, press  to enter the diagnostics mode. The  key allows access to menus used for system diagnostics.
- Each menu is sequential. Press  to scroll through the diagnostics menu selections.
-  can be pressed at any time to return to the measure mode.

Default	Operator Action	Scrolling Marquee	Main Display	Notes
	Diagnostics			
	Press  while in the measure mode to enter the diagnostics mode. The system will enter the diagnostics mode at the calibration log menu. Press  to step through the menu items.	CH1 CALIBRATION SLOPE AND E_0 CH2 CALIBRATION CELL CONSTANT CH1 ERROR LIST PRESS VIEW CH2 ERROR LIST PRESS VIEW CH1 – SELECT TIME/DATE TO VIEW MEASUREMENT LOG CH2 – SELECT TIME/DATE TO VIEW MEASUREMENT LOG SELECT TIME/DATE TO VIEW STATUS LOG SOFTWARE REV NUMBER CH1 SERIAL NUMBER CH2 SERIAL NUMBER CH1 MODEL NUMBER CH2 MODEL NUMBER CH1 MEASURE mV AND NOISE CH2 MEASURE mV AND NOISE CH1 mA1 and mA2 OUTPUT VALUES SENSOR/TEMP CH2 mA1 and mA2 OUTPUT VALUES PRESS ENTER FOR THE DISPLAY TEST PRESS ENTER TO CONTINUE PRESS ENTER TO CONTINUE KEYPAD TEST PRESS ALL KEYS ONE AT A TIME	The display will change with each menu.	If only one board is installed in the analyzer, only one menu option will be shown in the scrolling marquee instead of CH1 and CH2 menu options.




6.1.1 Calibration Log





- Displays up to the last twelve calibrations using three screens:
 - Slope and E_0 (analyzers with a pH module or ISE module installed), mV offset (analyzers with an ORP module installed) or cell constant (analyzers with a conductivity module installed)
 - Date and Time
 - Temperature
- Press  to scroll between the three information screens for each calibration
- Press  /  to view the last twelve calibrations

Default	Operator Action	Scrolling Marquee	Main Display	Notes
	Calibration Log			
	Press  while in the measure mode to enter the diagnostics mode			
		CALIBRATION SLOPE AND E_0	##.## (Slope)	
	or	CALIBRATION OFFSET	##.## (E_0)	
	or	CALIBRATION CELL CONSTANT	###.## (mV offset)	
			#.### (Cell Constant)	
	Press  to display the calibration time and date	CALIBRATION TIME/DATE	HH:MM MM/DD or DD/MM	Press  /  to scroll through the last 12 calibrations




Default	Operator Action	Scrolling Marquee	Main Display	Notes
	Press  to display the calibration temperature and electrode response	CALIBRATION TEMP	# # . # c (Temperature)	Press  /  to scroll through the last 12 calibrations
	Press  to proceed to the next menu			





6.1.2 Error List

- Displays a list of system events, warnings, and error codes that cause the yellow or red LED to light.
- The top line of the main display shows the error code and the bottom line shows the number of error codes (1-5 indicates that one of five error codes is being displayed).
- Press  /  to scroll through the error list.
- Press  to display a description of each error code on the marquee.




Default	Operator Action	Scrolling Marquee	Main Display	Notes
	Error List			
		ERROR LIST PRESS VIEW	E### # - #	
	Press  to display the description of the error code on the marquee	Actual description of error code	E### # - #	
	Press  /  to scroll through the error list	Actual description of error code	E### # - #	
	Press  to proceed to the next menu			

6.1.3 Measurement Log

- Displays logged measurements according to log interval entered in setup mode.
- Press  to toggle between the measurement value and the data and time.
- Press  /  to scroll through the log entries.






Default	Operator Action	Scrolling Marquee	Main Display	Notes
	Measurement Log			
		SELECT TIME/DATE TO VIEW MEASUREMENT LOG	HH:MM MM/DD or DD/MM	
	Press  /  to scroll through the log entries	SELECT TIME/DATE TO VIEW MEASUREMENT LOG	HH:MM MM/DD or DD/MM	
	Press  to scroll between the measurement log and the data and time display	Actual temperature value for logged measurement	Concentration and mV values for logged measurement	
	Press  to proceed to the next menu			

6.1.4 Status Log

- Displays a list of system events.
- Press  /  to scroll through the log entries.
- Press  to toggle between the log code and the data and time.

6.1.5 Software Revision

- Displays the software revision numbers of the two processors.

Default	Operator Action	Scrolling Marquee	Main Display	Notes
	Status Log			
		SELECT TIME/DATE TO VIEW STATUS LOG	HH:MM MM/DD or DD/MM	
	Press  /  to scroll through the log entries	SELECT TIME/DATE TO VIEW STATUS LOG	HH:MM MM/DD or DD/MM	
	Press  to scroll between the log code and the data and time	PRESS UP/DOWN KEY TO VIEW STATUS LOG	Event Code	
	Press  to proceed to the next menu			
	Software Revision			
		SOFTWARE REV NUMBER	r # . # # r # . # #	
	Press  to proceed to the next menu			

6.1.6 Electronics Serial Number





- Displays the serial number of the electronics assembly.

6.1.7 mV and Noise Measurements



- Displays the current mV measurement value and the noise associated with the measurement.



6.1.8 mA Output Values





- Displays current mA values for mA1 and mA2 outputs.

Default	Operator Action	Scrolling Marquee	Main Display	Notes
	Electronics Serial Number			
		SERIAL NUMBER	# # # # # #	
	Press  to proceed to the next menu			
	Model Number			
		MODEL NUMBER	# # # # # # # #	
	Press  to proceed to the next menu			
	mV and Noise Measurements			
		MEASURE mV AND NOISE	Current mV measurement and noise	
	Press  to proceed to the next menu			
	mA Output Values			
		mA OUTPUT VALUES mA1/ mA2	Current mA output values for mA1 and mA2	
	Press  to proceed to the next menu			

6.1.9 Display Test

- Press  to start display test.
- All the display segments will light up and the system will cycle through the LED colors.
 - Verify that all the display segments are on and that the LED colors are functional and press .

3. All the display segments will turn off except for the marquee display, which should show PRESS ENTER TO CONTINUE.
4. Verify that all the display segments are off and press .
5. The system will show a counting number pattern on both lines of the main display.
6. Verify that the display segments are functional and press  to proceed to the keypad test.

Default	Operator Action	Scrolling Marquee	Main Display	Notes
	Display Test			
		PRESS ENTER FOR THE DISPLAY TEST	dISP tESt	
	Press  to start the test			
	Verify that all of the display segments are on and that the LED colors are functional	All segments on	All segments on	System will cycle through the LED colors
	Press  to proceed to the next part of the test			
	Verify that all of the display segments are off	PRESS ENTER TO CONTINUE	All segments off	
	Press  to proceed to the next part of the test			
	Verify that all of the numeric display segments are functional	PRESS ENTER TO CONTINUE	Count pattern Count pattern	
	Press  to proceed to the next menu			

6.1.10 Keypad Test

- The main display will show 0 and the marquee will display KEYPAD TEST PRESS ALL KEYS ONE AT A TIME.
- Press all eight keys one at a time in any order.
- * After the first key is pressed Error E033 will be displayed if a new key is not pressed within 10 seconds.

Default	Operator Action	Scrolling Marquee	Main Display	Notes
	Keypad Test			
		KEYPAD TEST PRESS ALL KEYS ONE AT A TIME	0	
	Press all keys one at a time in any order	KEYPAD TEST PRESS ALL KEYS ONE AT A TIME	Display will show numbers 1 through 8 as keys are pressed	After the first key is pressed error E033 will be displayed if a new key is not pressed within 10 seconds
	No operator action needed The system will enter the measure mode if the keypad test is passed			

6.2 Slope Problems

6.2.1 Low Slope

Slope less than -40 mV/decade

- Check the electrode function, clean the electrode, recalibrate the analyzer, and if the analyzer continues to read low, replace the electrode.
- An oxygen scavenger-free sample must be used for calibration.
- Check electronics to read mV input correctly. Use electronic test kit procedure for checking electronics function.

Ion-selective electrodes (ISE) can be shown as DC-voltage sources with 50 to 1000 Megohm; a very high output impedance. ISEs respond to ion concentration changes with a voltage change of approximately -59 mV/decade for monovalent anions such as iodide. Knowing electrode and analyzers parameters like offset potential, slope, etc allows testing of various instruments by applying a known mV voltage.

Input Signal	Expected Reading: $\pm (0.5 \text{ mV} + 0.1\%)$
0 mV	- 0.5 mV to + 0.5 mV
- 1000 mV	-1001.5 mV to - 998.5 mV
+ 1000 mV	+ 998.5 mV to + 1001.5 mV

- Standards contaminated or incorrectly made – verify calibration with fresh standards.
- Standard 1 and standard 2 values not set correctly – check the percent flow rate setting and range setting on the dynamic calibrator and in the setup mode of the analyzer. If using a custom standard, verify the values for the dynamic calibrator.
- Standard 1 and standard 2 added in wrong sequence – check the sequence of the standards and repeat the calibration.
- pH adjustment is not correct – check the level and flow of the reagent. Replace the reagent if it is contaminated or the level is less than 50 mL. Refer to Section 2.4, Installation of Reagent and Diffusion Tubing.

6.2.2 High Slope

Slope greater than -75 mV/decade

- Improper calibration technique – refer to Section 4.4, Performing a DYN Calibration.
- Calibration standards contaminated – repeat the calibration using fresh standards.
- Electronics failure – reset the analyzer. Refer to Section 6.4, Resetting the Analyzer.
- Improper dynamic calibrator settings – refer to Section 4.4, Performing a DYN Calibration.
- An oxygen scavenger-free sample must be used for calibration.
- Cables interchanged – verify wiring of cable connections to terminal strip. Refer to Section 2.3, Wiring the Analyzer.
- Check the connection of the cable markers for the corresponding electrode. Cable markers are the white tape at the cap connector on the cable.
- “Ref” for the reference electrode.
- “Sensing” for the iodide electrode.
- Sensing electrode coated – clean or replace the sensing electrode.

6.2.3 Troubleshooting Matrix

Malfunction	Possible Cause	Remedy
Noisy	Blocked junction on reference electrode	Make sure electrolyte is flowing properly and the bottle is pressurized by the air pump.
	Iodide or reference electrode failure	Check the cable connections and location of wiring to terminal strip. Refer to Chapter 2.
	Temperature probe failure	Disconnect ATC. Temperature should read 25 °C (E101). Replace if necessary.
	Air pump failure	Check the air flow for a steady stream of bubbles and replace if necessary.
	Calibration standard carryover	Disconnect the air pump intake tube. Rinse the flow cell and electrodes with deionized water by lifting the flow cell cap. Reconnect the air pump.
	Faulty electrode cables	Replace electrode cables.
Excessive Drift	Sample concentration varying	Check sample status. Perform a span check and if span check passes, the analyzer is okay.
	Blocked junction on reference electrode	Make sure electrolyte is flowing properly and the bottle is pressurized by the air pump.
	Iodide or reference electrode failure	Check the cable connections and location of wiring to terminal strip. Refer to Chapter 2.
	Reference electrode filling solution empty or incorrect solution used	Use Cat. No. 181073 reference electrode filling solution.
	Diffusion tubing burst	Observe the liquid level in the reagent bottle. If the liquid level rises, replace the reagent and diffusion tubing. The tubing connector may need replacement. Refer to Chapter 2.
	Temperature probe failure	Disconnect ATC. Temperature should read 25 °C (E101). Replace if necessary.
	Temperature probe failure	Disconnect ATC. Temperature should read 25 °C (E101). Replace if necessary.
Low Flow Rate	Sample pressure below 8 psi	Check the sample pressure. If it is less than 8 psi, increase the pressure. Refer to Chapter 2.
	Pressure regulator set too low	Increase the pressure by pulling on the red locking ring and turning the black knob clockwise. Refer to Chapter 2.
	Inlet filter clogged	Replace or clean the filter.
	Restrictor tubing crimped or clogged	Replace the restrictor tubing. Refer to Chapter 2.
No Air Bubbles	Air line crimped or disconnected	Check the air line and repair as required.
	Air pump failure	Replace if necessary.
Does Not Calibrate Properly	Contaminated standard or syringe	Use new standard solutions. Replace the syringe.
	Sample used for calibration contains an oxygen scavenger.	Oxygen scavenger-free sample must be used for calibration. Refer to Chapter 4.
	Temperature probe failure	Disconnect ATC. Temperature should read 25 °C (E101). Replace if necessary.
	Dynamic calibrator technique error	Use the correct techniques. Refer to the Chapter 4.
	Reagent diluted or contaminated	Replace the reagent. Refer to Chapter 2.
	Flow cell contaminated	Rinse the flow cell with deionized water. Flush the flow cell overnight at calibration liquid level. Refer to Chapter 4.
	Electronics failure or bad setup	Reset the analyzer. Refer to Chapter 6.
	Electronics failure or bad setup	Reset the analyzer. Refer to Chapter 4.
High Readings	Analyzer out of calibration	Recalibrate the analyzer. Refer to Chapter 4.
	Flow cell contaminated	Rinse the flow cell with deionized water. Flush the flow cell overnight at calibration liquid level. Refer to Chapter 4.
	Inlet filter just replaced	Flush the analyzer for one hour. Refer to Chapter 4. If an offline calibration was performed, verify accuracy of alternate method value. Refer to Chapter 4.
	Reagent spent or diluted	Replace the reagent. Refer to Chapter 2.

Malfunction	Possible Cause	Remedy
Over-Range Readings	Electrode connections loose or bad	Verify the electrode connections to the electrode cables.
	Electrode wiring	Electrodes not properly wired to terminal strip. Refer to Chapter 2.
	Blocked junction on reference electrode	Make sure electrolyte is flowing properly and the bottle is pressurized by the air pump..
	Iodide or reference electrode failure	Electrode is shorted, cracked or damaged. Install a new electrode. Refer to Chapter 2.
	Electronics failure or bad setup	Reset the analyzer. Refer to Chapter 6.
	Analyzer out of calibration	Recalibrate the analyzer. Refer to Chapter 4.
Low Readings	Analyzer out of calibration	Recalibrate the analyzer. Refer to Chapter 4.
	Sample is very pure	Check sample status. Perform a span check and if span check passes, the analyzer is okay.
	Electronics failure	Try resetting the analyzer. Refer to Chapter 6 or consult Response Center.
Default	Battery failure	Consult Response Center.
	Electronics failure	Reset the analyzer. Refer to Chapter 6.

6.3 Error/Event Codes

Error/event codes will be in the format “E####”. Some of these are errors, some are warnings, and some are purely informational. The first digits identify the type of error or event as identified in the table below.

Displayed Event Code	Description	Cause	Troubleshooting
System Status Codes			
A711	ALARM1 CH1 ON	Alarm 1 channel 1 engaged (closed)	
A712	ALARM2 CH1 ON	Alarm 2 channel 1 engaged (closed)	
A713	ALARM3 CH1 ON	Alarm 3 channel 1 engaged (open)	
A714	AIR PUMP ON	Air pump engaged	
A721	ALARM1 CH2 ON	Alarm 1 channel 2 engaged (closed)	
A722	ALARM2 CH2 ON	Alarm 2 channel 2 engaged (closed)	
A723	ALARM3 CH2 ON	Alarm 3 channel 2 engaged (open)	
A811	ALARM1 CH1 OFF	Alarm 1 channel 1 disengaged (open)	
A812	ALARM2 CH1 OFF	Alarm 2 channel 1 disengaged (open)	
A813	ALARM3 CH1 OFF	Alarm 3 channel 1 disengaged (closed)	
A814	AIR PUMP OFF	Air pump disengaged	
A821	ALARM1 CH2 OFF	Alarm 1 channel 2 disengaged (open)	
A822	ALARM2 CH2 OFF	Alarm 2 channel 2 disengaged (open)	
A823	ALARM3 CH2 OFF	Alarm 3 channel 2 disengaged (closed)	
C500	CAL MODE	Calibration mode entered	
R400	MEAS MODE	Measure mode entered	
S600	SETUP MODE	Setup mode entered	
E028	POWER FAIL	Brown out or power failure and system has stopped processing	Verify custom settings
E033	KEYPAD FAILURE	User did not press the keys during a diagnostic mode keypad test or keypad broken	Repeat diagnostic mode keypad test
E034	CAL PASS INCORRECT	User entered incorrect calibration password	Verify password
E035	SYSTEM PASS INCORRECT	User entered incorrect system password	Verify password
E036	USER VALUE INCORRECT	User entered a value that is out of range	Verify value and re-enter

Displayed Event Code	Description	Cause	Troubleshooting
E037	POWER RETURN	System started processing after brown out or power failure	Verify custom settings
E040	BLANK INCORRECT	Blank greater than 1ppb	Verify scrolled blank value is correct.
E041	CALIBRATION TIMEOUT	The electrode has not reach stability within the specified time	The system code may be due to out of range measurements or an invalid previous calibration
E042	INVALID SLOPE	Invalid slope obtained during calibration	Check electrodes, electrode cables and connectors for defects or shorts. Replace electrodes, if necessary. Recalibrate using new standards in the correct calibration sequence.
System Event/Error Codes - Yellow LED			
E004	DEFAULT VALUES	Analyzer has been reset or is new out of box	Calibrate the analyzer
E021	HARDWARE FAULT	System error	Contact Response Center
E101	CH1 TEMP OUT OF RANGE	Temperature sensor on channel 1 out of range (5 °C to 45 °C) for ISE	Check ATC cable and probe connections. Replace if needed.
E102	CH2 TEMP OUT OF RANGE	Temperature sensor on channel 2 out of range (5 °C to 45 °C) for ISE	Check ATC cable and probe connections. Replace if needed.
E111	CH1 CAL DUE	User calibration required on channel 1. No calibration has been performed in user specified time interval.	Recalibrate the analyzer.
E112	CH2 CAL DUE	User calibration required on channel 2. No calibration has been performed in user specified time interval.	Recalibrate the analyzer.
E127	CH1 mA1 OVER RANGE	Measured sensor value above mA1 high limit value on channel 1	Verify user selectable mA1 high limit value in setup mode.
E128	CH1 mA1 UNDER RANGE	Measured sensor value below mA1 low limit value on channel 1	Verify user selectable mA1 low limit value in setup mode.
E129	CH1 mA2 OVER RANGE	Measured temperature value above mA2 high limit value on channel 1	Verify user selectable mA2 high limit value in setup mode.
E130	CH1 mA2 UNDER RANGE	Measured temperature value below mA2 low limit value on channel 1	Verify user selectable mA2 low limit value in setup mode.
E131	CH2 mA1 OVER RANGE	Measured sensor value above mA1 high limit value on channel 2	Verify user selectable mA1 high limit value in setup mode.
E132	CH2 mA1 UNDER RANGE	Measured sensor value below mA1 low limit value on channel 2	Verify user selectable mA1 low limit value in setup mode.
E133	CH2 mA2 OVER RANGE	Measured temperature value above mA2 high limit value on channel 2	Verify user selectable mA2 high limit value in setup mode.
E134	CH2 mA2 UNDER RANGE	Measured temperature value below mA2 low limit value on channel 2	Verify user selectable mA2 low limit value in setup mode.
System Error Codes - Red LED			
E001	HARDWARE FAULT	System error	Contact Response Center
E002	HARDWARE FAULT	System error	Contact Response Center
E018	HARDWARE FAULT	System error	Contact Response Center
E019	HARDWARE FAULT	System error	Contact Response Center
E020	HARDWARE FAULT	System error	Contact Response Center
E024	HARDWARE FAULT	System error	Contact Response Center
E026	HARDWARE FAULT	System error	Contact Response Center
E027	HARDWARE FAULT	System error	Contact Response Center
E029	HARDWARE FAULT	System error	Contact Response Center
E030	HARDWARE FAULT	System error	Contact Response Center
E038	HARDWARE FAULT	System error	Contact Response Center
E103	CH1 MEAS OVER RANGE	Measurement is over range on channel 1, the display should also be flashing '9999'	Check if electrode is not connected, electrode cables are faulty or electrode junction is fouled
E104	CH2 MEAS OVER RANGE	Measurement is over range on channel 2, the display should also be flashing '9999'	Check if electrode is not connected, electrode cables are faulty or electrode junction is fouled

Displayed Event Code	Description	Cause	Troubleshooting
E109	CH1 BAD SLOPE	Last calibration produced a bad slope on channel 1. Slope is less than -40 mV/decade or more than -75 mV/decade or the calibration standards may have been interchanged.	Recalibrate the analyzer using fresh standards. Recalibrate using the correct sequence of standards.
E110	CH2 BAD SLOPE	Last calibration produced a bad slope on channel 2. Slope is less than -40 mV/decade or more than -75 mV/decade or the calibration standards may have been interchanged.	Recalibrate the analyzer using fresh standards. Recalibrate using the correct sequence of standards.
E113	CH1 CAL OVERDUE	Calibration is overdue on channel 1 by more than 50% of the user specified time interval	Recalibrate the analyzer
E113	CH2 CAL OVERDUE	Calibration is overdue on channel 2 by more than 50% of the user specified time interval	Recalibrate the analyzer
E121	CH1 TEMP BROKEN	Temperature sensor on channel 1 broken or out of range	Check ATC cable connections and probe for damage. Replace if needed.
E122	CH2 TEMP BROKEN	Temperature sensor on channel 2 broken or out of range	Check ATC cable connections and probe for damage. Replace if needed.
E125	CH1 BAD OFFSET	Last calibration produced a bad E_0 offset on channel 1	Recalibrate the analyzer using fresh standards. Check electrode connections. Replace electrode, if needed.
E126	CH2 BAD OFFSET	Last calibration produced a bad E_0 offset on channel 2	Recalibrate the analyzer using fresh standards. Check electrode connections. Replace electrode, if needed.

6.4 Resetting the Analyzer





The WE430 Hydrazine analyzer allows the user to reset the analyzer through the setup mode or by a hard reset. Resetting the analyzer will restore all settings in the setup mode to factory default values.







WARNING

Resetting the analyzer will erase all data logs including calibration, and password protection settings for setup and calibration.

The analyzer will reset setup parameters to factory default settings.

Operator Action	Scrolling Marquee	Main Display	Notes
Press  in the measure mode to enter the setup mode			
	Last menu used in setup mode	SEL SCrn	SETUP appears as mode
Press  /  until RSET appears in the marquee			
	RSET (flashing)	SEL SCrn	
Press  to reset the analyzer			
	PRESS TEST VIEWENTER TO RESET	rSEt ?	

Operator Action	Scrolling Marquee	Main Display	Notes
Press  Press  Press  When the reset is complete, the system will return to the measure mode. The operator will need to re-enter the setup mode to continue programming the setup parameters. Press  to return to the setup mode.	PRESS TEST VIEWENTER TO RESET	rSEt ?	This command resets all previously set parameters to factory default values. Use this command only to set the analyzer to original factory setup values.

6.4.1 Hard Reset

A hard reset should be performed if the analyzer becomes unresponsive or the status indicators are flashing. Perform the following sequence:

- Carefully open the front cover of the electronics case (loosen the four corner screws).
- Press the small button located on the raised portion of the PCB to reset the electronics.
- Close the front cover of the electronics case and tighten the screws.

System settings and calibrations are preserved and analyzer returns to the measure mode. The actual value for concentration and temperature will be displayed if the electrodes are properly installed.

6.4.2 Serial Number and Software Revision

In the event you require technical assistance, please have the serial number available when calling for assistance along with the software version.

- The analyzer serial number is located on the outside of enclosure.
- The software revision is accessed through the diagnostics mode.

Revision Record

- Manual Title : Model WE430 Hydrazine Analyzer
- Manual No. : IM 12Y18A03-01EN

Oct. 2019/1st Edition
Newly published

Yokogawa Electric Corporation
2-9-32 Nakacho, Musashino-shi, Tokyo 180-8750, JAPAN
<http://www.yokogawa.com/>



