

Please use this manual change with the following user's manual.

1. Applicable User's Manual


IM No.	Edition	Producers
IM 02C01B03-01E	8th	Y/11AH

2. Contents of change

Item	Applicable part	Contents of change
(1)	2.3 Standard Specification Cover	Delete "Gasketed for National Electrical Manufacturers Association (NEMA) (USA) Type3 weatherproof service."
(2)	2.3 Standard Specification Degrees of Protection	Add "Degrees of Protection: IP53 (Equivalent to NEMA 3)"
(3)	2.5 Options (and Combinations) Air set	Delete option code GAS -F and NAS-F
(4)	CMPL 02C01B03-01E	Please replace the current edition with the attached new edition.

Customer Maintenance Parts List

Model Y/11AH PNEUMATIC ABSOLUTE PRESSURE TRANSMITTER (Style C)

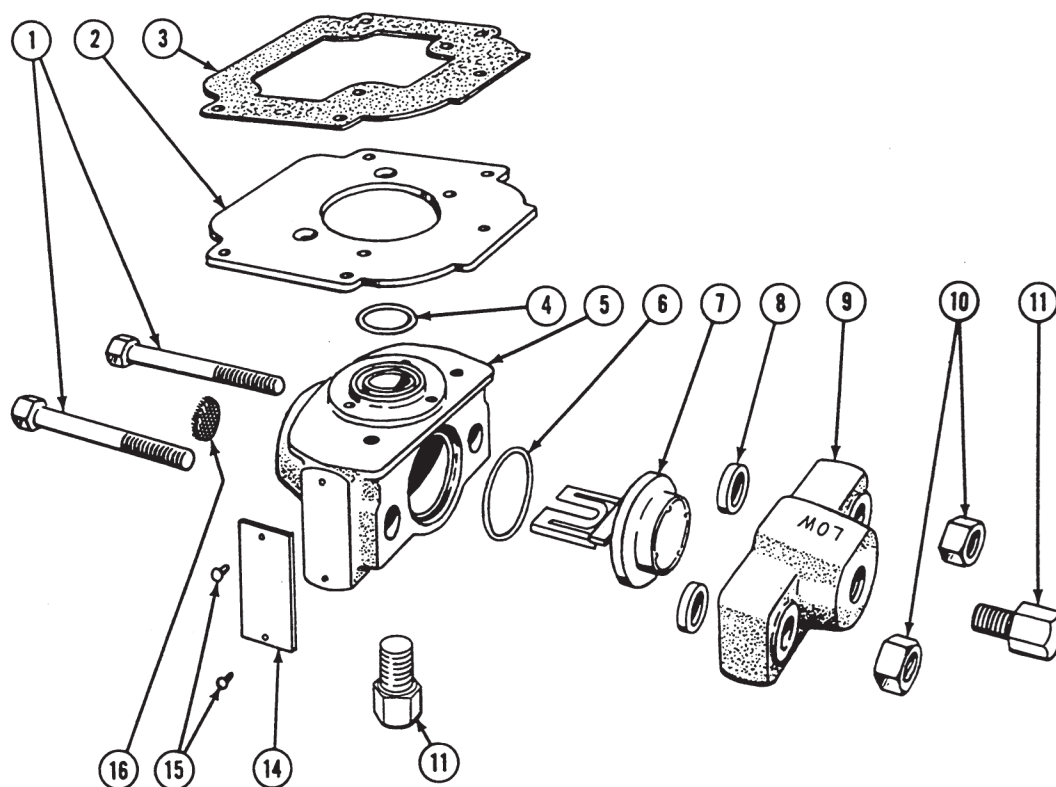


F0607.ai

Item	Part No.	Qty	Description
1	Below F9147AG W9136RC X0116LX X0118AR	2	Bolt SCM435 SUS630 Stainless Steel } For A Capsule SCM435 } For B, C SUS630 Stainless Steel } Capsule
2	U0102MK	1	Plate
3	F9100AT	1	Gasket
4	Below U0102MY 0051652	1	*O-Ring Silicone elastomer (standard) Glass Fiber Filled Teflon (for /GFT)
	F9101ZJ		Glass Fiber Filled Teflon (for /OSW)
	F9202LZ		Neoprene (for ammonia service)
5	P0120YJ	1	Body, 1/2 NPT (SUS 316 s.s.)
	F9101KX	1	Body, JIS Rc 1/2 (SUS 316 s.s.)
6	Below	1	*O-Ring
	P0120EW F9202XS F9202MQ		Silicone elastomer (standard) Teflon (PTFE) (for /OSW) Neoprene (for ammonia service)

Item	Part No.	Qty	Description
7	Below P0121AK P0121AX P0121AZ P0121AC	1	Capsule Assembly A Capsule B Capsule C Capsule Spacer (A capsule only)
8		2	
9	Below F9101NH F9101NG F9101NK F9101NJ	1	Cover For A Capsule (1/4 NPT) For A Capsule (JIS Rc 1/4) For B, C Capsules (1/4 NPT) For B, C Capsules (JIS Rc 1/4)
10	X0104FK X0118AS	2 2	Nut (SCM435) (standard) Nut (SUS630 stainless steel) (/SSB)
11	D0114RZ F9200CS	2 2	Plug (1/4 NPT) (SUS316B s.s.) Plug (JIS Rc 1/4) (SUS316B s.s.)
14	—	1	Tag Plate
15	0046879	2	Self-tapping Screw
16	B0116BP	1	*Screen Disc

*Denotes parts more frequently replaced.

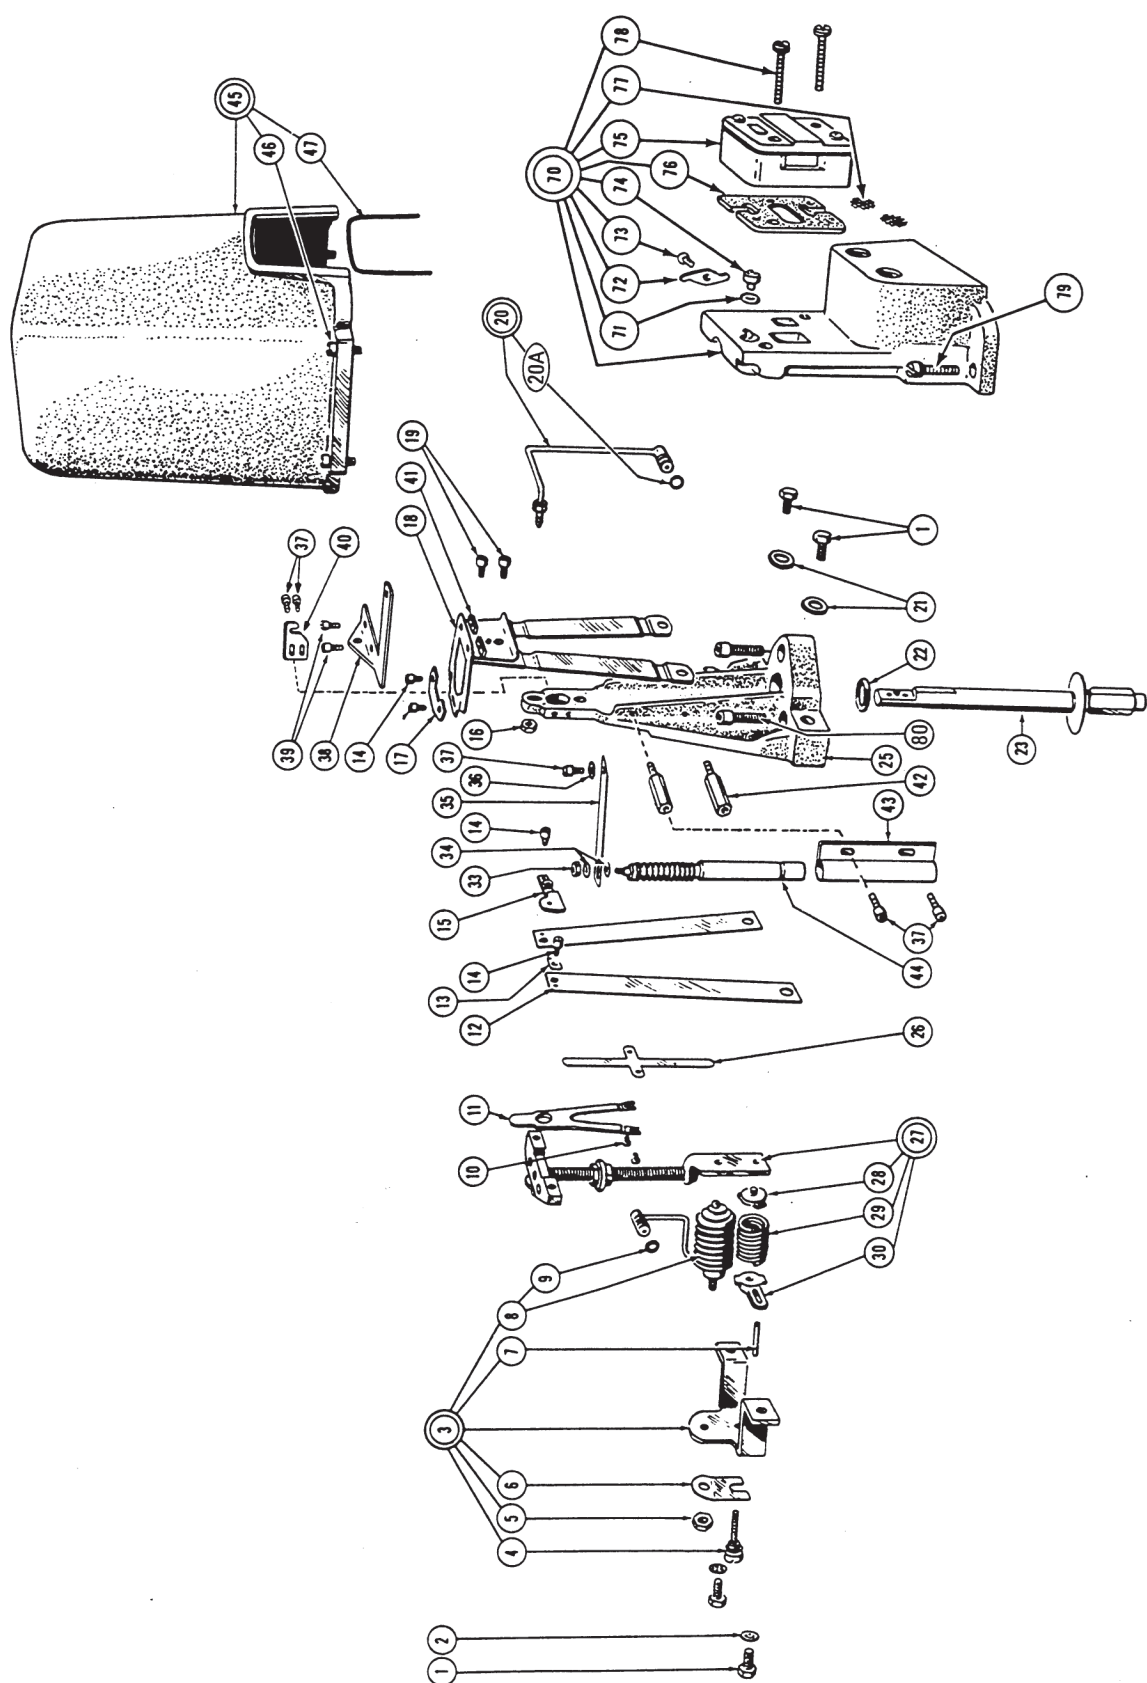

F0608.ai

Force Balance Unit (items 1 through 30)

Part No.N0148EG: Standard

Part No.N0148EH: Low Spans

(for Model Y/11AH-□□ /LD)


Item	Part No.	Qty	Description
1	U0102LN	4	1/4-28×1/2 Hex.H.Screw
2	0048219	2	Lockwasher
3	U0119TA	1	Bracket Assembly (N0148EG)
	U0119TF	1	Bracket Assemblby (N0148EH)
4	U0102FY	1	Screw
5	0017611	1	Nut
6	U0102FZ	1	Spring
7	U0102NA	1	Pin
8	U0119TC	1	Bellows Assembly (N0148EG)
	U0119TG	1	Bellows Assembly (N0148EH)
9	D0123MZ	1	*O-Ring
10	0023442	2	3-48×3/16 Fil.H.Screw
11	N0999MH	1	Flapper
12	U0102KL	2	Flexure
13	U0102LP	1	Plate
14	X0100MK	4	6-32×3/16 Socket H.Cap Screw
15	U0102TE	1	Bracket Assembly
16	X0104EB	1	Nut
17	U0102KP	1	Plate
18	N0999FM	1	Flexure Assembly
19	X0100ML	2	8-32×1/4 Socket H.Cap Screw
20	U0119TB	1	Nozzle Assembly
20A	00123MZ	1	*O-Ring
21	X0166MX	2	Washer
22	N0143XN	1	*O-Ring
23	N0148EB	1	Force Bar Assembly
25	N0999ML	1	Base
26	N0142NY	1	Spacer
27	N0999QA	1	Range Bar Assembly (N0148EG)
	N0999MP	1	Range Bar Assembly (N0148EH)
28	U0102KR	1	Spring Holder
29	N0999MG	1	Spring (N0999QA)
	N0999MC	1	Spring (N0999MP)
30	U0102KC	1	Spring Holder

Other Parts (items 33 through 80)

Item	Part No.	Qty	Description
33	X0104BR	1	Nut
34	0029423	2	Washer
35	U0114BP	1	Flexure
36	0013335	1	Washer
37	X0116PB	5	5-40×3/16 Socket H.Cap Screw
38	U0117BN	1	Bracket
39	A0100YC	4	6-32×1/4 Socket H.Cap Screw
40	U0117AR	1	Bracket
41	N0138BS	2	Plate
42	F9100FM	2	Colum
43	N0148CD	1	Clamp
44	N0119EK	1	Dashpot
45	U0117BS	1	Cover Assembly
46	X0100RP	4	Screw
47	U0102MS	1	Gasket
70	F9101DF	1	Relay Mounting Assembly (JIS connection)
	D0124JD	1	Relay Mounting Assembly (ANSI connection)
71	A037744	1	*O-Ring
72	U0102MF	1	Clamp
73	X0100AA	1	6-32×7/32 Fil.H.Screw
74	D0124JG	1	*Restrictor
75	F9138YA	1	*Pneumatic Amplifier, 80A
76	C0100EM	1	*Gasket
77	U0103FP	2	*Screen
78	X0116CS	2	10-32×1 Pan H.Screw with washer
79	0006535	2	10-32×3/4 Fil.H.Screw with lockwasher
80	X0100MM	3	1/4-28×3/4 Socket H.Cap Screw

* Denotes parts more frequently replaced.

Integral Air Filter Set and Mounting Set

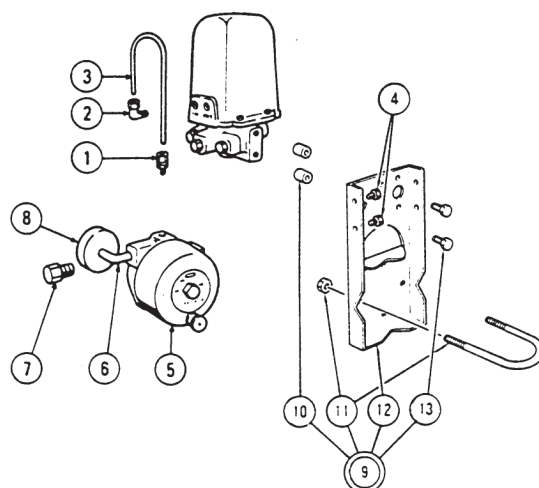

F0609.ai

Item	Part No.	Qty	Description
1	0050325	1	Connector Assembly (ANSI connection) (prior to Aug.1987)
	0050386	1	Connector Assembly (JIS connection) (prior to Aug.1987)
	G9611AW	1	Connector Assembly (ANSI connection) (since Aug.1987)
	G9611AD	1	Connector Assembly (JIS connection) (since Aug.1987)
2	0050332	1	Elbow Assembly (ANSI connection) (prior to Aug.1987)
	0050392	1	Elbow Assembly (JIS connection) (prior to Aug.1987)
	G9611CN	1	Elbow Assembly (ANSI connection) (since Aug.1987)
	G9611CD	1	Elbow Assembly (JIS connection) (since Aug.1987)
3	F9145DZ	1	Tube (prior to Aug.1987)
	F9101EP	1	Tube (since Aug.1987)
4	F9147MQ	2	1/4-20×1/2 H.H.Screw
5	F9140DB-C	1	Filter Regulator (ANSI connection)
	F9140DA-C	1	Filter Regulator (JIS connection)
6	Below	1	Elbow
	G9612DB		For JIS connection
	G9612DD		For ANSI connection
	F9140FH		For JIS connection
	F9140FJ		For ANSI connection
			Prior to Apr.1998
			Since Apr.1998
7	F9145BF	1	Plug (JIS connection)
	D0114PN	1	Plug (ANSI connection)
8	See Table 1	1	Pressure Gauge
9	F9101KY	1	Mounting Set Assembly
10	D0117CC	2	Spacer
11	D0117XL-A	1	U-Bolt/Nut Assembly
12	F9270AX	1	Bracket
13	Below	2	PH 3/8F-1 3/4H Screw
	F9147BQ		S10C, S12C or S15C Carbon Steel (standard)
	F9101YW		SUS304 Stainless Steel (/SSB)

Table 1. Pressure Gauge

Suffix Code	Prior to Apr.1998	Since Apr.1998
G(N)AS-FM	G9615AA	G9615AT
G(N)AS-FE	G9615AE	G9615EK
G(N)AS-FP (0 to 200 kPa)	G9615AH	G9615EA
G(N)AS-FB (0 to 2 bar)	G9615AM	G9615EC

Note) In order for gauge shipped before April, 1998 to be replaced, please use gauge and elbow, which part numbers are effective April, 1998.