Customer Maintenance Parts List

MV200

Model MV204,MV208,MV210,MV220,MV230
MobileCorder MV200

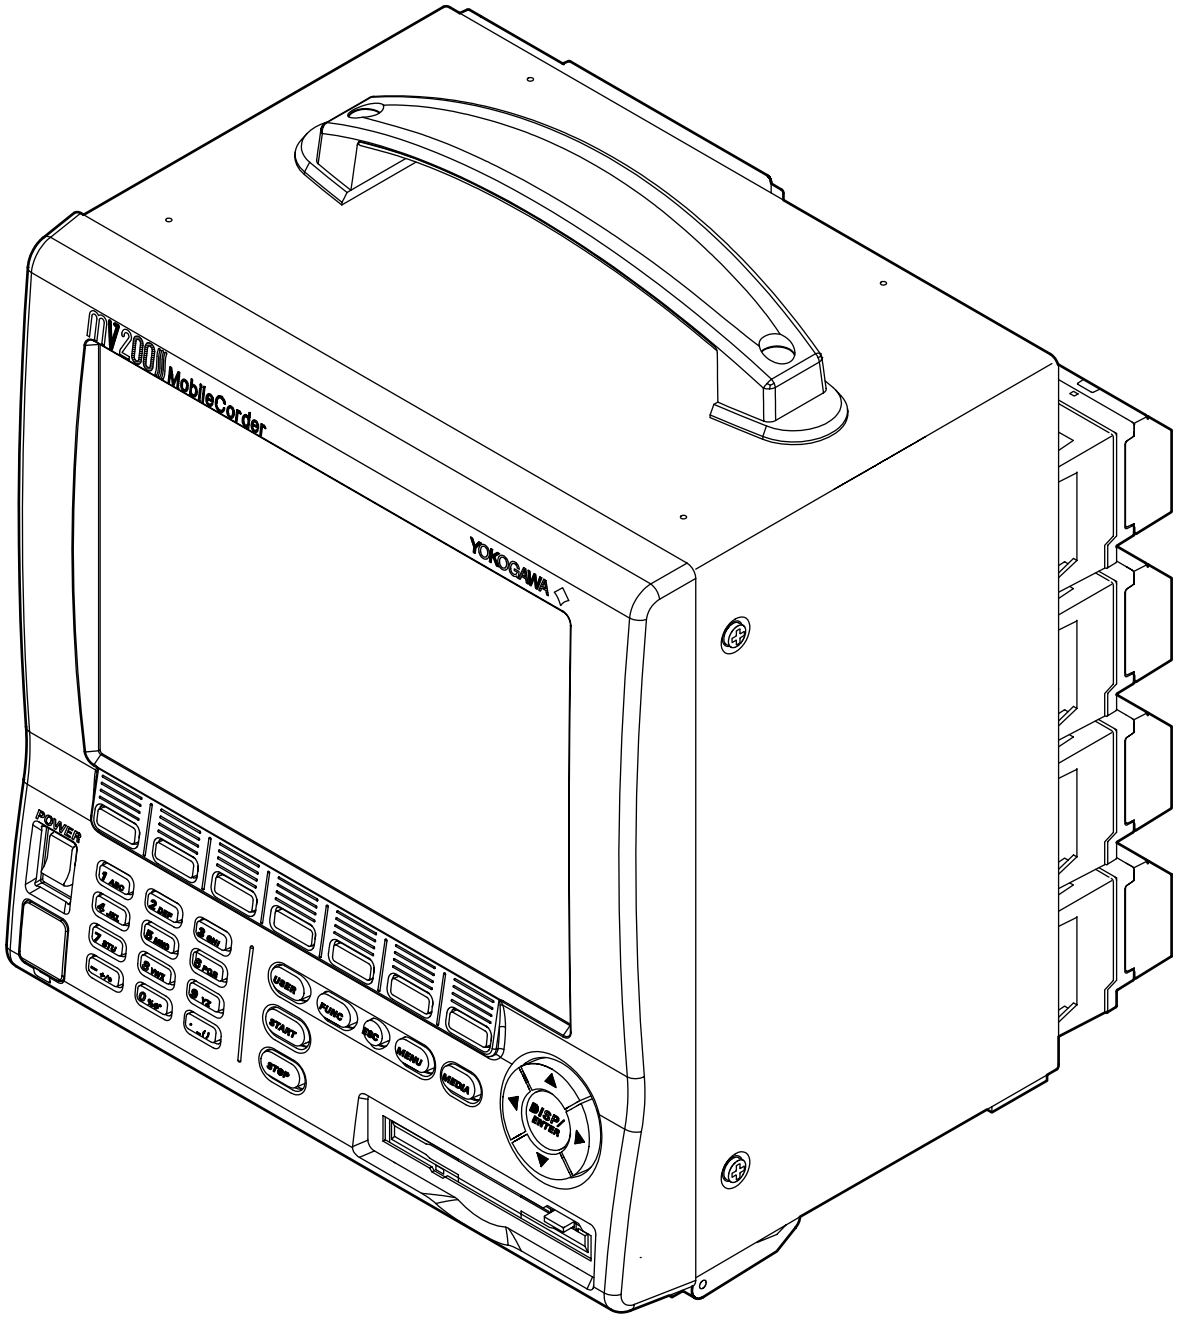

Note:
Parts marked with a ◎symbol are CMPL(Customer Maintenance Parts List) parts.

YOKOGAWA ◆
Yokogawa Electric Corporation

© Copyright Sep. 2000(YK).4th Edition:Dec.2001(YK)

CMPL MV200-01E

Complete Set

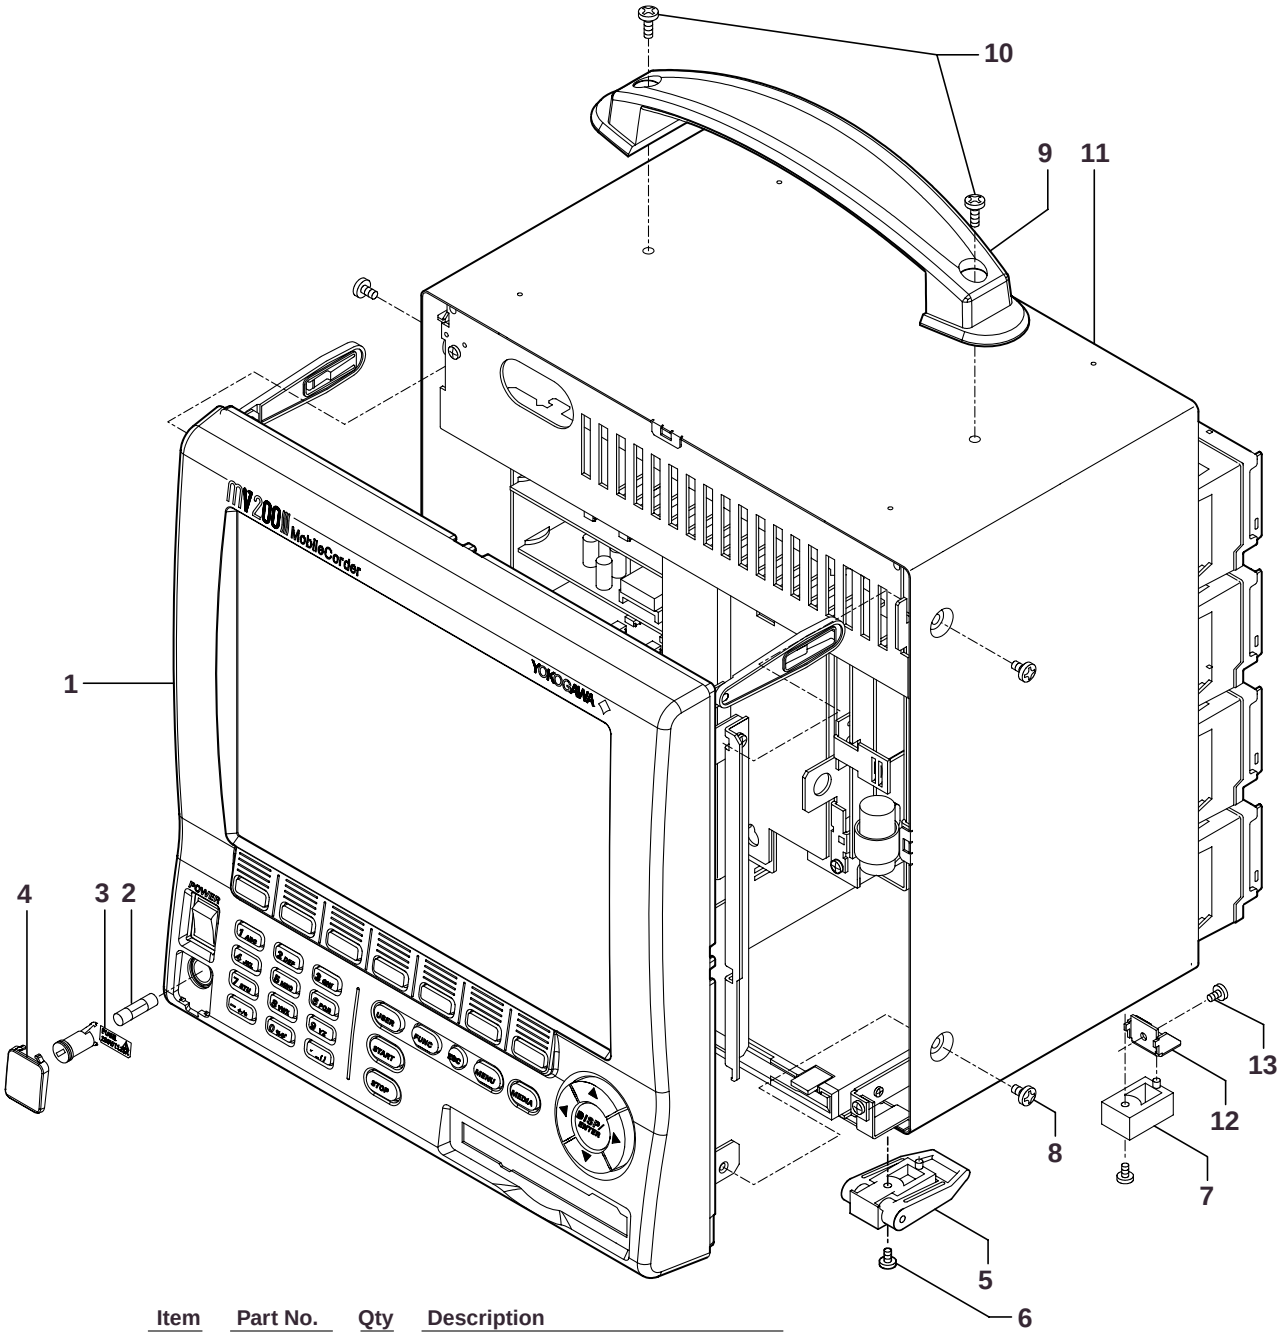

Item	Part No.	Qty	Description
1	-	1	Bezel Assembly (see page 5)
◎ 2	A1423EF	1	Fuse (*1) } (select)(see page 8)
	A1354EF	1	Fuse (*2) }
◎ 3	B9976GC	1	Name Plate (*1) } (select)
	B9976GD	1	Name Plate (*2) }
◎ 4	B9976GP	1	Fuse Cover
◎ 5	B9961BR	2	Front Foot
◎ 6	Y9306LS	4	B.H.Screw,M3x6
◎ 7	B9961BS	2	Rear Foot
8	Y9405LB	4	B.H.Screw,M4x5
◎ 9	B9976HX	1	Handle
◎ 10	Y9408LB	2	B.H.Screw,M4x8
11	B9976HA	1	Case Assembly
12	B9976HG	2	Bracket
13	Y9305LB	2	B.H.Screw,M3x5

Note:
*1 MV2□□-□-□-□-1
*2 MV2□□-□-□-□-2
◎ CMPL Parts

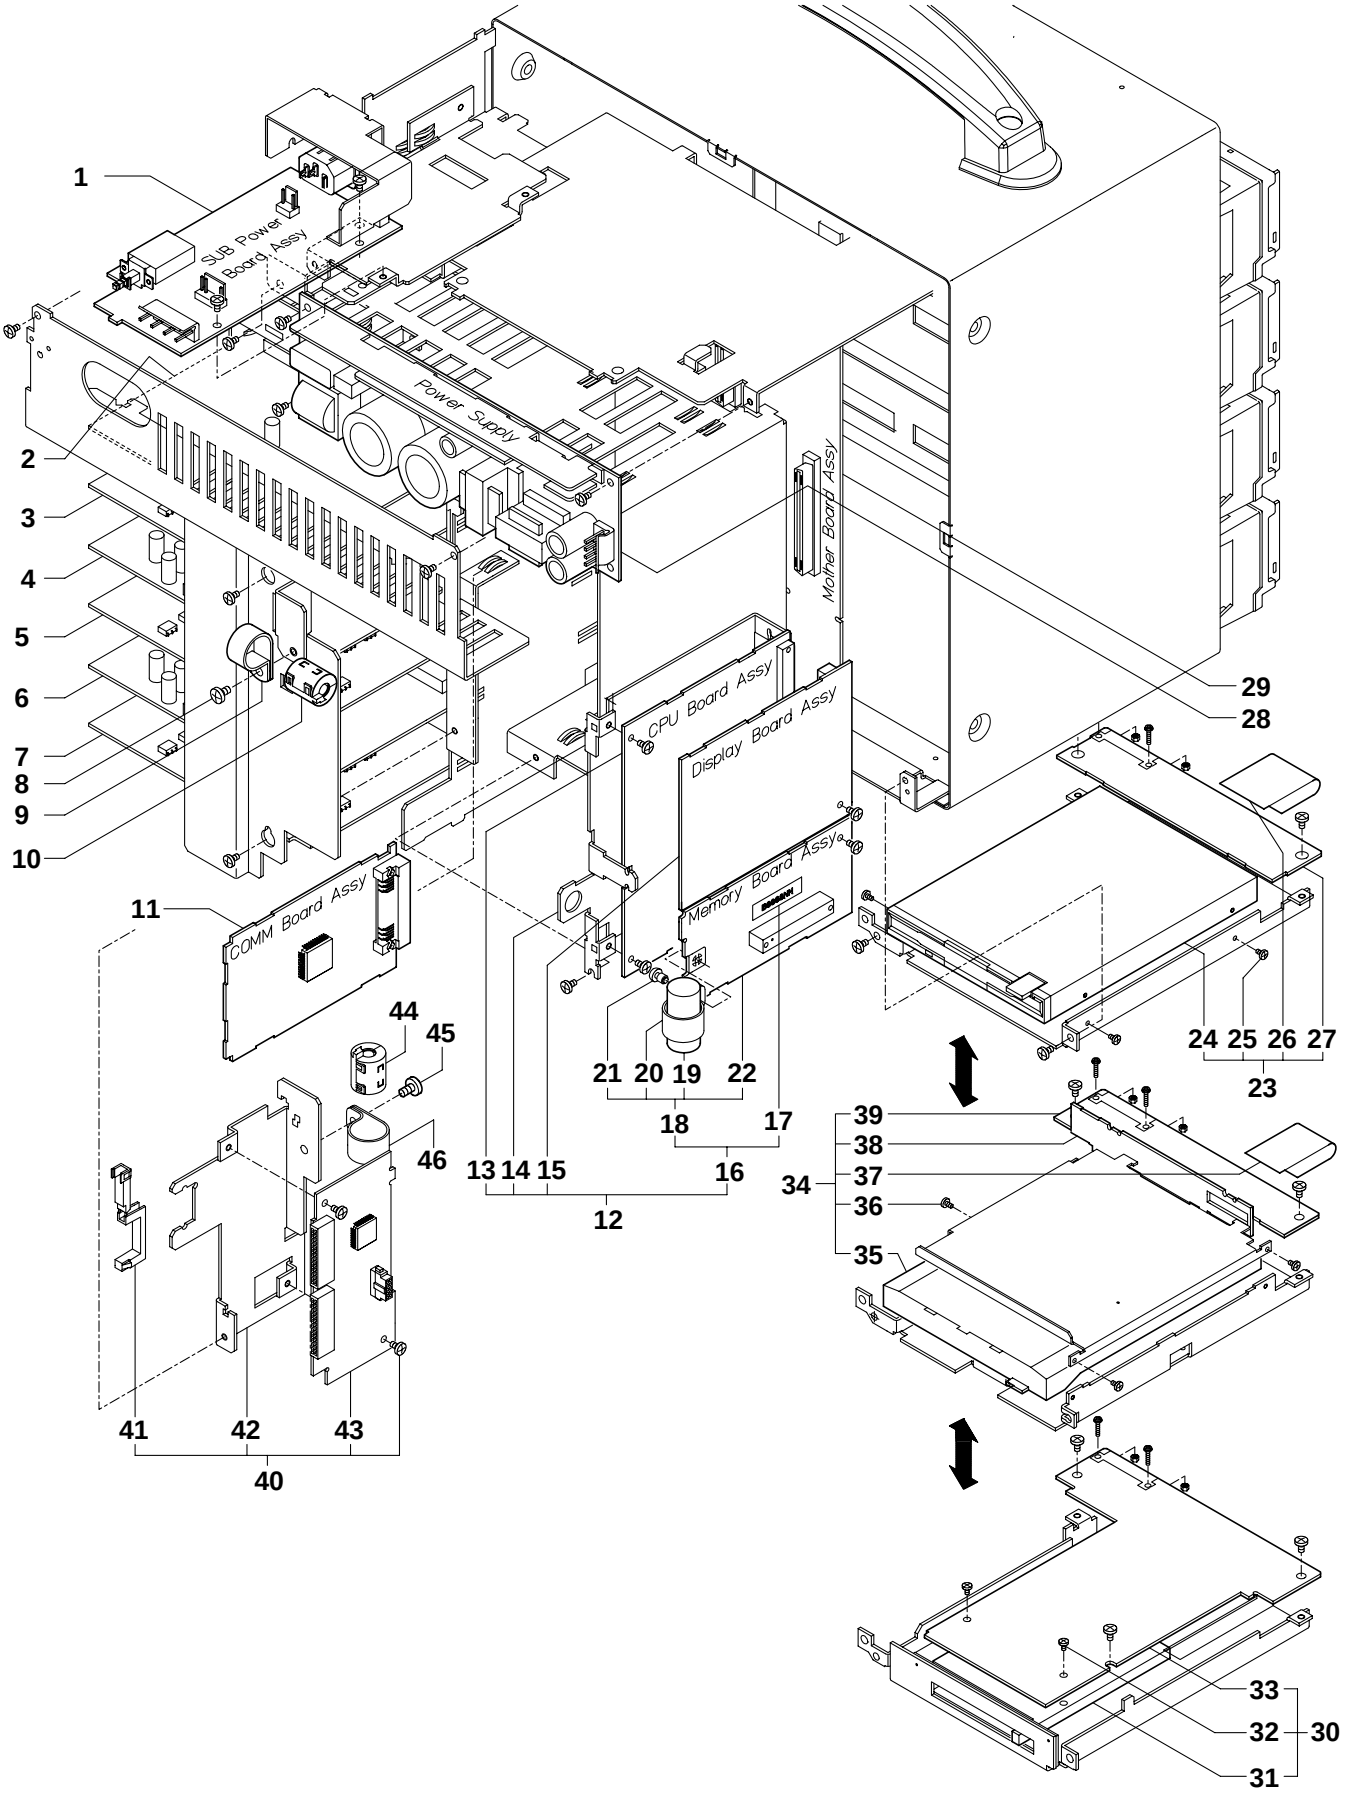
1
SJB Power Board Assy
Power Supply
2
3
4
5
6
7
8
9
10
Mother Board Assy
CPU Board Assy
Display Board Assy
Memory Board Assy
29
28
11
COMM Board Assy
44
45
46
21 20 19 22
18 17
13 14 15 16
12
24 25 26 27
23
39
38
37
34
36
35
41 42 43
40
33
32
31
30

Item	Part No.	Qty	Description
1	B9968TL	1	I-Sub Power Board Assembly *1 } (select)
	B9968TK	1	S24-Sub Power Board Assembly *2 } (select)
2	B9968QC	1	Fast 2AD(PT) Assembly (MV204,208)(not /N1)
	B9968QA	1	Slow AD(PT) Assembly (MV210,220,230)(not /N1)
	B9968QF	1	Fast 2AD(CU) Assembly (MV204,208)(/N1) } (select)
	B9968QD	1	Slow AD(CU) Assembly (MV210,220,230)(/N1)
3	B9968SB	1	4ch Scanner Assembly (MV204,208)
	B9968SD	1	10ch Scanner Assembly (MV210,220,230)(not /N1/N2) } (select)
	B9968TY	1	10ch ISO Scanner Assembly (MV210,220,230)(/N1or/N2) } (select)
4	B9968QC	1	Fast 2AD(PT) Assembly (MV208)(not /N1)
	B9968QA	1	Slow AD(PT) Assembly (MV220,230)(not /N1) } (select)
	B9968QF	1	Fast 2AD(CU) Assembly (MV208)(/N1)
	B9968QD	1	Slow AD(CU) Assembly (MV220,230)(/N1)
5	B9968SB	1	4ch Scanner Assembly (MV208)
	B9968SD	1	10ch Scanner Assembly (MV220,230)(not /N1/N2) } (select)
	B9968TY	1	10ch ISO Scanner Assembly (MV220,230)(/N1or/N2) } (select)
6	B9968QA	1	Slow AD(PT) Assembly (MV230)(not /N1) } (select)
	B9968QD	1	Slow AD(CU) Assembly (MV230)(/N1) } (select)
7	B9968SD	1	10ch Scanner Assembly (MV230)(not /N1/N2) } (select)
	B9968TY	1	10ch ISO Scanner Assembly (MV230)(/N1or/N2) } (select)
8	Y9414LB	1	B.H.Screw,M4X14
9	B9968EL	1	Clamp
10	A1193MN	1	Magnetic Parts
11	B9968TQ	1	Comm Board Assembly (/C2)
	B9968TP	1	Comm Board Assembly (/C3)
	B9968SQ	1	Comm Board Assembly (not /C2,/C3,/CF1) } (select)
	B9968TW	1	FF Comm Board Assembly (/CF1) } (select)
12	B9976HH	1	CPU Board Assembly
13	B9968SG	1	CPU Board Assembly
14	B9968CX	1	CPU Bracket
15	B9968SJ	1	Display Board Assembly
16	B9976NL	1	Memory Assembly
17	B9976GH	1	Name Plate
18	-	1	Memory Board & Battery Assembly
19	B9968ND	1	Battery Assembly
20	A9069KY	1	Clamp
21	B9968EM	1	Rivet
22	-	1	Memory Board Assembly
23	B9968GA	1	FDD Drive Assembly(MV2□□-1)
24	A1092UN	1	Memory System
25	Y9204LS	3	Screw
26	B9968MA	1	FDD FCC
27	B9968SW	1	FDD Board Assembly
28	A1484UP	1	Power Supply *1 } (select)
	B9968TZ	1	DC12 Power Assembly *2 } (select)
29	B9976SP	1	Mother Board Assembly *2 } (select)
	B9976RP	1	Mother Board Assembly *1 } (select)
30	B9968GL	1	ATA Drive Assembly(MV2□□-3)
31	A1492JS	1	Socket
32	Y9208LB	2	Screw
33	B9968SV	1	PC-Card Board Assembly
34	B9968GD	1	Zip Drive Assembly(MV2□□-2)
35	A1150UN	1	Memory System
36	Y9203LB	3	Screw
37	B9968MB	1	IDE FFC
38	B9968SU	1	Zip Conn Board Assembly
39	B9968ST	1	IDE Board Assembly

Item	Part No.	Qty	Description
40	B9968HQ	1	VGA Board Assembly (/D5)
41	B9968GS	1	Clamp
42	-	1	Bracket
43	B9968UX	1	VGA Board Assembly
44	A1193MN	1	Magnetic Parts (/D5)
45	Y9414LB	1	B.H.Screw,M4x14(/D5)
46	B9968EL	1	Clamp (/D5)

Note:
*1 MV2□□-□-□-□-1
*2 MV2□□-□-□-□-2

Bezel Assembly

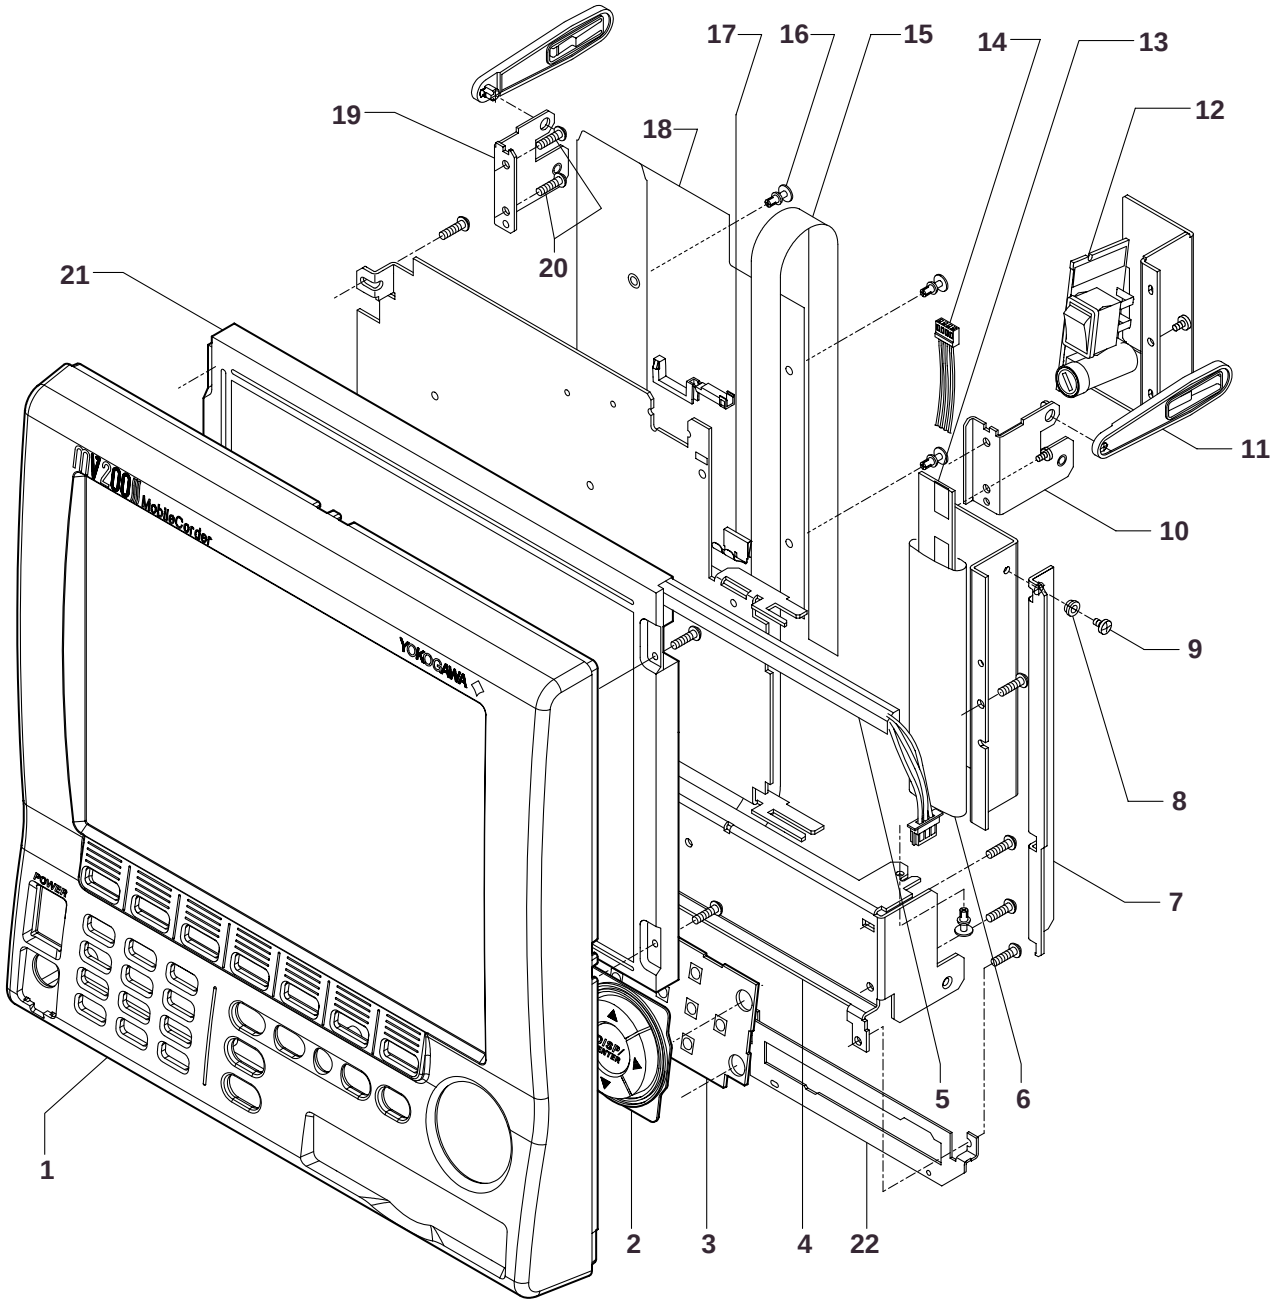

Item	Part No.	Qty	Description
1	B9976GL	1	Sub Bezel Assembly
2	B9976HS	1	Key Top (MV2□□-□-2) (select)
	B9976HT	1	Key Top (MV2□□-□-1) (select)
3	B9976RR	1	SW Board Assembly
4	B9976GW	1	Key Board Bracket
5	A1044VZ	1	Back Light
6	B9968ML	1	Inverter Cover
7	B9976GT	1	Stay Bracket
8	B9968EN	1	Bushing
9	Y9305LB	1	B.H.Screw,M3x5
10	B9976GU	1	R-Hing Bracket
11	B9968BM	2	Hinge Arm
12	B9968SM	1	Power Switch Board Assembly
13	A1490UP	1	Inverter

Item	Part No.	Qty	Description
14	B9968MK	1	Inverter Cable
15	B9968MC	1	Key FCC
16	B9543SQ	5	NRP-345
17	B9968GU	2	Shield Finger
18	B9976GS	1	Sheet
19	B9976GV	1	L-Hinge Bracket
20	B9988DL	2	Screw
21	A1059VA	1	LCD
22	B9976BL	1	Blind Plate (MV2□□-0)
	B9976BM	1	FDD Plate (MV2□□-1) (select)
	B9976BN	1	Zip Plate (MV2□□-2) (select)
	B9976BZ	1	ATA Bracket Assembly (MV2□□-3) (select)

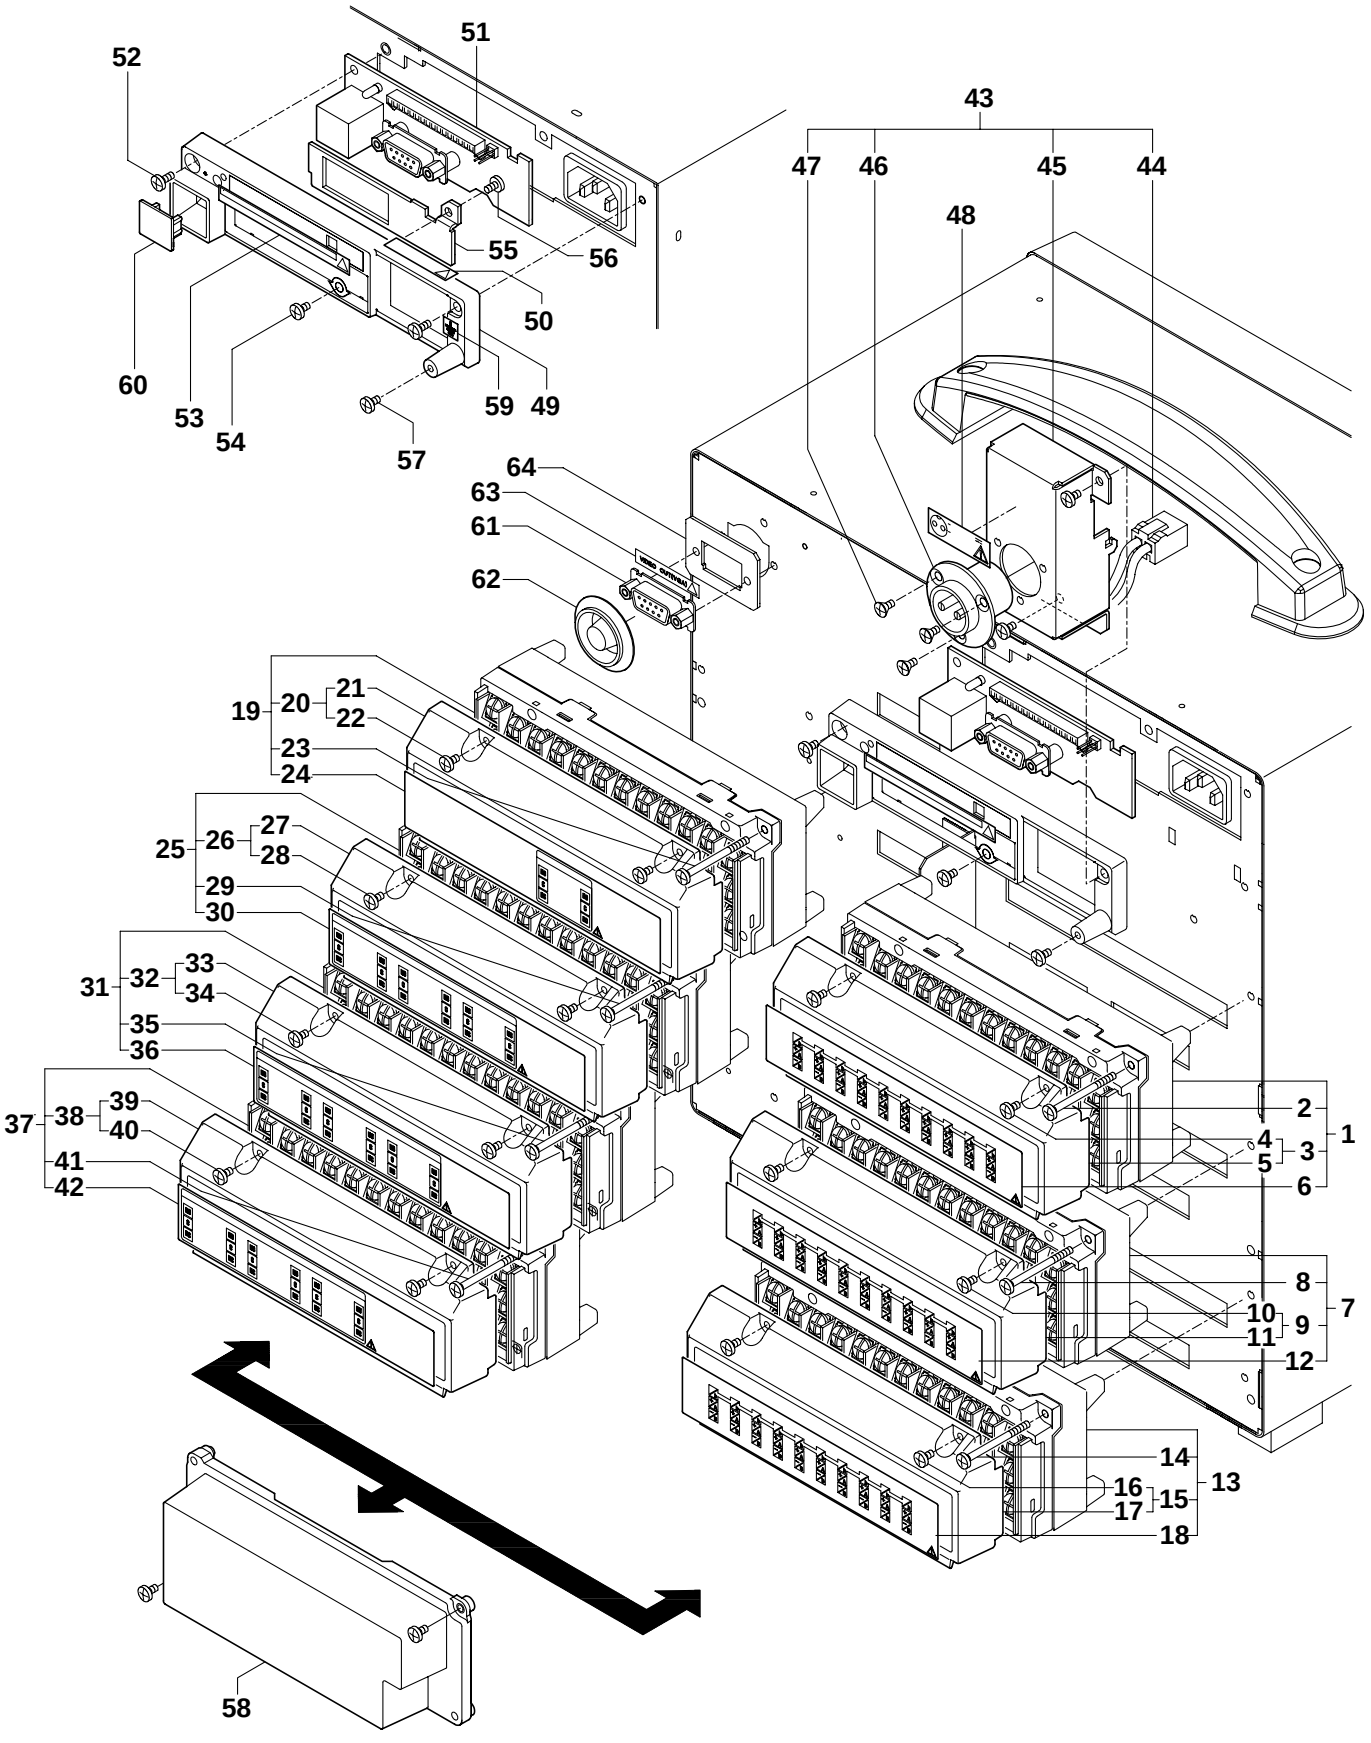
51
52
43
47
46
45
44
48
55
56
50
60
53
54
59
49
57
64
63
61
62
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
2
4
5
1
3
6
8
10
11
9
7
12
14
16
17
15
13
18
58

Item	Part No.	Qty	Description	
1	B9968LE	1	Input Terminal Assembly (MV210,220,230)*2(not /N1/N2)	(select)
	B9968LN	1	Input Terminal Assembly (MV210,220,230)*2(/N1/N2)	
	B9968JB	1	Input Terminal Assembly (MV210,220,230)*1(not /N1/N2)	
	B9968JC	1	Input Terminal Assembly (MV210,220,230)*1(/N1/N2)	
	B9968LJ	1	Input Terminal Assembly (MV204,208)*2	
	B9968LT	1	Input Terminal Assembly (MV204,208)*1	
2	B9968DJ	2	Screw	
◎ 3	B9968DF	1	Cover Assembly	
4	B9900SG	2	Screw	
5	B9968DG	1	Cover	
◎ 6	B9968EP	1	Name Plate (MV210,220,230)*2(not /N1/N2)	(select)
	B9968FS	1	Name Plate (MV210,220,230)*2(/N1/N2)	
	B9968JQ	1	Name Plate (MV210,220,230)*1(not /N1/N2)	
	B9968JR	1	Name Plate (MV210,220,230)*1(/N1/N2)	
	B9968FV	1	Name Plate (MV204,208)*2	
	B9968JJ	1	Name Plate (MV204,208)*1	
7	B9968LF	1	Input Terminal Assembly (Mv220,230)*2(not /N1/N2)	(select)
	B9968LP	1	Input Terminal Assembly (MV220,230)*2(/N1/N2)	
	B9968JD	1	Input Terminal Assembly (MV220,230)*1(not /N1/N2)	
	B9968JE	1	Input Terminal Assembly (MV220,230)*1(/N1/N2)	
	B9968LK	1	Input Terminal Assembly (MV208)*2	
	B9968JA	1	Input Terminal Assembly (MV208)*1	
58	B9968DN	1	Conn Cover Assembly (Mv210,204)	
8	B9968DJ	2	Screw	
◎ 9	B9968DF	1	Cover Assembly	
10	B9900SG	2	Screw	
11	B9968DG	1	Cover	
◎ 12	B9968EQ	1	Name Plate (MV220,230)*2(not /N1/N2)	(select)
	B9968FT	1	Name Plate (MV220,230)*2(/N1/N2)	
	B9968JS	1	Name Plate (MV220,230)*1(not /N1/N2)	
	B9968JT	1	Name Plate (MV220,230)*1(/N1/N2)	
	B9968FW	1	Name Plate (MV208)*2	
	B9968JK	1	Name Plate (MV208)*1	
13	B9968LG	1	Input Terminal Assembly (MV230)*2(not /N1/N2)	(select)
	B9968LQ	1	Input Terminal Assembly (MV230)*2(/N1/N2)	
	B9968JF	1	Input Terminal Assembly (MV230)*1(not /N1/N2)	
	B9968JG	1	Input Terminal Assembly (MV230)*1(/N1/N2))	
58	B9968DN	1	Conn Cover Assembly (MV204,208,210,220)	
14	B9968DJ	2	Screw	
◎ 15	B9968DF	1	Cover Assembly	
16	B9900SG	2	Screw	
17	B9968DG	1	Cover	
◎ 18	B9968ER	1	Name Plate (MV230)*2(not /N1/N2)	(select)
	B9968FU	1	Name Plate (MV230)*2(/N1/N2)	
	B9968JU	1	Name Plate (MV230)*1(not /N1/N2)	
	B9968JV	1	Name Plate (MV230)*1(/N1/N2)	
19	B9968KA	1	Option Terminal Assembly*1	(select)
	B9968KB	1	Option Terminal Assembly*12,*26	
	B9968KC	1	Option Terminal Assembly*2	
	B9968KD	1	Option Terminal Assembly*13,*27	
	B9968KE	1	Option Terminal Assembly*3,*4,*5	
	B9968KJ	1	Option Terminal Assembly*14,*15,*16	
	B9968KK	1	Option Terminal Assembly*11	
	B9968KL	1	Option Terminal Assembly*7	
	B9968KM	1	Option Terminal Assembly*18,*22	
	B9968KN	1	Option Terminal Assembly*8	
	B9968KP	1	Option Terminal Assembly*19,*23	
	B9968KQ	1	Option Terminal Assembly*6,*9,*10	
	B9968KR	1	Option Terminal Assembly*17,*20,*21	
58	B9968DN	1	Conn Cover Assembly	
◎ 20	B9968DF	1	Cover Assembly	
21	B9968DG	1	Cover	
22	B9900SG	2	Screw	
23	B9968DJ	2	Screw	
◎ 24	B9968EW	1	Name Plate*1	(select)
	B9968EX	1	Name Plate*12,*26	
	B9968EY	1	Name Plate*2	
	B9968EZ	1	Name Plate*13,*27	
	B9968FA	1	Name Plate*3,*4,*5	
	B9968FE	1	Name Plate*14,*15,*16	
	B9968FF	1	Name Plate*11	
	B9968FH	1	Name Plate*7	
	B9968FJ	1	Name Plate*18,*22	
	B9968FK	1	Name Plate*8	
	B9968FL	1	Name Plate*19,*23	
	B9968FM	1	Name Plate*6,*9,*10	
	B9968FN	1	Name Plate*17,*20,*21	

Model Code	Suffix Code (options)				
MV2□□-□-□	/A1				*1
	/A2				*2
	/A3				*3
	/A4				*4
	/A5				*5
		/F1			*6
	/A1	/F1			*7
	/A2	/F1			*8
	/A3	/F1			*9
	/A4	/F1			*10
	/AR1	/F1			*22
	/AR2	/F1			*23
			/R1		*11
	/A1		/R1		*12
	/A2		/R1		*13
	/A3		/R1		*14
	/A4		/R1		*15
	/A5		/R1		*16
		/F1	/R1		*17
	/A1	/F1	/R1		*18
	/A2	/F1	/R1		*19
	/A3	/F1	/R1		*20
	/A4	/F1	/R1		*21
	/TPS4				*24
	/TPS8				*25
	/AR1				*26
	/AR2				*27

Item	Part No.	Qty	Description	
25	B9968KF	1	Option Terminal Assembly*4,*5,*9,*10	(select)
58	B9968DN	1	Conn Cover Assembly	
◎ 26	B9968DF	1	Cover Assembly	
27	B9968DG	1	Cover	
28	B9900SG	2	Screw	
29	B9968DJ	2	Screw	
◎ 30	B9968FB	1	Name Plate*4,*5,*9,*10	
31	B9968KW	1	Option Terminal Assembly *25	(select)
	B9968KG	1	Option Terminal Assembly *5,*10	
58	B9968DN	1	Conn Cover Assembly	
◎ 32	B9968DF	1	Cover Assembly	
33	B9968DG	1	Cover	
34	B9900SG	2	Screw	
35	B9968DJ	2	Screw	
◎ 36	B9968FC	1	Name Plate *5,*10	(select)
	B9968KP	1	Name Plate *25	
37	B9968KW	1	Option Terminal Assembly *24,*25	(select)
	B9968KH	1	Option Terminal Assembly *5	
58	B9968DN	1	Conn Cover Assembly	
◎ 38	B9968DF	1	Cover Assembly	
39	B9968DG	1	Cover	
40	B9900SG	2	Screw	
41	B9968DJ	2	Screw	
◎ 42	B9968FD	1	Name Plate *5	(select)
	B9968KP	1	Name Plate *24,*25	
43	B9976JC	1	DC Input Assembly *2	
44	B9976GZ	1	DC12V Power Cable *2	
45	B9976JB	1	DC Input Cover *2	
46	A1106JC	1	Cable Conn *2	
47	Y9305EB	3	F.H.Screw,M3x5 *2	
48	B9976GE	1	Name Plate *2	
49	B9968EE	1	Terminal	
50	B9968AF	1	Name Plate *1	(select)
51	B9968RJ	1	COMM Term Board Assembly (/C2)	
	B9968RK	1	COMM Term Board Assembly (/C3)	
	B9968RG	1	COMM Term Board Assembly (not /C2,/C3)	
52	Y9308LB	2	B.H.Screw,M3x8	
53	B9968AG	1	Name Plate (/C2)	(select)
	B9968AH	1	Name Plate (/C3)	
	B9968AJ	1	Sheet (not /C2,/C3)	
54	Y9305LB	1	B.H.Screw,M3x5	
55	B9968EH	1	Blind Bracket (not /C2,/C3)	(select)
	B9968EJ	1	RS-232 Bracket (/C2)	
56	Y9305TS	1	Tapping Screw (not /C3)	
57	Y9308LB	1	B.H.Screw,M3x8	
59	B9968HE	1	Name Plate	
◎ 60	A1447JZ	1	Modular Cover	
61	B9968MN	1	VGA Cable (/D5)	
62	B9968EK	1	Cap (not /D5)	
63	B9968HT	1	Name Plate (/D5)	
64	B9968HS	1	Bracket (/D5)	

Note:
*1 MV2□□-□-□-1
*2 MV2□□-□-□-2
◎ CMPL Parts

Standard Accessories

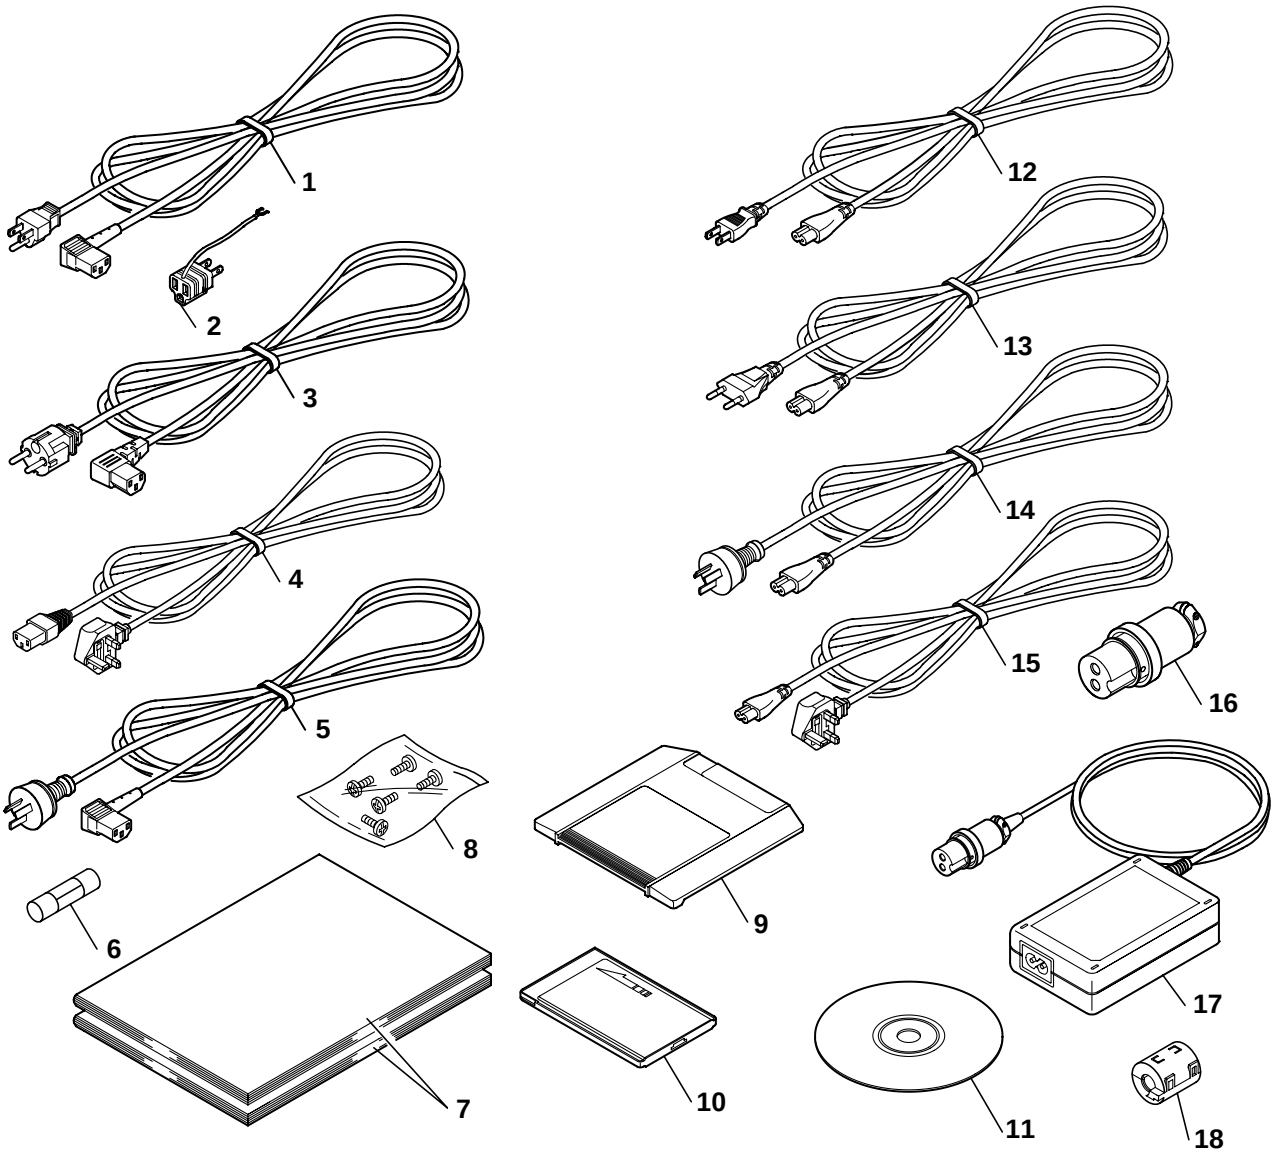

	Item	Part No.	Qty	Description	
◎	1	A1006WD	1	Power Supply Code (UL.CSA standard) *1*6.*2*6	(select)
◎	2	A1253JZ	1	3P-2P Adapter *1*6	
◎	3	A1009WD	1	Power Supply Code (VDE standard) *3*6	
◎	4	A1023WD	1	Power Supply Code (BS standard) *4*6	
◎	5	A1024WD	1	Power Supply Code (SAA standard) *5*6	
◎	6	A1423EF	1	Fuse *6	(select)
		A1354EF	1	Fuse *7	
	7	-	1	Instruction Manual	
◎	8	E9655FX	5	B.H.Screw,M4x6(±)	
◎	9	A1053MP	1	Mag Memory :Zip 100MB disk(MV2□□-2)	
◎	10	B9968PK	1	Memory System :ATA flash memory card(MV2□□-3)	
◎	11	DXA100	1	DAQSTANDARD	
◎	12	B9988YA	1	AC-Cord *1*7,*2*7	(select)
◎	13	B9988YB	1	AC-Cord *3*7	
◎	14	B9988YC	1	AC-Cord *5*7	
◎	15	B9988YD	1	AC-Cord *4*7	
◎	16	A1105JC	1	Cable Connecter *7	
◎	17	B9230ZW	1	AC Adapter Assembly *7	
◎	18	A1179MN	1	Magnetic Parts (/CF1)	

Note:
- *1 MV2□□-/M
- *2 MV2□□-/D
- *3 MV2□□-/F
- *4 MV2□□-/S
- *5 MV2□□-/R
- *6 MV2□□-□-□-□-1
- *7 MV2□□-□-□-□-2
- ◎ CMPL parts