

Instruction card

Complete Hastelloy Cleaning System /HCNF Part No K1547PJ

IM12A06V01-00EN-P

Purpose

The purpose of this document is to describe the components and explain the assembly process of the complete hastelloy cleaning system HCNF. (Part number K1547PJ). The set is compatible with sensors FU20 and PH21 for standalone installation or combined with immersion fittings. For details and dimensional specifications related to the sensor please refer to the corresponding GS, IM documents of the selected product.

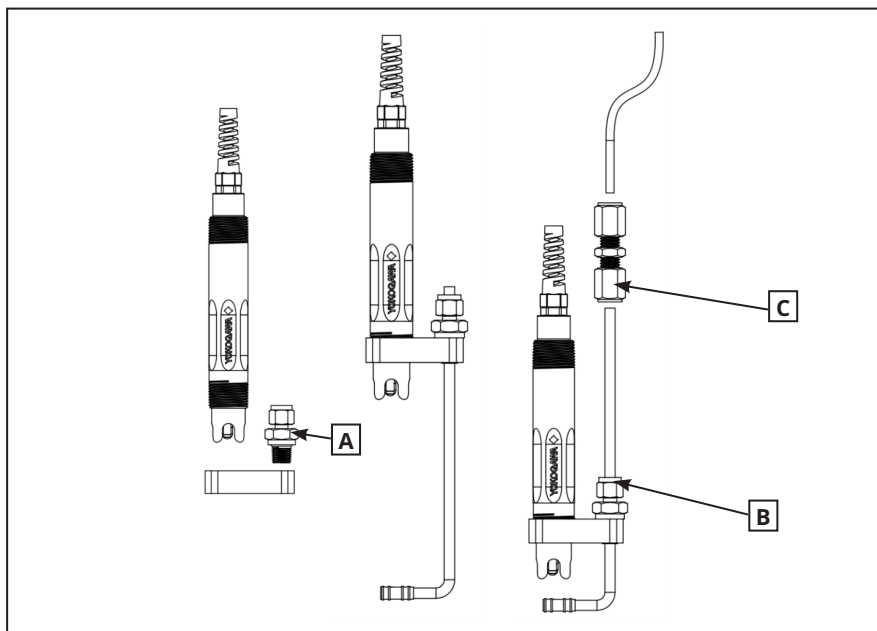


Figure 1: Schematic representation of the assembly process steps for cleaning system HCNF.

Assembly steps for the HCNF Cleaning System

Step 1: Screw the sensor and connector (A) in the holder.

Step 2: Put cleaning tube through the connector.

Step 3: Adjust the cleaning tube to the desired height with the spraying part directly underneath the measuring probe and lock it by tightly screwing the union nut (B) on the connector.

Step 4: Connect the bridge (C) to the cleaning tube and then to the flexible tube. For all connections you will need to use a wrench.