# User's Manual

XS770A Wireless Sushi Sensor

Wireless Vibration Sensor Startup Guide

IM 01W06E01-01EN

IM 01W06E01-01EN



Yokogawa 🔶

# YOKOGAWA 🔶

YOKOGAWA ELECTRIC CORPORATION Headquarters 3-32, Nakacho, 2-chome, Musashino-shi, Tokyo, 180-8750 JAPAN Phone: 514-22-52-5555 Branch Sales Offices Osaka, Nagoya, Mroshima, Kurashiki, Fukuoka, Kitakyusyu

YOKOGAWA EUROPE B. V. Euroweg 2, 3825 HD Amersfoort, THE NETHERLANDS Phone : 31-88-4641000 Fax : 31-88-4641111

Yokogawa United Kingdom Ltd. Stuart Road, Manor Park, Runcom, Cheshire WA7 1TR, United Kingdo Physe: 440.1028-597101 Exv: 441.1028-597101

YOKOGAWA ENGINEERING ASIA PTE. LTD. 5 Bedok South Road, Singapore 489270, SINGAPORE Phone : 65-6241-9933 Fax : 65-6241-2606

YOKOGAWA CORPORATION OF AMERICA Head Office 12530 West Airport Blvd, Sugar Land, Texas 77478, USA Phone 1: 421-340-3800 Fax: 1-281-340-3838

YOKOGAWA ELECTRIC KOREA CO., LTD. (Yokogawa BD, Yangpyeong-dong 4-Ga), 21, Seonyu-ro 45-gil, wengu agawa BD, KOREA Phone 7.872-2678-RH00 Fax: 7.872-2678-R400

YOKOGAWA AUSTRALIA PTY. LTD Tower A, 112-118 Talavera Road, Macquarie Park NSW 2113, AUSTRALIA Phone: 61-2-8870-1100 Fax: 61-2-8870-1111

YOKOGAWA AMERICA DO SUL LTDA. Alameda Xingu 850 Barueri CEP 06455-030- Barueri – SP/Brasi Phone: 555-11-5513-1300 (Sales, Engineering and Service) 55-11-5881-2400 (Manufacturing and Procurement)

YOKOGAWA MIDDLE EAST & AFRICA B.S.C.(C) P.O. Box 10070, Manama, Building 577, Road 2516, Busaiteen 225, Muharraq Kingdom of BAHRAIN Phone : 973-17358100 Fax : 973-17336100

YOKOGAWA INDIA LTD. Piot No.96, Electronic City Complex, Hosur Road, Bangalore - 560 100, INDIA Phone : 91-80-4158-6000 Fax : 91-80-2852-0625

YOKOGAWA CHINA CO., LTD. 3F Tower D Cartelo Crocodile Building, No.568 West Tianshan Road, Shanghai 20033, CHINA Phone : 86-21-62398282 Fax : 86-21-62387866

# 1. Introduction

Thank you for purchasing the XS770A Wireless Vibration Sensor.

Your XS770A was precisely calibrated at the factory before shipment. To ensure both safety and efficiency, please read this manual and the following related documents carefully before you operate the instrument.

Document Name	Document No.
General Specification	GS 01W06E01-01EN
XS770A Wireless Vibration Sensor	
User's Manual	IM 01W06E01-01EN
XS770A Wireless Vibration Sensor Startup Guide	(This document)
User's Manual	IM 01W06C01-01EN
Sushi Sensor Series Software Edition	

This manual describes important information to enable appropriate and safe use, installation and maintenance of the XS770A. The XS770A functional explanation, settings, operation, and maintenance are described in the User's Manual "IM 01W06C01-01EN". Before beginning to operate this device, always read these documents to learn how to use this product correctly. The User's Manual (PDF file) can be downloaded from the website (http://www.sushisensor.com/).

#### Regarding This Manual

- This manual should be provided to the end user.
- This manual and the identification tag attached on the packing box are essential parts of the product; keep them in a safe place for future reference.
- · The contents of this manual are subject to change without prior notice.
- All rights reserved. No part of this manual may be reproduced in any form without Yokogawa's written permission.
- Yokogawa makes no warranty of any kind with regard to this manual, including, but not limited to, implied warranty of merchantability and fitness for a particular purpose.
- If any question arises or errors are found, or if any information is missing from this manual, please inform the nearest Yokogawa sales office.
- The specifications covered by this manual are limited to those for the standard type under the specified model number break-down and do not cover custom-made instruments. When products whose suffix code or optional codes contain code "Z" and an exclusive document is attached, please read it along with this manual.
- Please note that changes in the specifications, construction, or component parts of the instrument may not immediately be reflected in this manual at the time of change, provided that postponement of revisions will not cause difficulty to the user from a functional or performance standpoint.

#### Safety, Protection, and Modification of this Product

- This product is designed to be used by a person with specialized knowledge.
- To protect the operator, product, and system controlled by the product, observe the safety precautions described in this manual. If users handle contrary to these instructions, we cannot guarantee safety.
- The Modification of the product is strictly prohibited.
- The following safety symbols are used in this manual:

# 

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

# 

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury or physical damage. It may also be used to alert against unsafe practices.

# **IMPORTANT**

Indicates that operating the hardware or software in this manner may damage it or lead to system failure.

#### NOTE

Draws attention to information essential for understanding the operation and features.

## 1.1 Safe Use of This Product

- Users of explosion protected instruments should refer first to "8. Explosion Protected Instrument".
- The use of this instrument is restricted to those who have received appropriate training for the device.
- Take care not to create sparks when accessing the instrument or peripheral devices in a hazardous location.
- Repair or modification to this instrument by customer will cause a malfunction
  of explosion protect function and hazardous situation. If you need to repair or
  modification, please contact the nearest Yokogawa office.

### 1.2 Radio Waves

This product is designated as a certification of construction type as a wireless facility for 400 MHz, 800 MHz band and 900 MHz band low-power data communication system of the Radio Act. Refer to "7.2 Regulatory Compliance Statements" for detail. For detail on each countries area code, frequency and LoRaWAN regional parameter, refer to the table in "7.1 General Specifications". For area code 2, Sweden and Greece do not allow full use of the 863 to 870 MHz band. Detail of the restrictions, refer to EC Decision 2006/771/EC (as amended).

# IMPORTANT

- Due to the designated certification of construction type, users may be subject to
  legal punishment in case of disassembling or modifying this product.
- Preventing interference with other wireless stations
   Industrial, scientific, and medical equipment, as well as local wireless stations
   (license required) and specific low power wireless stations (license not required)
   for identifying mobile objects used in factory production lines, use the same
   frequency band as this product.
- Check that local wireless stations and specific low-power wireless stations are not
  being used in the vicinity before using this product.
- If this product causes radio interference in a local wireless station, stop the emission of radio waves immediately. For details on how to prevent radio interference, contact our service office.

## 1.3 Warranty

- The warranty shall cover the period noted on the quotation presented to the purchaser at the time of purchase. Problems occurring during the warranty period shall basically be repaired free of charge.
- If any problems are experienced with this product, the customer should contact the Yokogawa representative from which this product was purchased or the nearest Yokogawa office.
- If a problem arises with this product, please inform us of the nature of the problem and the circumstances under which it developed, including the model specification and serial number. Any diagrams, data and other information you can include in your communication will also be helpful.
- The party responsible for the cost of fixing the problem shall be determined by Yokogawa following an investigation conducted by Yokogawa.
- The purchaser shall bear the responsibility for repair costs, even during the warranty period, if the malfunction is due to:
- Improper and/or inadequate maintenance by the purchaser.
- Malfunction or damage due to a failure to handle, use, or store this product in accordance with the design specifications.
- Use of this product in question in a location not conforming to the standards specified by Yokogawa, or due to improper maintenance of the installation location.
- Failure or damage due to modification or repair by any party except Yokogawa or an approved representative of Yokogawa.
- Malfunction or damage from improper relocation of this product in question after delivery.
- Reason for force majeure such as fires, earthquakes, storms/floods, thunder/ lightning, or other natural disasters, or disturbances, riots, warfare, or radioactive contamination.

#### 1.4 Trademarks

In this document, trademarks or registered trademarks are not marked with "TM" or "®". Product names and company names in this document are trademarks or registered trademarks of the respective companies.

# 2. Notes on Handling

The XS770A is fully factory-tested before shipment. When the XS770A is delivered, check the appearance for damage and that all the components mentioned below are included.

This section describes the precautions required to handle this product. Before use, read this section thoroughly. For information about other items, refer to the relevant sections.

# Bundled Items

- XS770A main unit (with built-in battery)
- Hexagon socket set screw
- Conversion screw (Area code 3 only)
- User's Manual (IM 01W06E01-01EN)
- Default key label

# 2.1 Check the Model and Specifications

The model name and specifications are written on the nameplate attached to the housing. Verify that the specification indicated in the "Model and Suffix Code" in General Specifications "GS 01W06E01-01EN" complies with the specifications written on the order sheet.

# 2.2 Transport

To prevent damage while in transit ,leave the XS770A in the original shipping container until it reaches the installation site.



# 2.3 Storage

- Temperature:

- Humidity:

When an extended storage period is expected, observe the following precautions. (1)Choose a storage location that satisfies the following requirements.

- A location that is not exposed to rain or water.
- A location subject to a minimum of vibration or impact.
- The following temperature and humidity range are recommended.
  - -20 to 40°C (-4 to 104°F)
  - (-20 to  $85^{\circ}$ C (-4 to  $185^{\circ}$ F) with the battery removed)
  - 0 to 100% RH (non-condensation)
- (2)If at all possible, store the transmitter in factory-shipped condition, that is, in the original shipping container.

# NOTE

When storing this product over a long period, it is recommended to put the instrument in OFF Mode to conserve the battery. This product is shipped in OFF Mode from the factory. For details on how to switch to OFF Mode, refer to "IM 01W06C01-01EN".

# 2.4 Selecting the Installation Location

This product is designed to withstand severe environmental conditions. However, to ensure that it will provide years of stable and accurate performance, take the following precautions when selecting the installation location.

## Wireless Communication

Ensure that there are no obstacles such as walls or pipes within a 30-cm radius of each antenna.

Also, avoid using it for a long time with unstable communication.

## Ambient Temperature

Avoid locations subject to wide temperature variations or a significant temperature gradient. If the location is exposed to radiant heat from plant equipment, provide adequate thermal insulation and/or ventilation.

## Ambient Atmosphere

Do not install the product in a location with a corrosive atmosphere. If this cannot be avoided, ensure there is adequate ventilation.

Also, avoid gas, liquid, or solids containing organic solvents and acidic/alkaline chemicals from adhering to the product.

# 2.5 Restrictions on Use of Radio Transceivers

# IMPORTANT

Although this product has been designed to resist high frequency electrical noise, if a radio transceiver is used near this product or its external wiring, this product may be affected by high frequency noise pickup. To test this, start from a distance of several meters and slowly approach this product with the transceiver while observing the measurement loop for noise effects. Thereafter use the transceiver outside the range where the noise effects were first observed.

F01.ai Figure2.1 Example of Nameplate

AD IM 01W06E01-0

(PLOSIVE )SPHERE IS


SE ONLY BATTERY

CER

⟨ξ<sub>X</sub>⟩ II 3 G Ex ic IIB T4 Gc - 20°C≤Ta≤+80°C

X

# 3. Component Names

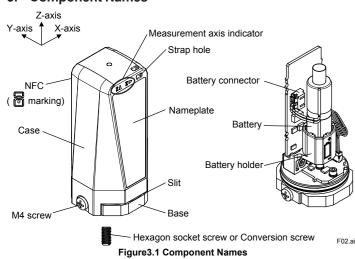

# 4. Installation

## 4.1 Precautions

- For information on the ambient conditions allowed at the installation location, refer to subsection "2.4 Selecting the Installation Location".
- Make sure that there are no damages, deformations, or stains adhering to the surface of the Base. Any deformations or stains may affect measurements.
- To align the X-axis or Y-axis to the desired orientation, make appropriate adjustments using the software after mounting. For details, refer to "IM 01W06C01-01EN".

# 4.2 Installation Procedure

This product can be attached using two methods: direct mounting or using the magnetic holder (F9096DA) included as an accessory.

To install XS770A, follow the procedure below.

 Determine the mounting position of this product. Find a plain surface with a diameter of 40 mm (1.57 inch) or more and a thickness of 7 mm (0.28 inch) or more.

# Mounting this product. 2a. Direct mounting

- 2a.1 Follow the procedure below, make a vertical installation hole.
  - In case using the hexagon socket set screw, make a screw hole (more than 7 mm deep at M6 P-1) in the mounting position.
  - In case using the conversion screw, make a screw hole (more than
     0.28 inch deep at UNF1/4-28) in the mounting position.
- 2a.2 Attach the screw (provided hexagon socket set screw or provided conversion screw) to the base. If using the conversion screw, screw the M6 side(with no notch) into the base.
- 2a.3 Attach this product to the installation hole made on the measurement target, and tighten the screw using a tool such as a 46 mm wrench. (Recommended tightening torque: 5.1 N·m)

2b. Using the magnetic holde

- 2b.1 Attach the provided hexagon socket set screw to the Base.
- 2b.2 Attach this product to the magnetic holder and tighten the screw using a tool such as a 46 mm wrench or strap wrench. (Recommended tightening torque: 5.1 N·m)
- 2b.3 Attach this product to the installation surface. The magnetic holder has a strong magnetic force. When attaching, place the edge of the magnetic holder on the installation surface once, then carefully install the product without moving your hand.
- Make sure that there is no loose space in the connection surface between this product and the measurement target, and that no abnormal vibration occurs.
- Confirm safety and tie the strap hole of this product to a structural object nearby with a string as needed.

Removal is the reverse of the above.

# 

- Tighten the screw and use the proper tools for all operations and ensure that the tool is applied to the Base (metallic part).
- Even if you are using the magnet holder, when replacing the battery, please tighten the screw again using a tool such as a 46 mm wrench and strap wrench. (Recommended tightening torque: 5.1 N·m)
- Install XS770A with extremely careful not to injure your hand or finger.
- Note that, when installing XS770A using the magnetic holder, the vibration measurement frequency band drops.
- The magnetic holder can be mounted on ferrous material with a plain surface and no painting. When installing other conditions of the above, tie the strap hole of this product to a structural object nearby with a string<sup>\*1</sup> and take measures to prevent falling.
- In case the earthing of the Base (metallic part of the enclosure) is not ensured by installation, use the screw at the side of the Base for bonding the Base to the earth point or the equipotential bonding system.

\*1: Use a wire with a load capacity (cutting load) of 2 kg or more.

# 5. Operation

To perform the setting and status check of the product, use an Android device with the NFC interface. Download Sushi Sensor App from Google Play.

- Sushi Sensor App provides the following functions.
- Network setting
- Sensor setting
- Status check of communication, sensor, battery life, etc.
- Switch to OFF Mode
- For details, refer to "IM 01W06C01-01EN".

Check the firmware version of XS770A with Sushi Sensor App and update it to the latest firmware before use.

# 6. Maintenance

# 6.1 Replacing the Battery

#### Preparation

Only the dedicated battery specified by us should be used with this product. When a replacement battery is needed, please order the XS70BT. The XS70BT is a set of a dedicated product (model: LS14500 C5SY) with a battery connector assembled to the SAFT battery.

# 

Be sure to use a battery that is indicated as "Rev.1" for explosion protected instruments



# Replacing the Battery



- · Do not open when an explosive atmosphere is present.
- Use only battery LS14500 C5SY (SAFT)
- Be sure to replace the battery in a safe location. Doing so in an explosive area could cause an explosion.

#### To replace a battery, follow the procedure described below.

# IMPORTANT

- This product contains parts that can be damaged by static electricity. When replacing a battery, take precautions such as using a grounded wrist strap to avoid handling electronic parts or touching the board circuit patterns.
- When putting on or removing the Case, pay great attention to the environmental conditions to prevent dust and water droplets entering the product.
- When replacing the battery, check that the product has sufficiently cooled because the built-in battery or internal components may still be hot.
- Be extremely careful not to apply excessive force to the circuit board, hit it with a tool or allow any foreign materials or stains to adhere to it.
- Be extremely careful not to forcibly pull the cable in a way that may lead to damage or disconnection.
- Be extremely careful to ensure that no foreign materials get into or become adhered to the battery connector of the product when the battery is being removed.

# . Remove two M4 screws fixing the Case.

- 2. Remove the Case by inserting a flathead screwdriver into the slit.
- B. Disconnect the battery connector from the board.
- 4. Remove the used battery from the battery holder.
- 5. Put a new battery into the battery holder with the negative side facing down.
- 6. Connect the battery connector to the board.
- 7. Put the case onto the base with directing the nameplate to the battery side.
- 8. Tighten the M4 screw to fix the case. (Recommended tightening torque: 1.37 N·m)
- 9. Initialize the battery life using Sushi Sensor App.

For details about how to initialize the battery life, refer to "IM 01W06C01-01EN".

# NOTE

If the battery and Case are not placed in the correct orientation, the Case will not be able to be closed.

# 6.2 Handling the Battery

This product uses one lithium thionyl chloride primary battery. A single battery contains approximately 0.7 grams of lithium. Under normal conditions, the battery materials are self-contained and are not reactive as long as the battery integrity is maintained. Care should be taken to prevent thermal, electrical or mechanical damage. Battery should be stored in a clean and dry area. For maximum battery life, storage temperature should not exceed 40°C.

Use the dedicated battery shown in "6.1 Replacing the battery".



#### Handling the battery

The following precautions must be observed to safely and effectively use a battery pack. Improper use may lead to fluid leakage, excessive heat, ignition, or explosion.

- Never charge it.
- Do not short-circuit it.
- · Do not disassemble, transform, or modify it.
- Do not heat it or throw it in a fire
- Do not soak it in fresh water or seawate
- Do not expose to extreme high temperatures during use, storage, or transportation.

# 

Observe the following precautions for the safe disposal of battery.

- Do not incinerate the battery, and do not expose it to a high temperature of 100°C or more. This may lead to fluid leakage or explosion.
- · Dispose of the battery according to lows and regulations.
- Transportation of products containing a lithium battery:

This product contains a lithium battery. When transporting this product with the battery installed, set this product to OFF mode to prevent the battery from draining. For details about how to change to OFF mode, refer to "IM 01W06C01-01EN". Transportation of primary lithium batteries is restricted by regulations issued by the U.S. Department of Transportation, the International Air Transport Association (IATA), the International Civil Aviation Organization (ICAO), and the European Ground Transportation of Dangerous Goods (ARD). It is the responsibility of the shipper to ensure compliance with these and any other local requirements. Consult current regulations and requirements before shipping.

#### How to replace and dispose of the battery:

(Only valid in the EU for EU Battery Directive/Regulation and in the UK for UK battery regulation.)

This is an explanation about the EU Battery Directive/Regulation and UK Battery Regulation.

The battery is included in this product.

When you remove the battery from this product and dispose of them, discard them in accordance with domestic law concerning disposal.

Take the right action on waste batteries, because the collection system in the EU or UK on waste batteries are regulated.

Battery type: Primary lithium-thionyl chloride battery



#### Notice

The symbol (see above) means they shall be sorted out and collected as ordained in the EU Battery Directive.

#### How to remove battery safely:

Refer to subsection "6.1 Replacing the Battery".

# 7. General Specifications

## 7.1 Specifications

Please refer to "GS 01W06E01-01EN" for the latest information.

# Wireless Specifications

#### Communication Protocol

Refer to "Area code, frequency and LoRaWAN regional parameter".

#### Modulation

LoRa modulation

# Data Rate:

250 to 21900 bps\* \*: Available data rate vary depending on the country.

#### Frequency:

Refer to "Area code, frequency and LoRaWAN regional parameter".

#### Radio Security: AES 128 bit encryption

# RF Transmitter Power:

Max. 7 dBm Max. 5 dBm (Only area code F)

#### Antenna:

Built-in Omni-directional antenna

## Power Supply Specifications

#### Battery:


Lithium thionyl chloride battery: 1 unit (dedicated product) Rated voltage: 3.6 V Rated capacity: 2.6 Ah

## Performance Specifications

	Item	Specification
Vibration	Measurement	Acceleration (peak), Velocity (RMS)
	Axis	X, Y, Z axes and 3-axis composite
	Range*1	Acceleration: 0 to 130 m/s <sup>2</sup> (0 to 13.26 g) Velocity* <sup>2</sup> : 0 to 20 mm/s (0 to 0.79 in/s)
	Frequency range	10 to 1,000 Hz (± 3 dB)
	Accuracy (100 Hz)	X, Y, Z axes : ±10% FS 3-axis composite: ±20% FS
Temperature	Measurement	Temperature
	Range	-20 to 85°C (-4 to 185°F)
	Resolution	0.1°C
	Measurement part	Base

1: Peak value of the input vibration. For the relation between the measurement frequency band and measurable range, refer to the following figure.

\*2: The 20 mm/s pk value is equivalent to 14 mm/s RMS when input is based on a sine wave.

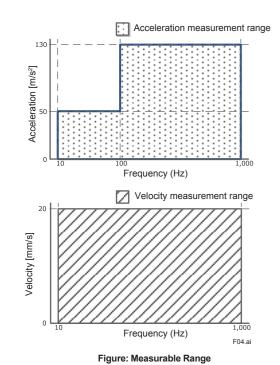



The typical battery life is 4 years in the following conditions\*.

- Update period: 1 hour
- Number of sending data: 1
- Ambient temperature: 23±2°C (73.4±3.6°F)
- \*: Battery life may be shortened due to variable factors such as ambient temperature and communication quality.

Update Period:

1 minute to 3 days

## Functional Specifications

#### Output:

Refer to "Area code, frequency and LoRaWAN regional parameter".

NFC Interface:

# NFC Forum Type 2 Tag

#### **Diagnostic Function:**

Battery alarm\*, internal temperature, wireless communication failures, sensor over-range, sensor failures, memory failures \*: The difference between the actual battery level and the battery level estimated from the usage status

may be large.
Software Download Function:

Allows the user to update software of the sensor via the NFC interface

#### Installation Environment

Ambient Temperature Limits: Operating: -20 to 85°C (-4 to 185°F)

Ambient Humidity Limits: Operating: 0 to 100% RH (non-condensation)

#### Altitude (Atmospheric pressure):

[Type Code: 00, C1] Up to 3000 m [Type Code: K2,S2,F1,P1,U1] Up to 2000 m\* (80 to 110 kPa) \*: Ambient Temperature: over 10 °C

Shock Resistance:

100 G 11 ms (3 directions/3 times)

#### Physical Specifications

#### Housing Material:

For detail, refer to "Model and Suffix Codes"

Weight:

# 260 g (0.57 lb)

# Mounting:

Mounting on the measurement target using the screw\* \*: Can also mount using the magnetic holder supplied as an accessory. Note that, when using the magnetic holder, the vibration measurement frequency band

#### Software Specifications

# Sushi Sensor APP

This software is used to perform the setting and status check of this product via the NFC interface.

#### **Operating Environment:**

Item	Recommended System Requirements		
OS	Android 5.1.1 or later		
CPU	Snapdragon 800 or equivalent or higher		
Resolution	1280x720 dots or more		
NFC	Reader, writer		
GPS	Optional		

# 

When using Sushi Sensor APP to intrinsically safe explosion devices, the Android device must comply with the following.

- When using an NFC link in a non-hazardous area, the maximum magnetic field strength generated by the Android device is 18 A/m (r.m.s.) or less (Compliant with ISO / IEC 14443).
- When using an NFC link in a hazardous area, only the Android device confirmed by Yokogawa Electric Corporation can be used.
- If additional information and approvals for Android devices are required, contact a Yokogawa representative.

#### □ KEY CARD EDITOR

This software writes the security information used in the authentication and encryption process of LoRaWAN communication to the key card.

Item	Recommended System Requirements
OS	Android 5.1.1 or later
CPU	Snapdragon 800 or better
Resolution	1280x720 dots or more
Supported NFC cards	MIFARE Ultralight     MIFARE Classic

### Area Code specifications

Area Code	Frequency	Telecommunication Compliance* <sup>4</sup>	Channel Plan	Countries and Regions*4
2	863 to 870 MHz*1	RE Directive	EU868	Europe
3	902 to 928 MHz*2	FCC/ISED Approval	US915	North America
4	919 to 925 MHz*2	SIRIM Type Approval	AS923-1	Malaysia, Singapore, Thailand
5	915 to 928 MHz*2	RCM	AU915	Australia, Chile
6	915 to 928 MHz	RCM	AS923-1	Australia, New Zealand
7	920.9 to 923.3 MHz	KC Marking	KR920	South Korea
8	865 to 867 MHz	WPC Type Approval	IN865	India
9	915 to 928 MHz	ANATEL Approval	AU915	Brazil
С	920 to 923 MHz	SDPPI Type Approval	AS923-2	Indonesia
F	470 to 510 MHz	State Radio Regulation of China	CN470	China
G	915 to 928 MHz	ENACOM Approval	AU915	Argentina
н	863 to 870 MHz*2	TRA Type Approval* <sup>3</sup>	EU868	UAE, Saudi Arabia

\*1: This wireless frequency can be used throughout Europe, although there are some restrictions in Sweden and Greece.

\*2: Available frequency bands vary depending on the country.

\*3: Referred from RE Directive.

\*4: The representative telecommunication compliance, countries and regions are listed. If you would like other available countries, contact a Yokogawa representative.

# Model and Suffix Codes

Model	Suffix Codes			des	;	Description		
XS770A*1						Wireless Vibration sensor		
	-A					Always A		
Area* <sup>12</sup>	2					Europe EU868		
	3.					North America US915*2		
	4.					Malaysia, Singapore, Thailand AS923-1		
	5.					Australia, Chile AU915		
	6.					Australia, New Zealand AS923-1		
	7.					South Korea KR920		
	8.					India IN865		
	9.					Brazil AU915		
	С.					Indonesia, Vietnam AS923-2		
	F					China CN470		
	G.					Argentina AU915		
	Н.	Н				. UAE, Saudi Arabia, South Africa, Philippines EU868		
Туре		00.				General Purpose*3		
		K2.				ATEX Intrinsic safety*4		
		S2.				IECEx Intrinsic safety*5		
		F1.				FM Nonincendive*6		
		C1.				CSA Nonincendive*11		
		P1.				South Korea Energy-limited safety*7		
		U1			INMETRO Intrinsic safety*8			
	-A			Always A				
Housing <sup>*13</sup> material <b>1</b>					Plastic (PBT), Stainless steel*9			
2					Plastic (PC), Stainless steel*10			
Power source	;			C.		Battery powered (battery included)		
					Α	Always A		

- \*1: A hexagon socket set screw is attached.
- \*2: Conversion screw is included when area code is 3. \*3: Applicable when area code is 2, 3, 7 or F.
- Applicable when area 2, 4, C or H. Area code H is applied to Saudi Arabia and Philippines. When area code is 2, ATEX intrinsic safety and UKEX intrinsic safety are applied. Area code C is applied to
- Vietnam. \*5: Applicable when area code is 4, 5, 6, 8, G or H. Area code H are Saudi Arabia, UAE and South
- Africa.
- \*6: Applicable when area code is 3 and sales country is United States.
- \*7: Applicable when area code is 7
- \*8: Applicable when area code is 9.
- \*9: Applicable when area code is 2, 4 or C.
- \*10: Applicable when area code is 3, 5 to 9, F, G or H. \*11: Applicable when area code is 3 and sales country is Canada.
- 1. Applicable when area code is 5 and sales country is Car
- \*12: The representative countries and regions are listed. If you would like other available countries, contact a Yokogawa representative.
- \*13: Avoid the components of organic solvents and acidic/alkaline chemicals from adhering to the case.

#### Optional Accessories

Item	Parts Number	Description
Magnetic holder*2	F9096DA	Magnet for mounting (M6 female screw) Material: SUS430 and SUS304, Inner magnet: Samarium-cobalt magnet
Hexagon socket set screw	B1137BS	Screw for mounting (M6)
Conversion screw	F9096CM	Screw for mounting (M6 to 1/4-28UNF)*1

\*2: When the magnetic holder is used, the vibration measurement value around the vibration


frequency of 1 kHz is affected. in addition, since the temperature measurement value measures the temperature of the base, it is affected by the temperature conduction of the magnetic holder which contains the magnet and metal compared to direct mounting.

Model	Suffix Codes			Description	
XS70BT*1				Lithium battery	
Battery typ	e	-A		Dedicated battery for XS770A	
	A		۹	Always A	
Number of	Unit -C004		Imber of Unit -C004 4 units		4 units
			-C012	12 units	


\*1: The XS70BT is a dedicated product (model: LS14500 C5SY) with a battery connector incorporated to SAFT battery

# Dimensions

Main unit

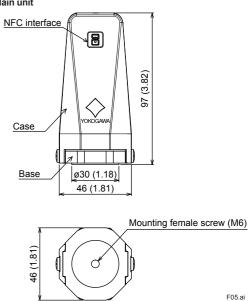

Magnetic Holder Parts No.: F9096DA

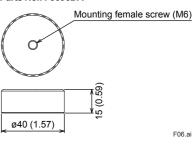


#### Hexagon socket set screw (M6) Parts No.: B1137BS





F07.ai

# Conversion screw\*1 (M6 to 1/4-28UNF)

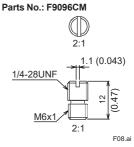

\*1: Conversion screw is attached when area code is 3

Unit: mm (approx. inch)

### 7.2 Regulatory Compliance Statements

This product satisfies the following standards.

\* Please confirm that an installation region fulfills an applicable standard. If additional regulatory information and approvals are required, contact a Yokogawa representative.

#### Telecommunication Compliance:

#### RE Directive (EU Countries)

Hereby, Yokogawa Electric Corporation declares that the radio equipment type XS770A complies with Directive 2014/53/EU. The full text of the EU declaration of conformity can be downloaded from the website.

(https://partner.yokogawa.com/global/)

#### ■ FCC compliance (United States)

#### FCC ID: SG.I-WEC016

#### FCC Approval

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

#### Co-located:

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter

#### FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### NOTE

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to

correct the interference at his own expense

#### **RF Exposure Compliance:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines. This equipment should be installed and operated keeping the radiator at least 20 cm or more away from person's body.

### ■ ISED compliance (Canada)

#### IC: 8999A-WIC015

This device contains licence-exempt transmitter(s)/receiver(s) that comply with

Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

(1)This device may not cause interference.

(2) This device must accept any interference, including interference that may cause undesired operation of the device.

#### French:

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes

(1)L'appareil ne doit pas produire de brouillage;

(2)L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

#### **RF Exposure Compliance:**

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment and meets RSS-102 of the ISED radio frequency (RF) Exposure rules. This equipment should be installed and operated keeping the radiator at least 20 cm or more away from person's body.

#### French:

Cet équipement est conforme aux limites d'exposition aux rayonnements énoncées pour un environnement non contrôlé et respecte les règles d'exposition aux fréquences radioélectriques (RF) CNR-102 de l'ISDE. Cet équipement doit être installé et utilisé en gardant une distance de 20 cm ou plus entre le radiateur et le corps humain.

#### UKCA Marking

This product of area code 2 is complied with the UKCA (UK Conformity CA Assessed) marking.

#### CE Conformity\*1:

The Authorized Representative for this product in the EEA is:

Yokogawa Europe B.V. Euroweg 2, 3825 HD Amersfoort, THE NETHERLANDS. FU RoHS Directive compliant

RE Directive (for area code 2 or H):

- Safety: EN61010-1 (Indoor/Outdoor use)\*2, EN62479\*2
- (1) Pollution Degree 2

"Pollution degree" describes the degree to which a solid, liquid, or gas which deteriorates dielectric strength or surface resistivity is adhering. "2" applies to normal indoor atmosphere. Normally, only non-conductive pollution occurs. Occasionally, however, temporary conductivity caused by condensation must be expected

(2) Installation Category I

"Overvoltage category (Installation category)" describes a number which defines a transient overvoltage condition. It implies the regulation for impulse with stand voltage. "I" applies to electrical equipment which is supplied from the circuit when appropriate transient overvoltage control means (interfaces) are provided

\*1: When area code is 2, 4, C or H, CE mark is given on the marking. When area code is 4, C or H, it cannot be used in Europe Economics Area.

\*2: When area code is 2 or H, EN61010-1 and EN62479 are applied.

**FMC** 

EN 301 489-1, EN 301 489-3, EN61326-1 Class A Table 2, EN61326-2-3, EN55011 Class A Group1

# CAUTION

This instrument is a Class A product, and it is designed for use in the industrial environment. Please use this instrument in the industrial environment only.

Radio Spectrum

EN 300 220-2 (Band h1.3 in table 1 of CEPT ERC Rec. 70-03), EN 300 330 ATEX Directive: See 8.1.1 (1) "Technical Data"

# Canadian Safety Standards:

- CAN/CSA-C22.2 No.61010-1 CSA-C22.2 No.94.2 IEC 60529 Pollution degree 2 Overvoltage category I Ambient Temperature Limits: -35 to 85°C (-31 to 185°F) Altitude (Atmospheric pressure): Up to 3000 m
- \* XS770A with suffix code area 3 is adapted into Canadian Safety Standards.

# WARNING / AVERTISSEMENT

Use only battery LS14500 C5SY (SAFT) Utiliser uniquement une batterie LS14500 C5SY (SAFT)

#### **Degrees of Protection:**

· Housing material code 1: IP66/IP67 Housing material code 2: IP66/IP67 and Type 4X

#### KC Marking

Trade Name: Yokogawa Electric Corp. Equipment Name: Wireless Vibration Sensor Manufacturer: Yokogawa Electric Corp.

#### Waste Electrical and Electronic Equipment (WEEE)

(Only valid in the EU for EU WEEE Directive and in the UK for UK WEEE Regulation.) This product complies with the WEEE Directive marking requirement. This marking indicates that you must not discard this electrical/electronic product in

domestic household waste.

Product Category

With reference to the equipment types in the WEEE directive, this product is classified as "Small equipment"

Do not dispose of this product in domestic household waste.

When disposing of products in the EEA or UK, contact your local Yokogawa Europe B.V. office or UK office respectively.



#### ■ 微功率短距离设备声明

- 这个产品符合"微功率短距离无线电发射设备目录和技术要求"民用计量仪表技术要 求,用于LoRa无线通信用。采用内置天线。使用方法请参考本使用手册。 • 不得擅自改变使用场景或使用条件、扩大发射频率范围、加大发射功率(包括额外加装
- 射频功率放大器),不得擅自更改发射天线。 • 不得对其他合法的无线电台(站)产生有害干扰,也不得提出免受有害干扰保护。
- 应当承受辐射射频能量的工业、科学及医疗 (ISM) 应用设备的干扰或其他合法的无线 电台(站)干扰。
- 如对其他合法的无线电台(站)产生有害干扰时,应立即停止使用,并采取措施消除干 **扰后方**可继续使用
- 在航空器内和依据法律法规、国家有关规定、标准划设的射电天文台、气象雷达站、卫 星地球站(含测控、测距、接收、导航站)等军民用无线电台(站)、机场等的电磁环境保 护区域内使用微功率设备,应当遵守电磁环境保护及相关行业主管部门的规定。
- · 禁止在以机场跑道中心点为圆心、半径 5000 米的区域内使用各类模型遥控器。
- · 使用时温度和电压的环境条件参见一般规格。

# ■電子情報製品汚染制御管理弁法(中国版 RoHS)

产品中有害物质或元素的名称及含量

				有害	物质			
型号	部件名称	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二 苯醚 (PBDE)	
XS770A	売体(金属)	0	0	0	0	0	0	
	売体(塑料)	0	0	0	0	0	0	
	基板组件	Х	0	0	0	0	0	
	电缆	0	0	0	0	0	0	
	电池	0	0	0	0	0	0	
<ul><li>○:表示 量以下。</li></ul>	○:表示该部件的所有均质材料中的有害物质的含量均在GB/T26572标准中所规定的限量 量以下。							
	★ < 1 · · · · · · · · · · · · · · · · · ·							

环保使用期限:



该标识适用于SJ/T11364中所述,在中华人民共和国销售的电

子电气产品的环保使用期限。 注)该年数为"环保使用期限",并非产品的质量保证期。

# 8. Explosion Protected Instrument

# 8.1 ATEX Conformity

(1)Technical Data

Caution for ATEX Intrinsically safe type.

Note 1. When area code is 2, ATEX intrinsic safety and UKEX intrinsic safety are applied

Note 2. Model XS770A Wireless Vibration Sensor with Type K2 for potentially explosive atmospheres

- Applicable Standards: EN IEC 60079-0:2018
- EN 60079-11: 2012
- Ex Marking:  $\langle \overline{\epsilon_x} \rangle$  II 3 G Ex ic IIB T4 Gc
- Ambient temperature: -20°C to 80°C (-4 to 176°F)
- Enclosure: IP66/IP67 in accordance with EN 60529
- NFC Link: Magnetic field strength ≤ 8.5 [A/m (peak)] (at the NFC antenna) Note 3. Installation
- The equipment must be installed in accordance with EN 60079-14.
- Installation should be in accordance with local installation requirements

(2)Operation

# WARNING

When using Sushi Sensor APP for ATEX intrinsically safe explosion devices, the Android device must comply with the following

- When using the NFC link in a non-hazardous area, the maximum magnetic field strength generated by the Android device is 18 [A/m (r.m.s.)] or less (Compliant with ISO / IEC 14443)
- · When using NFC link in a hazardous area, only Android devices confirmed by Yokogawa Electric Corporation can be used.
- · If additional information and approvals for Android device are required, contact a Yokogawa representative.

(3)Maintenance and Repair

# WARNING

A modification of the equipment would no longer comply with the construction described in the EU Declaration of Conformity

Only personnel authorized by Yokogawa Electric Corporation can repair the equipment

(4)Nameplate

Please refer to "Figure 2.1 Example of Nameplate" MODEL: Specified model code SUFFIX: Specified suffix code. S/N : Serial number. EUI64 : EUI64 address. TOKYO 180-8750 JAPAN: The manufacturer name and the address\*1. \*1."180-8750" is a zip code which represents the address: 2-9-32 Nakacho, Musashino-shi, Tokyo, Japan.

• In case earthing of the Base (metallic part of the enclosure) is not ensured by installation, use the screw at the side of the Base for bonding the Base to the earth point or to the equipotential bonding system.

(5)Replacing the Battery



- Do not open when an explosive atmosphere is present
- Use only battery LS14500 C5SY (SAFT)
- · Be sure to replace the battery in a safe location. Doing so in an explosive area could cause an explosion

# 8.2 IECEx Certification

#### (1)Technical Data

Caution for IECEx Intrinsically safe type.

Note 1. Model XS770A Wireless Vibration Sensor with Type S2 for potentially explosive atmospheres:

- Applicable Standards: IEC 60079-0:2017, IEC 60079-11:2011
- Certificate number: IECEx DEK 19.0072
- Ex Marking: Ex ic IIB T4 Gc
- Ambient Temperature: -20 to 80 °C (-4 to 176°F)

Note 2. Installation:

- The equipment must be installed in accordance with IEC 60079.14.
- In case earthing of the Base (metallic part of the enclosure) is not ensured by installation, use the screw at the side of the Base for bonding the Base to the earth point or to the equipotential bonding system.

# 

- Do not open when an explosive atmosphere is present.
- Use only battery LS14500 C5SY (SAFT)
- Be sure to replace the battery in a safe location. Doing so in an explosive area could cause an explosion.

(2)Operation:

# 

When using Sushi Sensor APP to intrinsically safe explosion devices, the Android device must comply with the following.

- When using the NFC link in a non-hazardous area, the maximum magnetic field strength generated by the Android device is 18 [A/m (r.m.s.)] or less (Compliant with ISO / IEC 14443).
- When using NFC link in a hazardous area, only Android devices confirmed by Yokogawa Electric Corporation can be used.
- If additional information and approvals for Android device are required, contact a Yokogawa representative.

(3)Maintenance and Repair



- Only personnel authorized by Yokogawa Electric Corporation can repair the equipment.
- A modification of the equipment would no longer comply with the construction described in the certificate documentation.

(4)Replacing the Battery



- Do not open when an explosive atmosphere is present.
- Use only battery LS14500 C5SY (SAFT)
- Be sure to replace the battery in a safe location. Doing so in an explosive area could cause an explosion.

# 8.3 FM Approval (United States)

#### (1)Technical Data

Caution for FM Nonincendive type.

- Note 1. Model XS770A Wireless Vibration Sensor with Type F1 for potentially explosive atmospheres:
- Applicable Standards: FM 3600:2018, FM 3611:2018, FM 3810:2018, ANSI/UL 121201 Ed.9 (2017), ANSI/UL 61010-1 Ed.3 (2012), NEMA 250:1991
- Certificate number: FM19US0205

## (2)Instructions (NFM039-A80)

	Yokogawa Electric Co	wa Electric Corporation Model				XS770A		
Title	Instructions							
No.	NFM039-A80	NFM039-A80 Page 01				Date	2019-05-20	
Katu	ngs: Nonincendive Class I, Division 2, Class II, Division 2, Class II, Division 1 Class I, Zone 2, Gro Temperature Class: -20 °C < Ta < +85 °	Groups ; up IIC T4						
Encl	losure: Type 4X							
	allation: allation must be in accorda s.	nce witl	n the Natio	onal Electr	ic Code	(NFPA7	0) and relevant local	
	ntenance and repair: y personnel authorized by Y	okogaw	a Electric	Corporatio	on can r	repair th	e equipment.	
Be si	lacing the Battery: ure to replace the battery i osion.	n a safe	location. I	Doing so in	an exp	losive ar	ea could cause an	
War	ning:							

A modification of the equipment would no longer comply with the construction described in the certificate documentation. DO NOT OPEN WHEN AN EXPLOSIVE ATMOSPHERE IS PRESENT USE ONLY BATTERY LS14500 CSSY (SAFT)

# 8.4 CSA Nonincendive

(1)Technical data:

- Certificate number: 80076463
- Applicable standards: C22.2 No. 213-17,
  - CAN/CSA-C22.2 No. 61010-1-12, C22.2 No. 94.2-20
- Ex marking: Nonincendive for Class I, Division 2, Groups A, B, C & D T4; Class II, Division 2, Groups F, G T4; Class III
- Ambient temperature: -35 to 85°C (-31 to 185 °F)
- Enclosure: Type 4X

## (2)Installation:

The equipment shall be installed in accordance with C22.1 and relevant local codes and requirements.



- DO NOT OPEN WHEN AN EXPLOSIVE ATMOSPHERE IS PRESENT
- NE PAS OUVRIR EN PRÉSENCE D'UNE ATMOSPHÈRE EXPLOSIVE.

(3)Maintenance and repair:

# 

- A modification of the equipment would no longer comply with the construction described in the certificate documentation
- Only personnel authorized by Yokogawa Electric Corporation can repair the equipment.

(4)Replacing the Battery:

 The battery is replaceable only in non-hazardous areas. Be sure to replace the battery in a safe location. Doing so in an explosive area could cause an explosion.



- USE ONLY BATTERY LS14500 C5SY (SAFT)
- UTILISER UNIQUEMENT UNE BATTERIE LS14500 C5SY (SAFT).

# Revision Information Title: XS770A Wireless Vibration Sensor Startup Guide

Manual No.: IM 01W06E01-01EN

F10.ai

Edition	Date	Page	Revised Item
1st	Feb. 2019		New publication
2nd June 2019		1	1.2 Add Southeast Asia area
		2	3 Revise Y-axis direction
			5 Add confirmation of firmware version
3rd	Nov. 2019	1	1.2 Add North America
		2	2 Add Conversion screw in bundled Items
		All	Delete safe symbol marks
4th	Feb. 2020	3	7.2 Device MS Code description for type
		3,4	7.1 8.1 Devise altitude description
		All	Add general type at South Korea and EU
5th	June 2020	All	Add IECEx and FM Type Code
6th	Sep. 2020	3	Add note to model and suffix codes
7th	Oct. 2020	1,2,3	Add Indonesia
8th	Dec. 2020	1,2,3 Add Brazil, Chile and Argentina	
9th	May 2021	All Add Saudi Arabia and UAE	
10th	Sep. 2021	All	Add India
			Add CSA Nonincendive
			Add Australia to AS923-1.
			Correction of words
11th	June 2022	All	Add notes.
			Add contact information of Yokogawa United
			Kingdom Ltd.
			Add regulation information of UK.
			Revise the list of area code specification.
			Delete the Control drawings in ATEX conformity.
12th	Mar. 2023	All	Add China, Vietnam, South Africa and Philippines
			to suffix codes.
			Add specifications and regulatory compliance for
			China.